Power Master XT / Power Master / Master Q4

MI 2893 / MI 2892 / MI 2885

(HW: 9.0)

Instruction manual

Version 1.1.1 Code No. 20 753 179

METREL®

Distributor:

Manufacturer:

METREL d.d.
Ljubljanska cesta 77
1354 Horjul
Slovenia

web site: http://www.metrel.si
e-mail: metrel@metrel.si

Mark on your equipment certifies that this equipment meets requirements of all subjected EU regulations.

© 2021 METREL

No part of this publication may be reproduced or utilized in any form or by any means without permission in writing from METREL.

1 Introduction **14**
1.1 Main Features **15**
1.2 Safety considerations **16**
1.3 Applicable standards **17**
1.4 Abbreviations **18**
2 Description **28**
2.1 Front panel **28**
2.2 Connector panel **29**
2.3 Bottom view **30**
2.4 Accessories **30**
2.4.1 Standard accessories 30
2.4.2 Optional accessories 30
3 Operating the instrument **31**
3.1 Instrument status bar **32**
3.2 Instrument keys **33**
3.3 Instrument memory (microSD card) **34**
3.4 Instrument Main Menu **34**
3.4.1 Instrument submenus 35
3.5 U, I, f **37**
3.5.1 Meter 37
3.5.2 Scope 39
3.5.3 Trend 41
3.5.4 Voltage and current trends 41
3.6 Power **43**
3.6.1 Meter 43
3.6.2 Trend 46
3.7 Energy **49**
3.7.1 Meter 49
3.7.2 Trend 50
3.7.3 Efficiency 51
3.8 Harmonics / inter-harmonics **53**
3.8.1 Meter 53
3.8.2 Histogram (Bar) 55
3.8.3 Harmonics Average Histogram (Avg Bar) 57
3.8.4 Trend 59
3.9 Flickers **60**
3.9.1 Meter 60
3.9.2 Trend 61
3.10 Phase Diagram **63**
3.10.1 Phase diagram 63
3.10.2 Unbalance diagram 64
3.10.3 Unbalance trend 66
3.11 Temperature **67**
3.11.1 Meter 67
3.11.2 Trend 67
3.12 Under deviation and over deviation **68**
3.12.1 Meter 68

3.12.2 Trend 69
3.13 Signalling 70
3.13.1 Meter 70
3.13.2 Trend 71
3.13.3 Table 73
3.14 General Recorder 74
3.15 Waveform/Inrush recorder 77
3.15.1 Setup 77
3.15.2 Capturing waveform 79
3.15.3 Captured waveform 81
3.16 Transient recorder 83
3.16.1 Power Master XT - MI 2893 83
3.16.1.1 Setup 83
3.16.2 Power Master/Master Q4 - MI 2892/MI 2885 86
3.16.2.1 Setup 86
3.16.3 Capturing transients 88
3.16.4 Captured transients 90
3.17 Events table 91
3.17.1 Group view ⅄ 91
3.17.2 Phase view 93
3.18 Alarms table 95
3.19 Rapid voltage changes (RVC) table 97
3.20 Memory List 98
3.20.1 General Record 102
3.20.2 Waveform snapshot 105
3.20.3 Waveform/inrush record 106
3.20.4 Transients record 106
3.21 Measurement Setup submenu 107
3.21.1 Connection setup 107
3.21.2 Event setup 113
3.21.3 Alarm setup 114
3.21.4 Signalling setup 115
3.21.5 Rapid voltage changes (RVC) setup 116
3.21.6 Measuring Methods setup 117
3.21.7 Transient setup 118
3.22 General Setup submenu 120
3.22.1 Communication 120
3.22.2 Time & Date 122
3.22.3 Time & Date 122
3.22.4 Language 123
3.22.5 Instrument info 124
3.22.6 Lock/Unlock 124
3.22.7 Colour model 126
4 Recording Practice and Instrument Connection 128
4.1 Measurement campaign 128
4.2 Connection setup 134
4.2.1 Connection to the LV Power Systems 134
4.2.2 Connection to the MV or HV Power System 139
4.2.3 Current clamp selection and transformation ratio setting 143

4.2.4 Connection check ... 147
4.2.5 Temperature probe connection ... 149
4.2.6 GPS time synchronization device connection ... 150
4.2.1 Printing support ... 151
4.3 Remote instrument connection (over Internet / Internet(3G/GPRS) / Intranet (LAN)) ... 152
4.3.1 Communication principle ... 152
4.3.2 Instrument setup on remote measurement site ... 153
4.3.3 PowerView setup for instrument remote access ... 154
4.3.4 Remote connection ... 155
4.4 Number of measured parameters and connection type relationship ... 166
5 Theory and internal operation ... 173
5.1 Measurement methods ... 173
5.1.1 Measurement aggregation over time intervals ... 173
5.1.2 Voltage measurement (magnitude of supply voltage) ... 173
5.1.3 Current measurement (magnitude of supply current) ... 174
5.1.4 Frequency measurement ... 175
5.1.5 Modern Power measurement ... 175
5.1.6 Classic Vector and Arithmetic Power measurement ... 180
5.1.7 Energy ... 183
5.1.8 Harmonics and interharmonics ... 184
5.1.9 Signalling ... 186
5.1.10 Flicker ... 186
5.1.11 Voltage and current unbalance ... 187
5.1.12 Under-deviation and over-deviation ... 188
5.1.13 Voltage events ... 188
5.1.14 Alarms ... 192
5.1.15 Rapid voltage changes (RVC) ... 193
5.1.16 Data aggregation in GENERAL RECORDING ... 194
5.1.17 Flagged data ... 197
5.1.18 Waveform snapshot ... 198
5.1.19 Waveform recorder ... 198
5.1.20 Transient recorder ... 202
5.2 EN 50160 Standard Overview ... 203
5.2.1 Power frequency ... 204
5.2.2 Supply voltage variations ... 204
5.2.3 Supply voltage unbalance ... 204
5.2.4 THD voltage and harmonics ... 204
5.2.5 Interharmonic voltage ... 205
5.2.6 Mains signalling on the supply voltage ... 205
5.2.7 Flicker severity ... 205
5.2.8 Voltage dips ... 205
5.2.9 Voltage swells ... 206
5.2.10 Short interruptions of the supply voltage ... 206
5.2.11 Long interruptions of the supply voltage ... 206
5.2.12 MI 2893/MI 2892/MI 2885 recorder setting for EN 50160 survey ... 206
6 Technical specifications ... 208
6.1 General specifications ... 208
6.2 Measurements ... 208
6.2.1 General description ... 208
6.2.2 Phase Voltages ... 210

6.2.3 Line voltages 210
6.2.4 Current 212
6.2.5 Frequency 215
6.2.6 Flickers 215
6.2.7 Transients 215
6.2.8 Combined power 216
6.2.9 Fundamental power 216
6.2.10 Nonfundamental power 217
6.2.11 Power factor (PF, PFe, PFv, PFa) 218
6.2.12 Displacement factor (DPF) or Cos ϕ) 218
6.2.13 Energy 218
6.2.14 Voltage harmonics and THD 219
6.2.15 Current harmonics, THD and k-factor 219
6.2.16 Voltage interharmonics 220
6.2.17 Current interharmonics 220
6.2.18 Signalling 221
6.2.19 Unbalance 221
6.2.20 Overdeviation and Underdeviation 221
6.2.21 Time and duration uncertainty 221
6.2.22 Temperature probe 221
6.2.23 Phase angle 222
6.2.24 400Hz systems specification 222
6.2.25 VFD (Variable frequency drive) systems specification 222
6.2.26 Differences in specification between 400Hz, VFD and 50/60 Hz systems 222

6.3 Recorders 223
6.3.1 General recorder 223
6.3.2 Waveform/inrush recorder 224
6.3.3 Waveform snapshot 224
6.3.4 Transients recorder 224

6.4 Standards compliance 225
6.4.1 Compliance to the IEC 61557-12 225
6.4.2 Compliance to the to the IEC 61000-4-30 226

7 Maintenance 227

7.1 Inserting batteries into the instrument 227

7.2 Batteries 228

7.3 Firmware upgrade 229
7.3.1 Requirements 229
7.3.2 Upgrade procedure 229

7.4 Power supply considerations 233

7.5 Cleaning 233

7.6 Periodic calibration 234

7.7 Service 234

7.8 Troubleshooting 234

8 Version of document 234

List of tables:

Table 1: MI 2893/MI 2892/MI 2885 standard accessories 30
Table 2: Instrument status bar description 32
Table 3: Shortcut Keys and other Function keys 33
Table 4: Instrument Main menu 35
Table 5: Keys in Main menu 35
Table 6: Keys in submenus 37
Table 7: Instrument screen symbols and abbreviations 38
Table 8: Keys in Meter screens 38
Table 9: Instrument screen symbols and abbreviations 40
Table 10: Keys in Scope screens 40
Table 11: Instrument screen symbols and abbreviations 42
Table 12: Keys in Trend screens 42
Table 13: Instrument screen symbols and abbreviations (see 5.1.5 for details) – instantaneous values 44
Table 14: Keys in Power (METER) screens 45
Table 15: Instrument screen symbols and abbreviations 46
Table 16: Keys in Power (TREND) screens 48
Table 17: Instrument screen symbols and abbreviations 49
Table 18: Keys in Energy (METER) screens 50
Table 19: Instrument screen symbols and abbreviations 50
Table 20: Keys in Energy (TREND) screens 51
Table 21: Instrument screen symbols and abbreviations 51
Table 22: Keys in Energy (TREND) screens 53
Table 23: Instrument screen symbols and abbreviations 54
Table 24: Keys in Harmonics / inter-harmonics (METER) screens 54
Table 25: Instrument screen symbols and abbreviations 56
Table 26: Keys in Harmonics / inter-harmonics (BAR) screens 56
Table 27: Instrument screen symbols and abbreviations 57
Table 28: Keys in Harmonics / inter-harmonics (AVG) screens 58
Table 29: Instrument screen symbols and abbreviations 59
Table 30: Keys in Harmonics / inter-harmonics (TREND) screens 59
Table 31: Instrument screen symbols and abbreviations 61
Table 32: Keys in Flickers (METER) screen 61
Table 33: Instrument screen symbols and abbreviations 62
Table 34: Keys in Flickers (TREND) screens 63
Table 35: Instrument screen symbols and abbreviations 64
Table 36: Keys in Phase diagram screen 64
Table 37: Instrument screen symbols and abbreviations 65
Table 38: Keys in Unbalance diagram screens 65
Table 39: Instrument screen symbols and abbreviations 66
Table 40: Keys in Unbalance trend screens 66
Table 41: Instrument screen symbols and abbreviations 67
Table 42: Keys in Temperature meter screen 67
Table 43: Instrument screen symbols and abbreviations 68
Table 44: Keys in Temperature trend screens 68
Table 45: Instrument screen symbols and abbreviations 69
Table 46: Keys in Under deviation and over deviation (METER) screen 69
Table 47: Instrument screen symbols and abbreviations 69
Table 48: Keys in Under deviation and Over deviation (TREND) screens 70
Table 49: Instrument screen symbols and abbreviations 71
Table 50: Keys in Signalling (METER) screen 71

Table 51: Instrument screen symbols and abbreviations 72
Table 52: Keys in Signalling (TREND) screen 72
Table 53: Instrument screen symbols and abbreviations 73
Table 54: Keys in Signalling (TABLE) screen 73
Table 55: General recorder settings description and screen symbols 74
Table 56: Keys in General recorder setup screen 76
Table 57: Waveform recorder settings description and screen symbols 77
Table 58: Keys in Waveform recorder setup screen 78
Table 59: Instrument screen symbols and abbreviations 80
Table 60: Keys in Waveform recorder capture screen 80
Table 61: Instrument screen symbols and abbreviations 81
Table 62: Keys in captured waveform recorder screens 82
Table 63: Transients on the low voltage network 83
Table 64: Transient recorder settings description and screen symbols 84
Table 65: Keys in Transient recorder setup screen 85
Table 66: Transient recorder settings description and screen symbols 86
Table 67: Keys in Transient recorder setup screen 88
Table 68: Instrument screen symbols and abbreviations 89
Table 69: Keys in Transient recorder capture screen 89
Table 70: Instrument screen symbols and abbreviations 90
Table 71: Keys in captured transient recorder screens 90
Table 72: Instrument screen symbols and abbreviations 92
Table 73: Keys in Events table group view screens 92
Table 74: Instrument screen symbols and abbreviations 94
Table 75: Keys in Events table phase view screens 94
Table 76: Instrument screen symbols and abbreviations 96
Table 77: Keys in Alarms table screens 96
Table 78: Instrument screen symbols and abbreviations 97
Table 79: Keys in RVC Events table group view screens 98
Table 80: Instrument screen symbols and abbreviations 98
Table 81: Keys in Memory list (Folder) screen 99
Table 82: Instrument screen symbols and abbreviations 100
Table 83: Keys in Memory list screen 100
Table 84: Recorder settings description 102
Table 85: Keys in General record front page screen 102
Table 86: Instrument screen symbols and abbreviations 103
Table 87: Keys in Viewing recorder U,I,f TREND screens 104
Table 88: Recorder settings description 105
Table 89: Keys in Snapshot record front page screen 105
Table 90: Description of Measurement setup options 107
Table 91: Keys in Measurement setup submenu screen 107
Table 92: Description of Connection setup 108
Table 93: Keys in Connection setup menu 112
Table 94: Description of Event setup 113
Table 95: Keys in Event setup screen 113
Table 96: Description of Alarm setup 114
Table 97: Keys in Alarm setup screens 115
Table 98: Description of Signalling setup 116
Table 99: Keys in Signalling setup screen 116
Table 100: Description of RVC setup 117
Table 101: Keys in RVC setup screen 117
Table 102: Description of Measuring Methods setup 118

Table 103: Keys in Measuring Methods setup screen 118
Table 104: Description of Transient setup 119
Table 105: Description of General setup options 120
Table 106: Keys in General setup submenu 120
Table 107: Description of Communication setup options 121
Table 108: Keys in Communication setup 122
Table 109: Description of Set date/time screen 122
Table 110: Keys in Set date/time screen 123
Table 111: Keys in Language setup screen 123
Table 112: Keys in Instrument info screen 124
Table 113: Description of Lock/Unlock screen 125
Table 114: Keys in Lock/Unlock screen 125
Table 115: Locked instrument functionality 125
Table 116: Keys in Colour model screens 126
Table 117: Keys in Smart clamps pop up window 146
Table 118: Connection check description and screen symbols 147
Table 119: Keys in Connection check screen 149
Table 120: GPS functionality 150
Table 121: Keys in Set time zone screen 150
Table 122: DPU 414 Dip switches settings are shown on table below: 152
Table 123: Internet setup parameters 154
Table 124: Internet status bar icons 154
Table 125: Instrument selection form parameters 155
Table 126: Quantities measured by instrument 166
Table 127: Quantities recorded by instrument (Standard Profile) 168
Table 128: Quantities recorded by instrument (Limited Profile) 171
Table 129: Summary and grouping of the phase power quantities 176
Table 130: Power summary and grouping of the total power quantities 176
Table 131: Summary and grouping of the phase power quantities 180
Table 132: Power summary and grouping of the total power quantities 181
Table 133: Alarm definition parameters 192
Table 134: Alarm signatures 193
Table 135: Data aggregation methods 195
Table 136: EN 50160 standard LV limits (continuous phenomena) 203
Table 137: Values of individual harmonic voltages at the supply 204
Table 138:Voltage dips classification 206
Table 139:Voltage swell classification 206
Table 140: General recording max. duration 223

List of Figures:

Figure 1: Power Master XT instrument....14
Figure 2: Front plates and marking labels....15
Figure 3: Front panel....28
Figure 4:Top connector panel....29
Figure 5: Side connector panel....29
Figure 6: Bottom view....30
Figure 7: Display symbols and keys description....31
Figure 8: Common display symbols and labels during measurement campaign....31
Figure 9: Instrument status bar....32
Figure 10: Inserting microSD card....34
Figure 11: “MAIN MENU”....35
Figure 12: Measurements submenu....36
Figure 13: Recorders submenu....36
Figure 14: Measurement setup submenu....36
Figure 15: General setup submenu....36
Figure 16: U, I, f meter phase table screens (L1, L2, L3, N)....37
Figure 17: U, I, f meter summary table screens....38
Figure 18: Voltage only waveform....39
Figure 19: Current only waveform....39
Figure 20: Voltage and current waveform (single mode)....39
Figure 21: Voltage and current waveform (dual mode)....39
Figure 22: Voltage trend (all voltages)....41
Figure 23: Voltage trend (single voltage)....41
Figure 24: Voltage and current trend (single mode)....41
Figure 25: Voltage and current trend (dual mode)....41
Figure 26: Trends of all currents....41
Figure 27: Frequency trend....41
Figure 28: Power measurements summary (combined)....43
Figure 29: Power measurements summary (nonfundamental)....43
Figure 30: Power measurements summary (fundamental)....43
Figure 31: Detailed power measurements at phase L1....44
Figure 32: Detailed total power measurements....44
Figure 33: Power trend screen....46
Figure 34: Energy counters screen....49
Figure 35: Energy trend screen....50
Figure 36: Energy efficiency screen....51
Figure 37: Harmonics and inter-harmonics (METER) screens....54
Figure 38: Phase harmonics presentation (U,I,P)....54
Figure 39: Harmonics histogram screen....56
Figure 40: Harmonics average histogram screen....57
Figure 41: Harmonics and inter-harmonics trend screen....59
Figure 42: Flickers table screen....61
Figure 43: Flickers trend screen....62
Figure 44: Phase diagram screen....64
Figure 45: Unbalance diagram screen....65
Figure 46: Symmetry trend screen....66
Figure 47: Temperature meter screen....67
Figure 48: Temperature trend screen....68
Figure 49: Under deviation and over deviation table screen....68
Figure 50: Under-deviation and over-deviation TREND screen....69

Figure 51: Signalling meter screen 71
Figure 52: Signalling trend screen 72
Figure 53: Signalling table screen 73
Figure 54: General recorder setup screen 74
Figure 55: Triggering in waveform record 77
Figure 56: Waveform recorder setup screen 77
Figure 57: Waveform recorder capture screen 79
Figure 58: Waveform recorder screen 80
Figure 59: Waveform recorder scope screen 80
Figure 60: Captured waveform recorder screen 81
Figure 61: Transient recorder setup screen – MI 2893 84
Figure 62: Transient recorder setup screen – MI 2892/MI 2885 86
Figure 63: Transient recorder capture screen (waiting phase/recording) – MI 2893 88
Figure 64: Transient recorder capture screen (waiting phase/recording) – MI 2892/MI 2885 89
Figure 65: Captured transient recorder screen 90
Figure 66: Voltage events in group view screen 91
Figure 67: Voltage event in detail view screen 92
Figure 68: Voltage events screens 94
Figure 69: Alarms list screen 96
Figure 70: RVC Events table group view screen 97
Figure 71: Memory list screen (Folder structure) 98
Figure 72: Memory list screen (Recorder data) 100
Figure 73: Front page of General record in MEMORY LIST menu 102
Figure 74: Viewing recorder U,I,f TREND data 103
Figure 75: Front page of Snapshot in MEMORY LIST menu 105
Figure 76: U,I,f meter screen in recalled snapshot record 106
Figure 77: MEASUREMENT SETUP submenu 107
Figure 78: “CONNECTION SETUP” screen 108
Figure 79: Event setup screen 113
Figure 80: Alarm setup screens 114
Figure 81: Signalling setup screen 116
Figure 82: RVC setup screen 117
Figure 83: Measuring Methods setup screen – MI 2893 117
Figure 84: Measuring Methods setup screen – MI 2892/MI 2885 118
Figure 85: Transient setup screen – MI 2893 119
Figure 86: Transient setup screen – MI 2892/MI 2885 119
Figure 87: GENERAL SETUP submenu 120
Figure 88: Communication setup screen 121
Figure 89: Set date/time screen 122
Figure 90: Language setup screen 123
Figure 91: Instrument info screen – MI 2893 124
Figure 92: Instrument info screen – MI 2892/MI 2885 124
Figure 93: Lock/Unlock screen 125
Figure 94: Locked instrument screen 126
Figure 95: Colour representation of phase voltages 126
Figure 96: Recommended measurement practice 131
Figure 97: Connection setup menu 134
Figure 98: Choosing 3-phase 4-wire system on instrument 134
Figure 99: 3-phase 4-wire system 135
Figure 100: Choosing 3-phase 3-wire system on instrument 135
Figure 101: 3-phase 3-wire system 135
Figure 102: Choosing Open Delta (Aaron) 3-wire system on instrument 136

Figure 103: Open Delta (Aaron) 3-wire system 136
Figure 104: Choosing 1-phase 3-wire system on instrument 136
Figure 105: 1-phase 3-wire system 137
Figure 106: Choosing 2-phase 4-wire system on instrument 137
Figure 107: 2-phase 4-wire system 138
Figure 108: Choosing single- phase Inverter system on instrument 138
Figure 109: Single – phase inverter system 138
Figure 110: Choosing three- phase Inverter system on instrument 139
Figure 111: Three – phase inverter system 139
Figure 112: Voltage ratio for 11 kV / 110 transformer example 140
Figure 113: Connecting instrument to the existing current transformers in medium voltage system (Aaron / OpenDelta) 140
Figure 114: Connecting instrument to the existing current transformers in medium voltage system (Delta – Delta) 141
Figure 115: Connecting instrument to the existing current transformers in medium voltage system (Delta – Star) 141
Figure 116: Connecting instrument to the existing current transformers in medium voltage system (Star – Star) 142
Figure 117: Connecting instrument to the existing current transformers in medium voltage system (star – delta) 142
Figure 118: Smart current clamps auto range selection 143
Figure 119: Parallel feeding of large load 144
Figure 120: Current clamps selection for indirect current measurement 145
Figure 121: Selecting 10% of current clamps range 145
Figure 122: Automatically recognised clamps setup 146
Figure 123: Automatically recognised clamps status 146
Figure 124: Set time zone screen 150
Figure 125: Connecting printer DPU 414 with instrument 151
Figure 126: SCOPE screen print 151
Figure 127: Schematic view on the remote measurements 153
Figure 128: Internet connection setup screen 154
Figure 129: PowerView v3.0 remote connection settings form 155
Figure 130: PowerView v3.0 remote connection monitor 156
Figure 131: PowerView connection to LAN and Metrel Server established (Steps 1 & 2) 157
Figure 132: Remote instrument connection to Metrel Server established (Step 3) 158
Figure 133: Remote instrument connection to PowerView v3.0 established (Step 4) 159
Figure 134: Active connection indication 159
Figure 135: Remote connection icon 160
Figure 136: Detection of the instrument type 160
Figure 137: Selecting records from a list for download 161
Figure 138: Real time scope window in remote connection, with several channels selected 162
Figure 139: Remote Instrument Configuration form 163
Figure 140: Remote Recorder configuration 164
Figure 141: Recording in progress 165
Figure 142: Phase and Phase-to-phase (line) voltage 174
Figure 143: IEEE 1459 phase power measurement organisation (phase) 175
Figure 144: IEEE 1459 phase power measurement organisation (totals) 176
Figure 145: Vector representation of total power calculus 180
Figure 146: Arithmetic representation of total power calculus 180
Figure 147: Energy counters and quadrant relationship 183
Figure 148: Instrument energy counters 184
Figure 149: Current and voltage harmonics 184

Figure 150: Illustration of harmonics / interharmonics subgroup for 50 Hz supply 186
Figure 151: Voltage fluctuation 187
Figure 152:$U_{Rms(1/2)}$ 1-cycle measurement 189
Figure 153: Voltage events definition 189
Figure 154:Voltage dip related screens on the instrument 190
Figure 155:Voltage interrupts related screens on the instrument 192
Figure 156: RVC event description 193
Figure 157: Synchronization and aggregation of 10/12 cycle intervals 194
Figure 158: Avg vs. Avgon, switching load current 196
Figure 159: Consumed/generated and inductive/capacitive phase/polarity diagram 197
Figure 160: Flagging data indicate that aggregated value might be unreliable 198
Figure 161: Triggering and pre-triggering description 199
Figure 162: Voltage Event Triggering 200
Figure 163: Voltage Level Triggering 200
Figure 164: Current Level Triggering (Inrush) 201
Figure 165: Waveform recorder setup for triggering on voltage events 201
Figure 166: Level triggering 202
Figure 167: Triggering slope 202
Figure 168: Transients trigger detection (envelope) 203
Figure 169: Transients trigger detection (level) 203
Figure 170: Mains signalling voltage level limits according to EN50160 205
Figure 171: Predefined EN50160 recorder configuration 207
Figure 172: Battery compartment 227
Figure 173: Closing the battery compartment cover 228
Figure 174: PowerView update function 229
Figure 175: Selecting USB communication 230
Figure 176: Check for Firmware menu 230
Figure 177: Check for Firmware menu 230
Figure 178: New firmware is available for download 231
Figure 179: FlashMe firmware upgrade software 231
Figure 180: FlashMe configuration screen 232
Figure 181: FlashMe programming screen 233

1 Introduction

MI 2893/MI 2892/MI 2885 are handheld multifunction instrument for power quality analysis, high speed transient capturing (MI 2893), transient capturing (MI 2892/MI 2885) and troubleshooting as well as energy efficiency measurements.

Figure 1: Power Master XT instrument

Product differentiation:
MI 2893/2892/2885 sharing same measuring hardware and firmware platform.

MI 2893 – Class A Power Quality analyser with additional transient measuring board with sampling period 1 MHz
MI 2892 - Class A Power Quality analyser with transient measurement on measuring board with sampling period 49 kHz
MI 2885 - Class S specified Power Quality analyser with transient measurement on measuring board with sampling period 49 kHz

Note:
The appearance of the product is outwardly the same. The only differences are in the marking labels and the front plates.

Figure 2: Front plates and marking labels

1.1 Main Features

- Full compliance with power quality standard IEC 61000-4-30 Class A **(MI 2893/MI 2892)**
- Full compliance with power quality standard IEC 61000-4-30 Class S **(MI 2885)**
- Simple and powerful recorder with microSD memory card (sizes up to 32 GB are supported).
- 4 voltage channels with wide measurement range: up to 1000 Vrms, CAT III / 1000 V, with support for medium and high voltage systems.
- Simultaneous voltage and current (8 channels) sampling, 16-bit AD conversion for accurate power measurements and minimal phase shift error.
- 4 current channels with support for automatic clamp recognition and automatic range selection.
- Compliance with IEC 61557-12 and IEEE 1459 (Combined, fundamental, nonfundamental power) and IEC 62053-21 (Energy).
- High speed transient sampling > 1MSamples/sec simultaneously on all 8 channels (4xU & 4xI) **(MI 2893)**
- Transient selection between N /GND **(MI 2893)**
- Transient recorder with envelope or level triggering, with sampling frequency 49 kHz **(MI 2892 /MI 2885)**
- 4.3’’ TFT colour display.
- Waveform/inrush recorder, which can be triggered on Event/Alarms/Level U/Level I/Interval; transient recorder for phase/neutral lines (voltage and current simultaneously) with level and envelope trigger selection run simultaneously with general recorder.

- Support for 50Hz, 60Hz, 400Hz system frequency and direct VFD (variable frequency drives) measurement
- PC Software **PowerView v3.0** is an integral part of a measuring system which provides easiest way to download, view and analyse measured data or print reports.
    - PowerView v3.0 analyser exposes a simple but powerful interface for downloading instrument data and getting quick, intuitive and descriptive analysis. Interface has been organized to allow quick selection of data using a Windows Explorer-like tree view.
    - User can easily download recorded data, and organize it into multiple sites with many sub-sites or locations.
    - Generate charts, tables and graphs for your power quality data analysing, and create professional printed reports.
    - Export or copy / paste data to other applications (e.g. spreadsheet) for further analysis.
    - Multiple data records can be displayed and analysed simultaneously.
    - Merge different logging data into one measurement, synchronize data recorded with different instruments with time offsets, split logging data into multiple measurements, or extract data of interest.
    - Instrument remote access over internet connection.

1.2 Safety considerations

To ensure operator safety while using the MI 2893/MI 2892/MI 2885 instruments and to minimize the risk of damage to the instrument, please note the following general warnings:

⚠ **The instrument has been designed to ensure maximum operator safety. Usage in a way other than specified in this manual may increase the risk of harm to the operator!**

⚠ **Do not use the instrument and/or accessories if any visible damage is noticed!**

⚠ **The instrument contains no user serviceable parts. Only an authorized dealer can carry out service or adjustment!**

⚠ **All normal safety precautions have to be taken in order to avoid risk of electric shock when working on electrical installations!**

⚠ **Only use approved accessories which are available from your distributor!**

⚠ **Instrument contains rechargeable NiMH batteries. The batteries should only be replaced with the same type as defined on the battery placement label or in this manual. Do not use standard batteries while power supply adapter/charger is connected, otherwise they may explode!**

⚠ **Hazardous voltages exist inside the instrument. Disconnect all test leads, remove the power supply cable and switch off the instrument before removing battery compartment cover.**

⚠ **Maximum nominal voltage between any phase and neutral input is 1000 V_{RMS}. Maximum nominal voltage between phases is 1730 V_{RMS}.**

⚠ **Always short unused voltage inputs (L1, L2, L3, GND) with neutral (N) input to prevent measurement errors and false event triggering due to noise coupling.**

⚠ **Do not remove microSD memory card while instrument is recording or reading data. Record**

damage and card failure can occur.

1.3 Applicable standards

The MI 2893/MI 2892/MI 2885 are designed and tested in accordance with the following standards:

Electromagnetic compatibility (EMC)	
EN 61326-2-2: 2013	Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 2-2: Particular requirements - Test configurations, operational conditions and performance criteria for portable test, measuring and monitoring equipment used in low-voltage distribution systems • Emission: Class A equipment (for industrial purposes) • Immunity for equipment intended for use in industrial locations
Safety (LVD)	
EN 61010-1: 2010	Safety requirements for electrical equipment for measurement, control and laboratory use – Part 1: General requirements
EN 61010-2-030: 2017	Safety requirements for electrical equipment for measurement, control and laboratory use – Part 2-030: Particular requirements for testing and measuring circuits
EN 61010-031: 2015	Safety requirements for electrical equipment for measurement, control and laboratory use – Part 031: Safety requirements for hand-held probe assemblies for electrical measurement and test
EN 61010-2-032: 2012	Safety requirements for electrical equipment for measurement, control and laboratory use Part 032: Particular requirements for hand-held and hand-manipulated current sensors for electrical test and measurement
Measurement methods	
IEC 61000-4-30: 2015 Class A	Part 4-30: Testing and measurement techniques – Power quality measurement methods
IEC 61557-12: 2018	Equipment for testing, measuring or monitoring of protective measures – Part 12: Performance measuring and monitoring devices (PMD)
IEC 61000-4-7: 2002 + A1: 2008	Part 4-7: Testing and measurement techniques –General guide on harmonics and inter-harmonics measurements and instrumentation for power supply systems and equipment connected thereto
IEC 61000-4-15: 2010/ISH1:2017	Part 4-15: Testing and measurement techniques –Flicker meter – Functional and design specifications
IEC 62053-21: 2003	Part 21: Static meters for active energy (Class 1)
IEC 62053-23: 2003	Part 23: Static meters for reactive energy (Class 2)
IEEE 1459: 2010	IEEE Standard Definitions for the Measurement of Electric Power Quantities Under Sinusoidal, Non-sinusoidal,

	Balanced, or Unbalanced Conditions
EN 50160: 2010	Voltage characteristics of electricity supplied by public electricity networks
GOST R 54149: 2010	Electric energy. Electromagnetic compatibility of technical equipment. Power quality limits in the public power supply systems

Note about EN and IEC standards:
Text of this manual contains references to European standards. All standards of EN 6XXXX (e.g. EN 61010) series are equivalent to IEC standards with the same number (e.g. IEC 61010) and differ only in amended parts required by European harmonization procedure.

1.4 Abbreviations

In this document following symbols and abbreviations are used:

CF_I	Current crest factor, including CF_{Ip} (phase p current crest factor) and CF_{IN} (neutral current crest factor). See 5.1.3 for definition.
CF_U	Voltage crest factor, including CF_{Upg} (phase p to phase g voltage crest factor) and CF_{Up} (phase p to neutral voltage crest factor). See 5.1.2 for definition.
$\pm DPF_{ind/cap}$	Instantaneous phase power displacement (fundamental) power factor or cos φ, including $\pm DPFp_{ind}$ (phase p power displacement). Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character.
$DPF_{ind/cap}^{\pm}$	Recorded phase displacement (fundamental) power factor or cos φ, including $DPFp_{ind/cap}^{\pm}$ (phase p power displacement). Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/ capacitive character. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition. 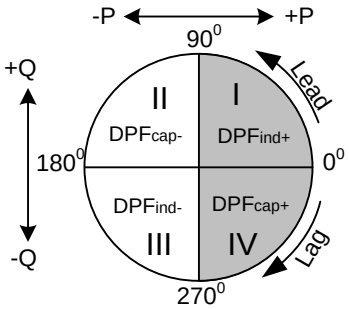
$\pm DPFa_{totind}$ $\pm DPFa_{totcap}$	Instantaneous total arithmetic displacement (fundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. See 5.1.6 for definition.
$DPFa_{totind}^{\pm}$ $DPFa_{totcap}^{\pm}$	Recorded total arithmetic fundamental power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. This parameter is recorded separately as 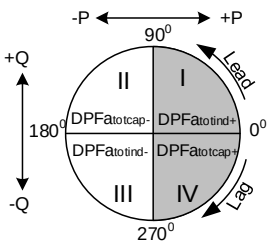

	shown on figure. See 5.1.6 for definition.
$\pm DPFv_{totind}$ $\pm DPFv_{totcap}$	Instantaneous positive sequence total vector displacement (fundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. See 5.1.6 for definition.
$DPFv_{totind}^{\pm}$ $DPFv_{totcap}^{\pm}$	Recorded total vector fundamental power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. This parameter is recorded separately as shown on figure. See 5.1.6 for definition. 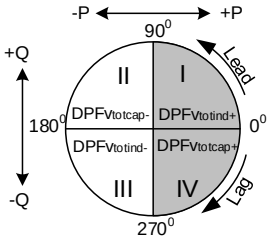
$\pm DPF^{+}_{totind}$ $\pm DPF^{+}_{totcap}$	Instantaneous positive sequence fundamental power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. See 5.1.5 for definition.
$DPF^{+}_{totind}^{\pm}$ $DPF^{+}_{totcap}^{\pm}$	Recorded total positive sequence fundamental power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. This parameter is recorded separately as shown on figure. See 5.1.5 for definition. 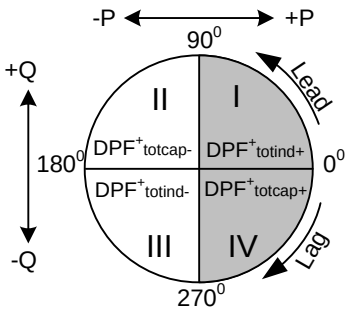
D_I	*Phase current distortion power, including D_{Ip} (phase p current distortion power). See 5.1.5 section: Modern Power measurement* *Standard compliance: IEEE 1459-2010 for definition.*
De_I	*Total effective current distortion power. See 5.1.5 section: Modern Power measurement* *Standard compliance: IEEE 1459-2010 for definition.*
D_H	*Phase harmonics distortion power, including DHp (phase p harmonics distortion power). See 5.1.5 section: Modern Power measurement* *Standard compliance: IEEE 1459-2010 for definition.*
De_H	Total effective harmonics distortion power. See 5.1.5 section: Total nonfundamental power measurements for definition.
D_V	*Phase voltage distortion power, including Dvp (phase p voltage distortion power). See 5.1.5 section: Modern Power measurement* *Standard compliance: IEEE 1459-2010 for definition.*
Devtot	*Total effective voltage distortion power. See 5.1.5 section: Modern*

	Power measurement *Standard compliance: IEEE 1459-2010 for definition.*
$Ep^{\pm}$	Recorded phase combined (fundamental and nonfundamental) active energy, including $Ep_p^{+/-}$ (phase p active energy). Minus sign indicates generated energy and plus sign indicates consumed energy. See 5.1.6 for definition.
$Ep_{tot}^{\pm}$	Recorded total combined (fundamental and nonfundamental) active energy. Minus sign indicates generated and plus sign indicates consumed energy. See 5.1.6 for definition.
$Eq^{\pm}$	Recorded phase fundamental reactive energy, including $Eq_p^{+/-}$ (phase p reactive energy). Minus sign indicates generated and plus sign indicates consumed energy. See 5.1.6 for definition.
$Eq_{tot}^{\pm}$	Recorded total fundamental reactive energy. Minus sign indicates generated and plus sign indicates consumed energy. See 5.1.6 for definition.
Eff_{inv}	Photovoltaic inverter efficiency
f, freq	Frequency, including $freq_{U12}$ (voltage frequency on U_{12}), $freq_{U1}$ (voltage frequency on U_1 and $freq_{I1}$ (current frequency on I_1). See 5.1.4 for definition.
i^-	Negative sequence current ratio (%). See 5.1.11 for definition.
i^0	Zero sequence current ratio (%). See 5.1.11 for definition.
I^+	Positive sequence current component on three phase systems. See 5.1.11 for definition.
I^-	Negative sequence current component on three phase systems. See 5.1.11 for definition.
I^0	Zero sequence current components on three phase systems. See 5.1.11 for definition.
$I_{Rms(1/2)}$	RMS current measured over 1 cycle, commencing at a fundamental zero crossing on an associated voltage channel, and refreshed each half-cycle, including $I_{pRms(1/2)}$ (phase p current), $I_{NRms(1/2)}$ (neutral RMS current)
Ifund	Fundamental RMS current Ih_1 (on 1st harmonics), including $Ifund_p$ (phase p fundamental RMS current) and $Ifund_N$ (neutral RMS fundamental current). See 5.1.8 for definition
Ih_n	n^{th} current RMS harmonic component including I_ph_n (phase p; n^{th} RMS current harmonic component) and I_Nh_n (neutral n^{th} RMS current harmonic component). See 5.1.8 for definition
Iih_n	n^{th} current RMS inter-harmonic component including I_pih_n (phase p; n^{th} RMS current inter-harmonic component) and I_Nih_n (neutral n^{th} RMS current inter-harmonic component). See 5.1.8 for definition
I_{Nom}	Nominal current. Current of clamp-on current sensor for 1 Vrms at output.
I_{Pk}	Peak current, including I_{pPk} (phase p current) including I_{NPk} (neutral peak current)

I_{Rms}	RMS current, including I_{pRms} (phase p current), I_{NRms} (neutral RMS current). See 5.1.3 for definition.
I_{rmsinv}	Photovoltaic inverter RMS current
I_{acinv}	Photovoltaic inverter AC current
I_{dcinv}	Photovoltaic inverter DC current
$\pm P$	Instantaneous phase active combined (fundamental and nonfundamental) power, including $\pm P_p$ (phase p active power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. 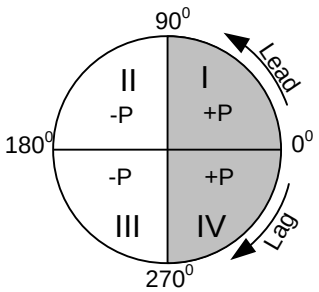
$P^{\pm}$	Recorded phase active (fundamental and nonfundamental) power, including $P_p^{\pm}$ (phase p active power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$\pm P_{tot}$	Instantaneous total active combined (fundamental and nonfundamental) power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. 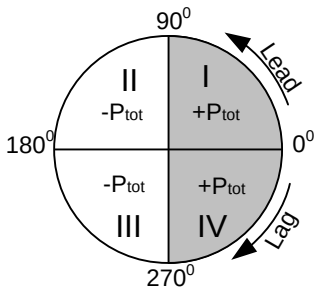
$P_{tot}^{\pm}$	Recorded total active (fundamental and nonfundamental) power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$\pm Pfund$	Instantaneous active fundamental power, including $\pm Pfund_p$ (phase p active fundamental power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$Pfund^{+}$	Recorded phase active fundamental power, including $Pfund_p^{\pm}$ (phase p active fundamental power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$\pm P^{+}$, $\pm P^{+}_{tot}$	Instantaneous positive sequence of total active fundamental power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$P^{+}_{tot}{}^{\pm}$	Recorded positive sequence of total active fundamental power. Minus sign indicates generated and plus sign indicates positive sequence of consumed power. See 5.1.5 for definitions.
$\pm P_H$	Instantaneous phase active harmonic power, including $\pm P_{Hp}$ (phase p active harmonic power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.

$P_H^{\pm}$	Recorded phase active harmonics power, including $P_{Hp}^{\pm}$(phase p active harmonic power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$\pm P_{Htot}$	Instantaneous total active harmonic power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions.
$P_{Htot}^{\pm}$	Recorded total active harmonics power. Minus sign indicates generated and plus sign indicates consumed active power. See 5.1.5 for definitions.
$\pm PF_{ind}$ $\pm PF_{cap}$	Instantaneous phase combined (fundamental and nonfundamental) power factor, including $\pm PF_{p\,ind/cap}$ (phase p power factor). Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. Note: PF = DPF when harmonics are not present. See 5.1.5 for definition. 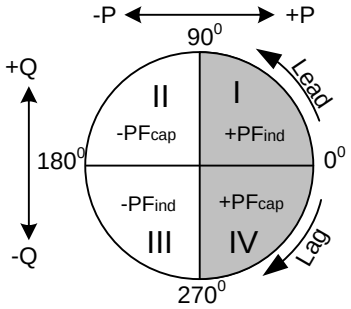
$PF_{ind}^{\pm}$ $PF_{cap}^{\pm}$	Recorded phase combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/ capacitive character. This parameter is recorded separately for each quadrant as shown on figure. 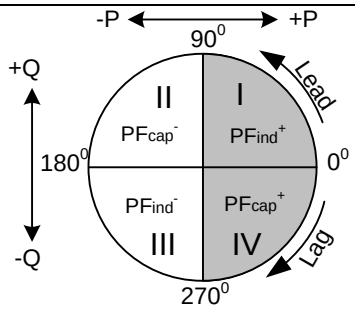
$\pm PFa_{totind}$ $\pm PFa_{totcap}$	Instantaneous total arithmetic combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. See 5.1.6 for definition.
$PFa_{totind}^{\pm}$ $PFa_{totcap}^{\pm}$	Recorded total arithmetic combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. This parameter is recorded separately for each quadrant as shown on figure. 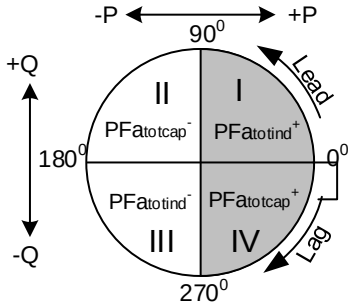
$\pm PFe_{totind}$ $\pm PFe_{totcap}$	Instantaneous total effective combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates

	consumed power. Suffix *ind/cap* represents inductive/capacitive character. See 5.1.5 for definition.
$PFe_{totind}^{\pm}$ $PFe_{totcap}^{\pm}$	Recorded total effective combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. This parameter is recorded separately for each quadrant as shown on figure. 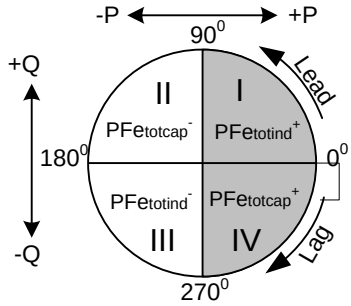
$\pm PFv_{totind}$ $\pm PFv_{totcap}$	Instantaneous total vector combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. See 5.1.6 for definition.
$PFv_{totind}^{\pm}$ $PFv_{totcap}^{\pm}$	Recorded total vector combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix *ind/cap* represents inductive/capacitive character. This parameter is recorded separately for each quadrant as shown on figure. 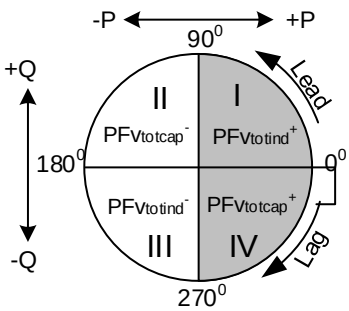
P_{inv+}	Photovoltaic inverter Active Power positive
P_{inv-}	Photovoltaic inverter Active Power negative
P_{dcinv+}	Photovoltaic inverter Active Power DC positive
P_{dcinv-}	Photovoltaic inverter Active Power DC negative
S_{acinv+}	Photovoltaic inverter Apparent Power AC positive
S_{acinv-}	Photovoltaic inverter Apparent Power AC negative
P_{lt}	Phase long term flicker (2 hours), including P_{ltpg} (phase p to phase g long term voltage flicker) and P_{ltp} (phase p to neutral long-term voltage flicker). See 5.1.10 for definition.
P_{st}	Short term flicker (10 minutes) including P_{stpg} (phase p to phase g short term voltage flicker) and P_{stp} (phase p to neutral voltage flicker). See 5.1.10 for definition.
$P_{st(1min)}$	Short term flicker (1 minute) including $P_{st(1min)pg}$ (phase p to phase g short term voltage flicker) and $P_{st(1min)p}$ (phase p to neutral voltage flicker). See 5.1.10 for definition.
P_{inst}	Instantaneous flicker including P_{instpg} (phase p to phase g instantaneous voltage flicker) and P_{instp} (phase p to instantaneous voltage flicker). See 5.1.10 for definition.

$\pm N$	Instantaneous combined (fundamental and nonfundamental) nonactive phase power including $\pm N_p$ (phase p nonactive phase power). Minus sign indicates generated and plus sign indicate consumed nonactive power. See 5.1.5 for definition.
$N_{ind}^{\pm}$ $N_{cap}^{\pm}$	Recorded phase combined (fundamental and nonfundamental) nonactive power including $N_{cap/ind}p$ (phase p nonactive phase power). Suffix *ind/cap* represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition. 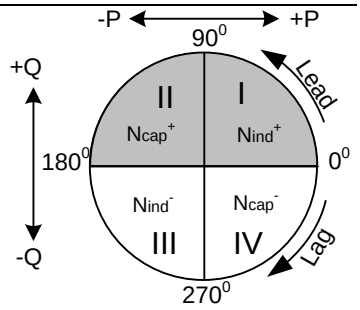
$\pm N_{tot}$	Instantaneous combined (fundamental and nonfundamental) nonactive total vector power. Minus sign indicates generated and plus sign indicate consumed nonactive power. See 5.1.5 for definition.
$N_{totind}^{\pm}$ $N_{totcap}^{\pm}$	Recorded total vector combined (fundamental and nonfundamental) nonactive power. Suffix *ind/cap* represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed combined nonactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition. 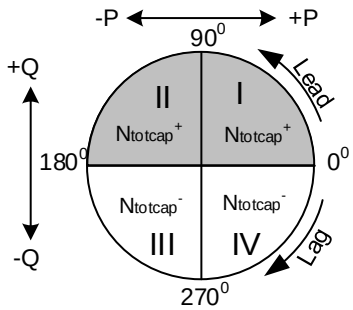
$\pm Na_{tot}$	Instantaneous combined (fundamental and nonfundamental) nonactive total arithmetic power. Minus sign indicates generated and plus sign indicate consumed nonactive power. See 5.1.6 for definition.
$Na_{totind}^{\pm}$ $Na_{totcap}^{\pm}$	Recorded total arithmetic combined (fundamental and nonfundamental) nonactive power. Minus sign indicates generated and plus sign indicates consumed combined nonactive power. This parameter is recorded separately for generated and consumed nonactive power.
$\pm Qfund$	Instantaneous fundamental reactive phase power including $\pm Q_p$ (phase p reactive phase power). Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. See 5.1.5 for definition.

$Qfund_{ind}^{\pm}$ $Qfund_{cap}^{\pm}$	Recorded phase fundamental reactive power. Suffix *ind/cap* represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition. 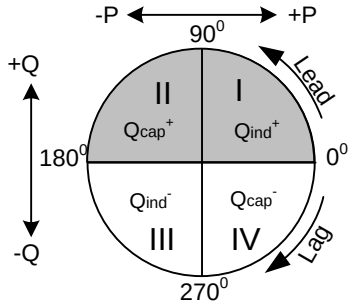
$\pm Qvfund_{tot}$	Instantaneous fundamental total vector reactive power. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. See 5.1.6 for definition.
$Qvfund_{totind}^{\pm}$ $Qvfund_{totcap}^{\pm}$	Recorded total fundamental vector reactive power. Suffix *ind/cap* represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.6 for definition. 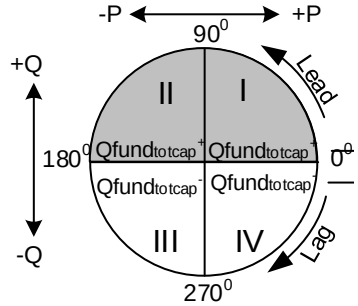
$Qafund_{tot}$	Instantaneous fundamental total arithmetic reactive power. See 5.1.6 for definition.
$Qafund_{tot}$ $Qafund_{tot}$	Recorded fundamental total arithmetic reactive power. See 5.1.6 for definition.
$\pm Q^{+}_{totcap}$ $\pm Q^{+}_{totind}$	Instantaneous positive sequence of total fundamental reactive power. Suffix *ind/cap* represents inductive/ capacitive character. Minus sign indicates generated and plus sign indicates consumed reactive power. See 5.1.5 for definition.
$Q^{+}_{totind}{}^{\pm}$ $Q^{+}_{totcap}{}^{\pm}$	Recorded positive sequence of total fundamental reactive power. Suffix *ind/cap* represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed reactive power. This parameter is recorded separately for each quadrant.
S	Combined (fundamental and nonfundamental) phase apparent power including S_p (phase p apparent power). See 5.1.5 for definition.
Sa_{tot}	Combined (fundamental and nonfundamental) total arithmetic apparent power. See 5.1.6 for definition.
Se_{tot}	Combined (fundamental and nonfundamental) total effective apparent power. See 5.1.5 for definition.
Sv_{tot}	Combined (fundamental and nonfundamental) total vector apparent power. See 5.1.6 for definition.
$Sfund$	Phase fundamental apparent power, including $Sfund_p$ (phase p

	fundamental apparent power). See 5.1.5 for definition.
$Safund_{tot}$	Fundamental total arithmetic apparent power. See 5.1.6 for definition.
$Svfund_{tot}$	Fundamental total vector apparent power. See 5.1.6 for definition.
S^{+}_{tot}	Positive sequence of total fundamental apparent power. See 5.1.5 for definition.
$Sufund_{tot}$	Unbalanced fundamental apparent power. See 5.1.5 for definition.
S_N	Phase nonfundamental apparent power, including S_{Np} (phase p nonfundamental apparent power). See 5.1.5 for definition.
Se_N	Total nonfundamental effective apparent power. See 5.1.5 for definition.
S_H	Phase harmonic apparent power, including S_{Hp} (phase p harmonic apparent power). See 5.1.5 for definition.
$Se_{H_{tot}}$	Total harmonic effective apparent power. See 5.1.5 for definition.
THD_I	Total harmonic distortion current (in % or A), including THD_{Ip} (phase p current THD) and THD_{IN} (neutral current THD). See 5.1.8 for definition
THD_U	Total harmonic distortion voltage related (in % or V) including THD_{Upg} (phase p to phase g voltage THD) and THD_{Up} (phase p to neutral voltage THD). See 5.1.11 for definition.
u^{-}	Negative sequence voltage ratio (%). See 5.1.11 for definition.
u^{0}	Zero sequence voltage ratio (%). See 5.1.11 for definition.
U, U_{Rms}	RMS voltage, including U_{pg} (phase p to phase g voltage) and U_p (phase p to neutral voltage). See 5.1.2 for definition.
U_{rmsinv}	Photovoltaic inverter RMS voltage
U_{acinv}	Photovoltaic inverter AC voltage
U_{dcinv}	Photovoltaic inverter DC voltage
U^{+}	Positive sequence voltage component on three phase systems. See 5.1.11 for definition.
U^{-}	Negative sequence voltage component on three phase systems. See 5.1.11 for definition.
U^{0}	Zero sequence voltage component on three phase systems. See 5.1.11 for definition.
U_{Dip}	Minimal $U_{Rms(1/2)}$ voltage measured during dip occurrence
$Ufund$	Fundamental RMS voltage (Uh_1 on 1st harmonics), including $Ufund_{pg}$ (phase p to phase g fundamental RMS voltage) and $Ufund_p$ (phase p to neutral fundamental RMS voltage). See 5.1.8 for definition
Uh_N,	n^{th} voltage RMS harmonic component including $U_{pg}h_N$ (phase p to phase g voltage n^{th} RMS harmonic component) and U_ph_N (phase p to neutral voltage n^{th} RMS harmonic component). See 5.1.8 for definition.
Uih_N	n^{th} voltage RMS interharmonic voltage component including $U_{pg}ih_N$

	(phase p to phase g voltage nth RMS interharmonic component) and $U_p ih_N$ (phase p to neutral voltage nth RMS interharmonic component). See 5.1.8 for definition.
U_{Int}	Minimal $U_{Rms(1/2)}$ voltage measured during interrupt occurrence.
U_{Nom}	Nominal voltage, normally a voltage by which network is designated or identified.
U_{Over}	Voltage over-deviation, difference between the measured value and the nominal value of a voltage, only when the measured value is greater than the nominal value. Voltage over-deviation measured over recorded interval, expressed in % of nominal voltage including U_{pgOver} (phase p to phase g voltage) and U_{pOver} (phase p to neutral voltage). See 5.1.12 for details.
U_{Pk}	Peak voltage, including U_{pgPk} (phase p to phase g voltage) and U_{pPk} (phase p to neutral voltage)
$U_{Rms(1/2)}$	RMS voltage refreshed each half-cycle, including $U_{pgRms(1/2)}$ (phase p to phase g half-cycle voltage) and $U_{pRms(1/2)}$ (phase p to neutral half-cycle voltage). See 5.1.12 for definition.
U_{Swell}	Maximal $U_{Rms(1/2)}$ voltage measured during swell occurrence.
U_{Sig}	Mains signalling RMS voltage, including U_{Sigpg} (phase p to phase g half-cycle signalling voltage) and U_{Sigp} (phase p to neutral half-cycle signalling voltage). Signalling is a burst of signals, often applied at a non-harmonic frequency, that remotely control equipment. See 5.2.6 for details.
U_{Under}	Voltage under-deviation, difference between the measured value and the nominal value of a voltage, only when the voltage is lower than the nominal value. Voltage under-deviation measured over recorded interval and expressed in % of nominal voltage, including $U_{pgUnder}$ (phase p to phase g voltage) and U_{pUnder} (phase p to neutral voltage). See 5.1.12 for details.
ΔU_{max}	Maximum absolute difference between any of the $U_{Rms(1/2)}$ values during the RVC event and the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event. For poly-phase systems, the ΔU_{max} is the largest ΔU_{max} on any channel. See 5.1.15 for details.
ΔU_{ss}	Absolute difference between the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event and the first arithmetic mean 100/120 $U_{Rms(1/2)}$ value after the RVC event. For poly-phase systems, the ΔU_{ss} is the largest ΔU_{ss} on any channel. See 5.1.15 for details.

2 Description

2.1 Front panel

Figure 3: Front panel

Front panel layout:

1. LCD	Colour TFT display, 4.3-inch, 480 x 272 pixels.
2. F1 – F4	Function keys.
3. ARROW keys	Moves cursor and select parameters.
4. ENTER key	Step into submenu.
5. ESC key	Exits any procedure, confirms new settings.
6. SHORTCUT keys	Quick access to main instrument functions.
7. LIGHT key (BEEP OFF)	Adjust LCD backlight intensity: high/low//off If the *LIGHT* key is pressed for more than 1.5 seconds, beeper will be disabled. Press & hold again to enable it.
8. ON-OFF key	Turns on/off the instrument.

9. COVER Communication ports and microSD card slot protection.

2.2 Connector panel

⚠ **Warnings!**

⚠ Use safety test leads only!

⚠ Max. permissible nominal voltage between voltage input terminals and ground is 1000 V_{RMS} !

⚠ Max. short-term voltage of external power supply adapter is 14 V!

Figure 4:Top connector panel

Top connector panel layout:

1 Clamp-on current transformers (I_1, I_2, I_3, I_N) input terminals.
2 Voltage (L_1, L_2, L_3, N, GND) input terminals.
3 12 V external power socket.

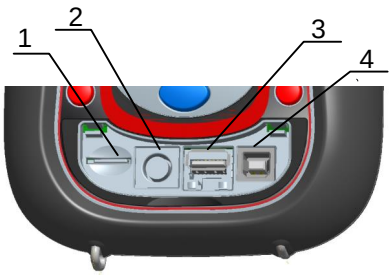

Figure 5: Side connector panel

Side connector panel layout:

1 MicroSD card slot.
2 GPS serial connector.
3 Ethernet connector.
4 USB connector.

2.3 Bottom view

Figure 6: Bottom view

Bottom view layout:

1. Battery compartment cover.
2. Battery compartment screw (unscrew to replace the batteries).
3. Serial number label.

2.4 Accessories

2.4.1 Standard accessories

Table 1: MI 2893/MI 2892/MI 2885 standard accessories

Description	Pieces
Flexible current clamp 3000 A / 300 A / 30 A (A 1227/A 1502)	4
Temperature probe (A 1354)	1
Colour coded test probe	5
Colour coded crocodile clip	5
Colour coded voltage measurement lead	5
USB cable	1
RS232 cable	1
Ethernet cable	1
12 V / 3 A Power supply adapter	1
NiMH rechargeable battery, type HR 6 (AA)	6
Professional protective waterproof case (A 1685) **(MI 2893/MI 2892)**	1
Soft carrying bag **(MI 2885)**	1
Compact disc (CD) with PowerView v3.0 and manuals	1

2.4.2 Optional accessories

See the attached sheet for a list of optional accessories that are available on request from your distributor.

3 Operating the instrument

This section describes how to operate the instrument. The instrument front panel consists of a colour LCD display and keypad. Measured data and instrument status are shown on the display. Basic display symbols and keys description is shown on figure below.

Figure 7: Display symbols and keys description

During measurement campaign various screens can be displayed. Most screens share common labels and symbols. These are shown on figure below.

Figure 8: Common display symbols and labels during measurement campaign

3.1 Instrument status bar

Instruments status bar is placed on the top of the screen. It indicates different instrument states. Icon descriptions are shown on table below.

Figure 9: Instrument status bar

Table 2: Instrument status bar description

	Indicates battery charge level.
	Indicates that charger is connected to the instrument. Batteries will be charged automatically when charger is present.
	Instrument is locked (see section 3.22.6 for details).
	AD converter over range. Selected Nominal voltage or current clamps range is too small.
18:07	Current time.
	GPS module status (Optional accessory A 1355):
	GPS module detected but reporting invalid time and position data. (Searching for satellites or too weak satellite signal).
	GPS time valid – valid satellite GPS time signal.
	Instrument act as host USB, and is ready to accept USB memory stick.
	One of the current clamps has opposite direction from the expected.
	Internet connection status (see section 4.3 for details):
	Internet connection is not available.
	Instrument is connected to the internet and ready for communication.
	Instrument is connected to the PowerView.
	Recorder status:
G	General recorder is active, waiting for trigger.
G	General recorder is active, recording in progress.
W	Waveform recorder is active, waiting for trigger.
W	Waveform recorder is active, recording in progress.
T	Transient recorder is active, waiting for trigger.
T	Transient recorder is active, recording in progress.
A	Alarm detected, recording in progress

E	Event detected, recording in progress
I	Inrush detected, recording in progress
R	RVC detected, recording in progress
S	Signalling detected, recording in progress
T	Transient detected, recording in progress
R	Memory list recall. Shown screen is recalled from instrument memory.
F	Flagged data mark. While observing recorded data this mark will indicate that observed measurement results for given time interval can be compromised due to interrupt, dip or swells occurrence. See section 5.1.17 for further explanation.
	Signalling voltage is present on voltage line at monitored frequencies. See sections 3.13 and 3.21.4 for further explanation.
	USB stick communication mode. In this mode selected record can be transferred from microSD card to USB stick. USB communication with PC is disabled while in this mode. See section 3.20 for details.

3.2 Instrument keys

Instrument keyboard is divided into four subgroups:

- Function keys
- Shortcut keys
- Menu/zoom manipulation keys: Cursors, Enter, Escape
- Other keys: Light and Power on/off keys

Function keys F1 F2 F3 F4 are multifunctional. Their current function is shown at the bottom of the screen and depends on selected instrument function.

Shortcut keys are shown in table below. They provide quick access to the most common instrument functions.

Table 3: Shortcut Keys and other Function keys

UIf	Shows UIF Meter screen from MEASUREMENT submenu
PQS	Shows Power meter screen from MEASUREMENT submenu
	Shows Harmonics meter screen from MEASUREMENT submenu
	Shows Connection Setup screen from MEASUREMENT SETUP submenu
	Shows Phase diagram screen from MEASUREMENT submenu
	Hold key for 2 seconds to trigger WAVEFORM SNAPSHOT. Instrument will record all measured parameters into file, which can be then analysed by PowerView.
	Set backlight intensity (high/low/off).
	Hold key for 2 s to disable/enable beeper sound signals.
	Switch On/off the instrument. Note: instrument will not power off if any recorder is active. Note: Hold key for 5 seconds in order to reset instrument, in case of failure.

Cursor, Enter and Escape keys are used for moving through instrument menu structure, entering various parameters. Additionally, cursor keys are used for zooming graphs and moving graph cursors.

3.3 Instrument memory (microSD card)

MI 2893/MI 2892/MI 2885 use microSD card for storing records. Prior instrument use, microSD card should be formatted to a single partition FAT32 file system and inserted into the instrument, as shown on figure below.

Figure 10: Inserting microSD card

1. Open instrument cover
2. Insert microSD card into a slot on the instrument (card should be putted upside down, as shown on figure)
3. Close instrument cover

Note: Do not turn off the instrument while microSD card is accessed:

- during record session
- observing recorded data in MEMORY LIST menu

Doing so may cause data corruption, and permanent data lost.

Note: SD Card should have single FAT32 partition. Do not use SD cards with multiple partitions.

3.4 Instrument Main Menu

After powering on the instrument, the “MAIN MENU” is displayed. From this menu all instrument functions can be selected.

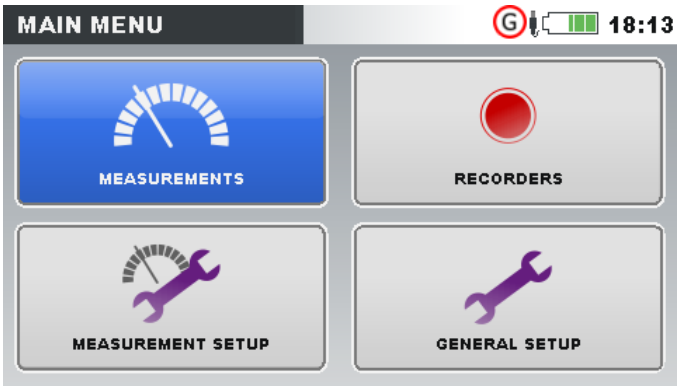

Figure 11: "MAIN MENU"

Table 4: Instrument Main menu

	MEASUREMENT submenu. Provide access to various instrument measurement screens
	RECORDER submenu. Provide access to instrument recorders configuration and storage.
	MEASUREMENT SETUP submenu. Provide access to the measurement settings.
	GENERAL SETUP submenu. Provide access to the various instrument settings.

Table 5: Keys in Main menu

	Selects submenu.
ENTER	Enters selected submenu.

3.4.1 Instrument submenus

By pressing ENTER key in Main menu, user can select one of four submenus:

- Measurements – set of basic measurement screens,
- Recorders – setup and view of various recordings,
- Measurement setup – measurement parameters setup,
- General setup – configuring common instrument settings.

List of all submenus with available functions are presented on following figures.

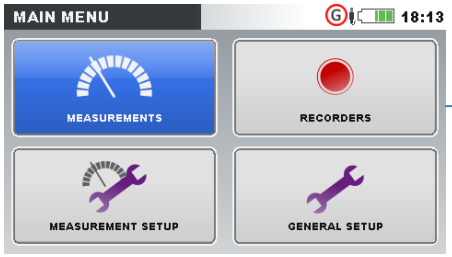

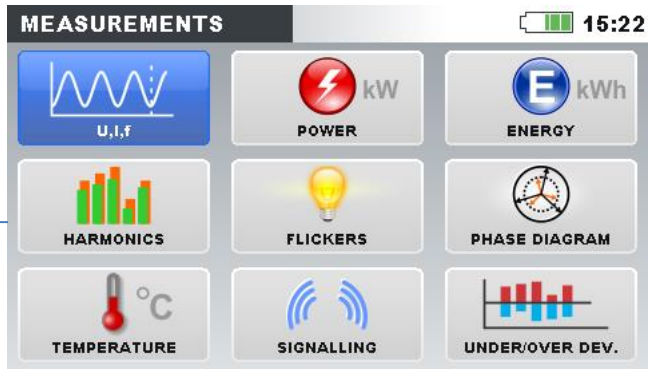

Figure 12: Measurements submenu

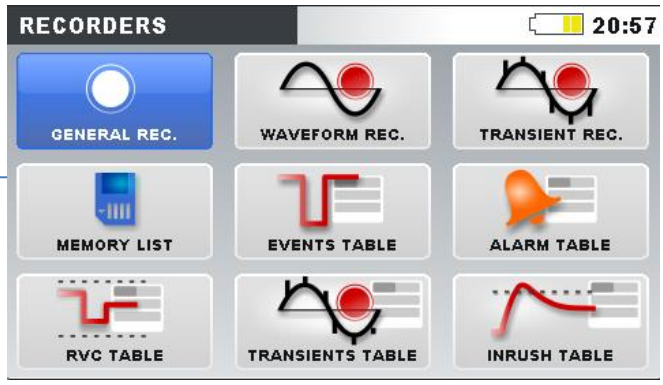

Figure 13: Recorders submenu

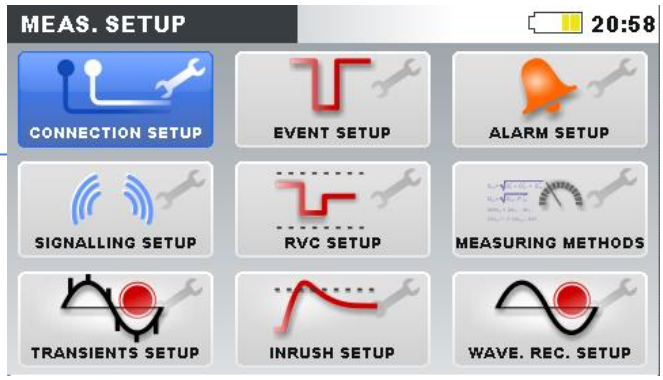

Figure 14: Measurement setup submenu

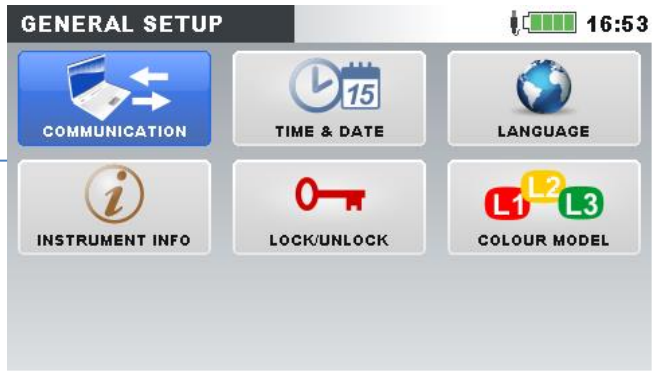

Figure 15: General setup submenu

Table 6: Keys in submenus

	Selects function within each submenu.
ENTER	Enters selected function.
ESC	Returns to the “MAIN MENU”.

3.5 U, I, f

Voltage, current and frequency parameters can be observed in the “U, I, f” screens. Measurement results can be viewed in a tabular (METER) or a graphical form (SCOPE, TREND). TREND view is active only in RECORDING mode. See section 3.14 for details.

3.5.1 Meter

By entering U, I, f option, the U, I, f – METER tabular screen is shown *(see figures below)*.

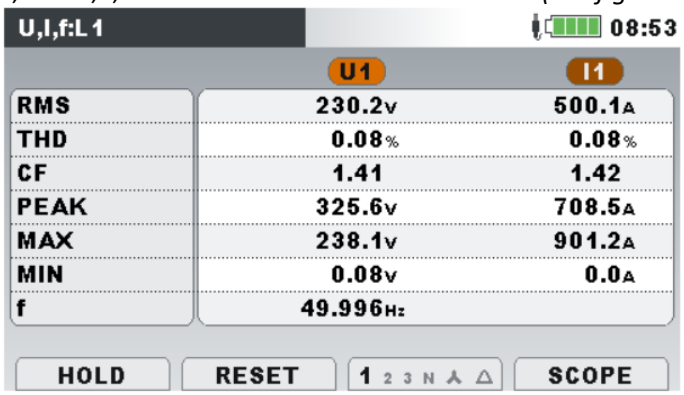

Figure 16: U, I, f meter phase table screens (L1, L2, L3, N)

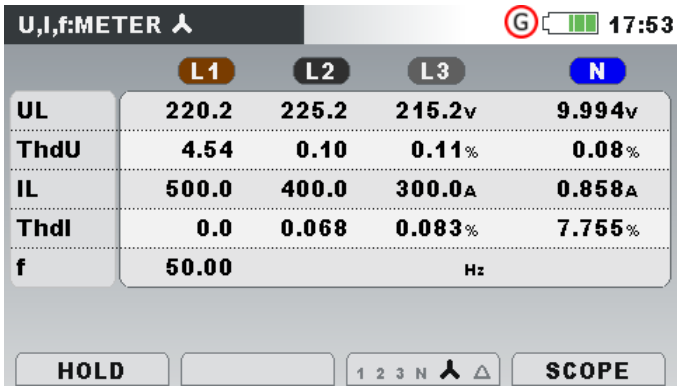

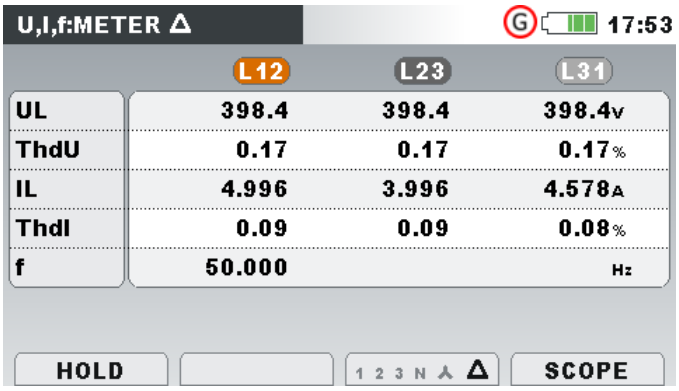

Figure 17: U, I, f meter summary table screens

In those screens on-line voltage and current measurements are shown. Descriptions of symbols and abbreviations used in this menu are shown in table below.

Table 7: Instrument screen symbols and abbreviations

RMS UL IL	True effective value U_{Rms} and I_{Rms}
THD ThdU ThdI	Total harmonic distortion THD_U and THD_I
CF	Crest factor CF_U and CF_I
PEAK	Peak value U_{Pk} and I_{Pk}
MAX	Maximal $U_{Rms(1/2)}$ voltage and maximal $I_{Rms(1/2)}$ current, measured after RESET (key: F2)
MIN	Minimal $U_{Rms(1/2)}$ voltage and minimal $I_{Rms(1/2)}$ current, measured after RESET (key: F2)
f	Frequency on reference channel

Note: In case of overloading current or overvoltage on AD converter, icon ∿ will be displayed in the status bar of the instrument.

Table 8: Keys in Meter screens

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F2	**RESET**	Resets MAX and MIN values ($U_{Rms(1/2)}$ and $I_{Rms(1/2)}$).
F3	**1** 2 3 N Δ	Shows measurements for phase L1.
	1 **2** 3 N Δ	Shows measurements for phase L2.
	1 2 **3** N Δ	Shows measurements for phase L3.
	1 2 3 **N** Δ	Shows measurements for neutral channel.

	1 2 3 N ⅄ Δ	Shows measurements for all phases.
	1 2 3 N ⅄ **Δ**	Shows measurements for all phase to phase voltages.
	12 23 31 Δ	Shows measurements for phase to phase voltage L12.
	12 **23** 31 Δ	Shows measurements for phase to phase voltage L23.
	12 23 **31** Δ	Shows measurements for phase to phase voltage L31.
	12 23 31 **Δ**	Shows measurements for all phase to phase voltages.
F4	**METER**	Switches to METER view.
	SCOPE	Switches to SCOPE view.
	TREND	Switches to TREND view (available only during recording).
		Triggers Waveform snapshot.
ESC		Returns to the “MEASUREMENTS” submenu.

3.5.2 Scope

Various combinations of voltage and current waveforms can be displayed on the instrument, as shown below.

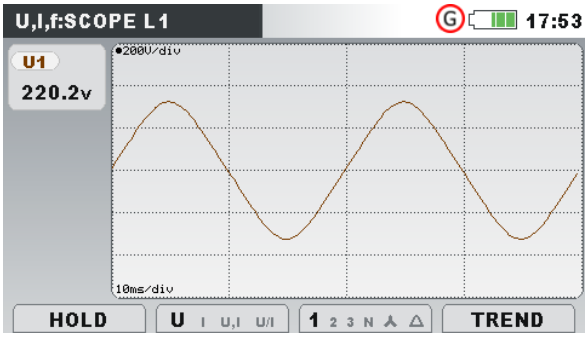

Figure 18: Voltage only waveform

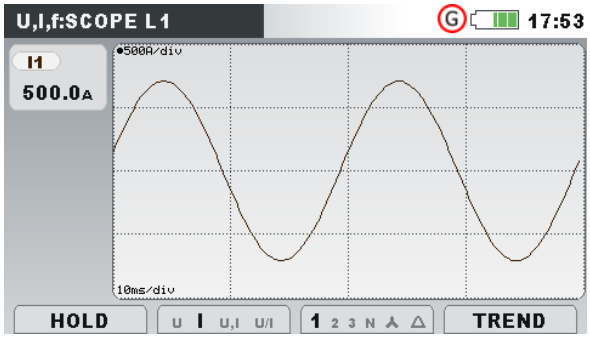

Figure 19: Current only waveform

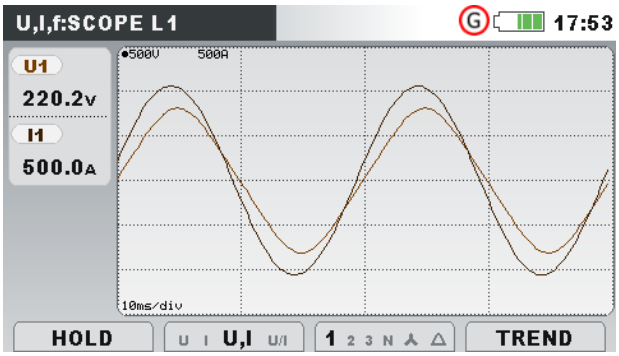

Figure 20: Voltage and current waveform (single mode)

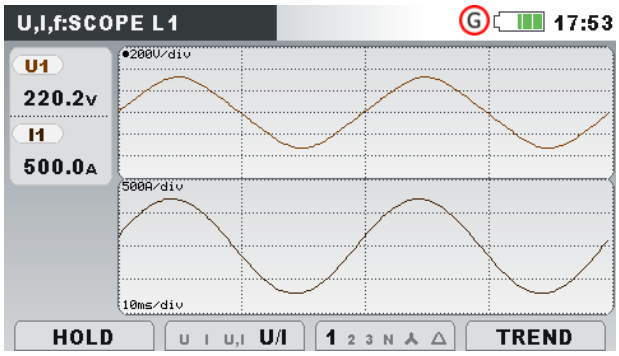

Figure 21: Voltage and current waveform (dual mode)

Table 9: Instrument screen symbols and abbreviations

U1, U2, U3, Un	True effective value of phase voltage: U_1, U_2, U_3, U_N
U12, U23, U31	True effective value of phase-to-phase (line) voltage: U_{12}, U_{23}, U_{31}
I1, I2, I3, In	True effective value of current: I_1, I_2, I_3, I_N

Table 10: Keys in Scope screens

F1	**HOLD**	Holds measurement on display.
	RUN	Runs held measurement.
F2		Selects which waveforms to show:
	U I U,I U/I	Shows voltage waveform.
	U **I** U,I U/I	Shows current waveform.
	U I **U,I** U/I	Shows voltage and current waveform (single graph).
	U I U,I **U/I**	Shows voltage and current waveform (dual graph).
F3		Selects between phase, neutral, all-phases and line view:
	1 2 3 N ⅄ Δ	Shows waveforms for phase L1.
	1 **2** 3 N ⅄ Δ	Shows waveforms for phase L2.
	1 2 **3** N ⅄ Δ	Shows waveforms for phase L3.
	1 2 3 **N** ⅄ Δ	Shows waveforms for neutral channel.
	1 2 3 N **⅄** Δ	Shows all phase waveforms.
	1 2 3 N ⅄ **Δ**	Shows all phase-to-phase waveforms.
	12 23 31 Δ	Shows waveforms for phase L12.
	12 **23** 31 Δ	Shows waveforms for phase L23.
	12 23 **31** Δ	Shows waveforms for phase L31.
	12 23 31 **Δ**	Shows all phase waveforms.
F4	**METER**	Switches to METER view.
	SCOPE	Switches to SCOPE view.
	TREND	Switches to TREND view (available only during recording).
ENTER	Selects which waveform to zoom (only in U/I or U+I).	
▲ ▼	Sets vertical zoom.	
◀ ▶	Sets horizontal zoom.	
📷	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.5.3 Trend

While GENERAL RECORDER is active, TREND view is available (see section 3.14 for instructions how to start recorder).

3.5.4 Voltage and current trends

Current and voltage trends can be observed by cycling function key F4 (METER-SCOPE-TREND).

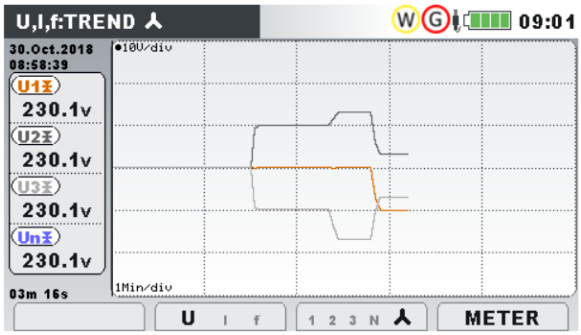

Figure 22: Voltage trend (all voltages)

Figure 23: Voltage trend (single voltage)

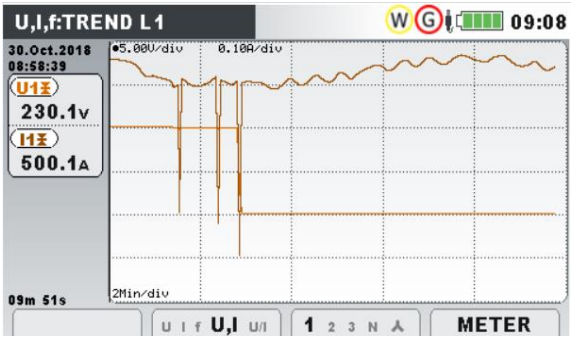

Figure 24: Voltage and current trend (single mode)

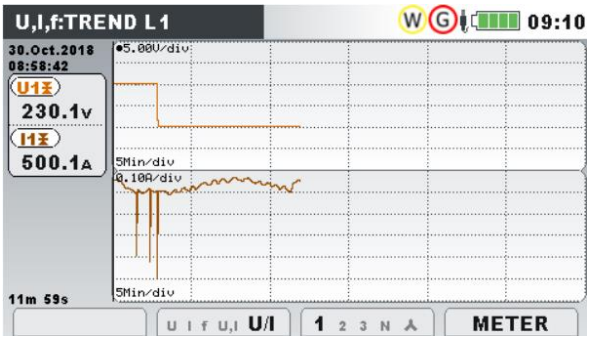

Figure 25: Voltage and current trend (dual mode)

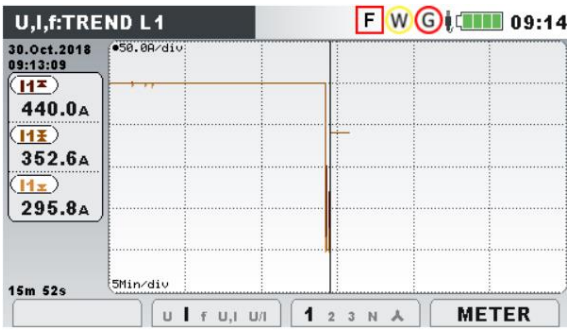

Figure 26: Trends of all currents

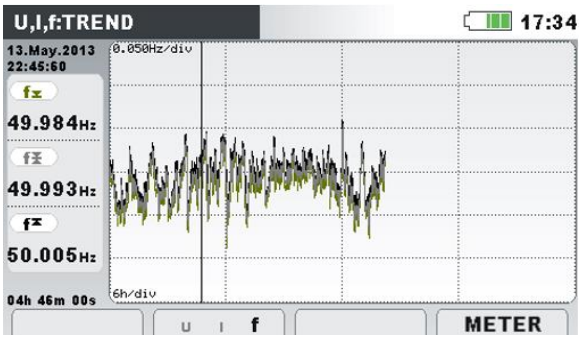

Figure 27: Frequency trend

Table 11: Instrument screen symbols and abbreviations

U1, U2, U3, Un, U12, U23, U31	Maximal (▲), average (⧗) and minimal (▼) value of phase RMS voltage U_1, U_2, U_3, U_N or line voltage U_{12}, U_{23}, U_{31} for time interval (IP) selected by cursor.
I1, I2, I3, In	Maximal (▲), average (⧗) and minimal (▼) value of current I_1, I_2, I_3, I_N for time interval (IP) selected by cursor.
f	Maximal (▲), active average (⧗) and minimal (▼) value of frequency at synchronization channel for time interval (IP) selected by cursor.
10.May.2013 02:02:00	Timestamp of interval (IP) selected by cursor.
32m 00s	Current GENERAL RECORDER time (d - days, h - hours, m - minutes, s - seconds)

Table 12: Keys in Trend screens

F2		Selects between the following options:
	U I f U,I U/I	Shows voltage trend.
	U **I** f U,I U/I	Shows current trend.
	U I **f** U,I U/I	Shows frequency trend.
	U I f **U,I** U/I	Shows voltage and current trend (single mode).
	U I f U,I **U/I**	Shows voltage and current trend (dual mode).
F3		Selects between phases, neutral channel, all-phases view:
	1 2 3 N ⅄	Shows trend for phase L1.
	1 **2** 3 N ⅄	Shows trend for phase L2.
	1 2 **3** N ⅄	Shows trend for phase L3.
	1 2 3 **N** ⅄	Shows trend for neutral channel.
	1 2 3 N ⅄	Shows all phases trends.
	12 23 31 Δ	Shows trend for phases L12.
	12 **23** 31 Δ	Shows trend for phases L23.
	12 23 **31** Δ	Shows trend for phases L31.
	12 23 31 **Δ**	Shows all phase-to-phase trends.
F4	**METER**	Switches to METER view.
	SCOPE	Switches to SCOPE view.
	TREND	Switches to TREND view.
◀ ▶	Moves cursor and selects time interval (IP) for observation.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.6 Power

In POWER screens instrument shows measured power parameters. Results can be seen in a tabular (METER) or a graphical form (TREND). TREND view is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recorder. In order to fully understand meanings of particular power parameter see sections 5.1.5.

Note: MI 2893/MI 2892/MI 2885 always save data according IEEE 1459 and data presentation could be also selected under PowerView.

3.6.1 Meter

By entering POWER option from Measurements submenu, the tabular POWER (METER) screen is shown *(see figure below)*. Which measurement is present on display depends on following settings:

- Power measurement method: Modern (IEEE 1459), Classic (Vector) or Classic (Arithmetic) – see section 3.21.6
- Connection type: 1W, 2W, 3W…
- Selected VIEW: Combined, Fundamental or Nonfundamental

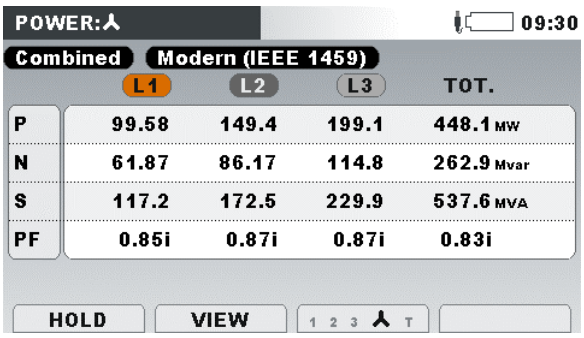

Figure 28: Power measurements summary (combined)

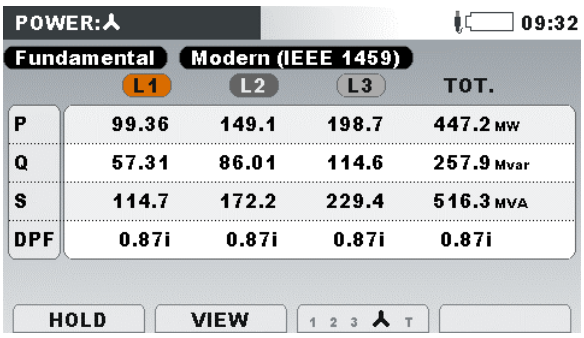

Figure 30: Power measurements summary (fundamental)

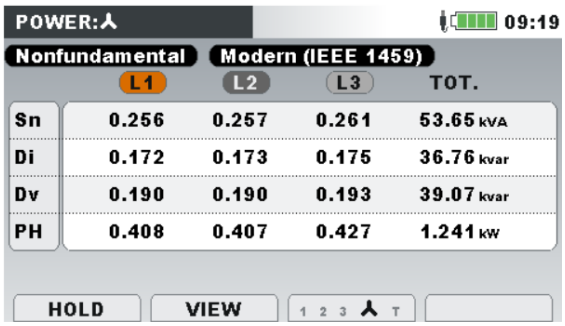

Figure 29: Power measurements summary (nonfundamental)

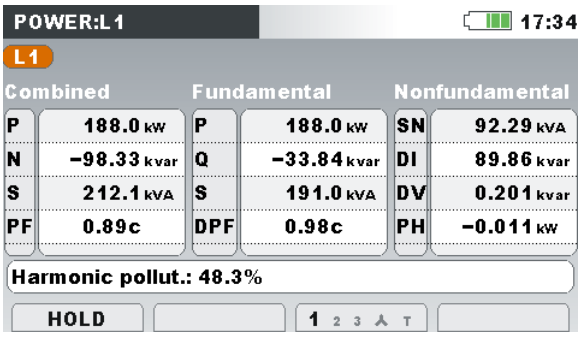

Figure 31: Detailed power measurements at phase L1

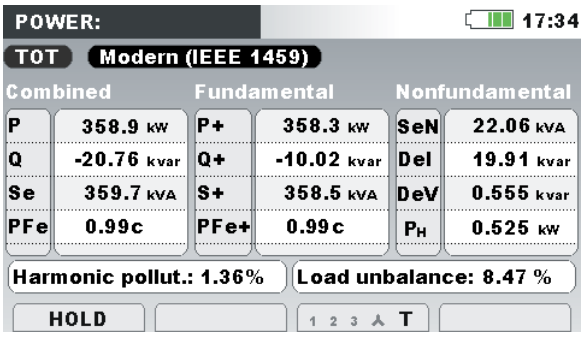

Figure 32: Detailed total power measurements

Description of symbols and abbreviations used in POWER (METER) screens are shown in table below.

Table 13: Instrument screen symbols and abbreviations (see 5.1.5 for details) – instantaneous values

P	Depending on the screen position: In **Combined** column: Combined (fundamental and nonfundamental) active power ($\pm P_1$, $\pm P_2$, $\pm P_3$, $\pm P_{tot}$) In **Fundamental** column: Fundamental active phase power ($\pm Pfund_1$, $\pm Pfund_2$, $\pm Pfund_3$)
N	Combined (fundamental and nonfundamental) nonactive phase power ($\pm N_1$, $\pm N_2$, $\pm N_3$) and nonactive total vector ($\pm N_{tot}$)
Na	Combined (fundamental and nonfundamental) nonactive arithmetic total power ($\pm Na_{tot}$)
Q	Fundamental reactive phase power ($\pm Qfund_1$, $\pm Qfund_2$, $\pm Qfund_3$)
Qa	Fundamental total arithmetic reactive power ($Qafund_{tot}$)
Qv	Fundamental total vector reactive power ($\pm Qvfund_{tot}$)
S	Depending on the screen position: In **Combined** column: Combined (fundamental and nonfundamental) apparent phase power (S_1, S_2, S_3) In **Fundamental** column: Fundamental apparent phase power ($Sfund_1$, $Sfund_2$, $Sfund_3$)
Sa	Depending on the screen position: In **Combined** column: Combined (fundamental and nonfundamental) total arithmetic apparent power (Sa_{tot}) In **Fundamental** column: Fundamental total arithmetic apparent power ($Safund_{tot}$)
Sv	Depending on the screen position: In **Combined** column: Combined (fundamental and nonfundamental) total vector apparent power (Sv_{tot}) In **Fundamental** column: Fundamental total vector apparent power ($Svfund_{tot}$)
P+	Positive sequence of total active fundamental power ($\pm P^{+}_{tot}$)

Q+	Positive sequence of total reactive fundamental power ($\pm Q^{+}_{tot}$)
S+	Positive sequence of total apparent fundamental power ($\pm S^{+}_{tot}$)
DPF+	Positive sequence power factor (fundamental, total)
Se	Combined (fundamental and nonfundamental) total effective apparent power (Se_{tot})
S_N	Phase nonfundamental apparent power (S_{N1}, S_{N2}, S_{N3})
Se_N	Total effective nonfundamental apparent power (Se_{Ntot})
D_I	Phase current distortion power (D_{I1}, D_{I2}, D_{I3})
De_I	Total effective current distortion power (De_{Itot})
D_V	Phase voltage distortion power (D_{V1}, D_{V2}, D_{V3})
Dev	Total effective voltage distortion power (Dev_{tot})
P_H	Phase and total harmonic active power (P_{H1}^{+},P_{H2}^{+},P_{H3}^{+},$\pm P_{Htot}$)
PF	Phase combined (fundamental and nonfundamental) power factor ($\pm PF_1$, $\pm PF_2$, $\pm PF_3$)
PFa	Total arithmetic combined (fundamental and nonfundamental) power factor ($\pm PFa$)
PFe	Total effective combined (fundamental and nonfundamental) power factor ($\pm PFe$)
PFv	Total vector combined (fundamental and nonfundamental) power factor ($\pm PFv$).
DPF	Phase fundamental power factor ($\pm DPF_1$, $\pm DPF_2$, $\pm DPF_3$,) and positive sequence total power factor ($\pm DPF^{+}$)
DPFa	Total arithmetic fundamental power factor ($\pm DPFa$).
DPFv	Total vector fundamental power factor ($\pm DPFv$).
Harmonic Pollut.	Harmonic pollution according to the standard IEEE 1459
Load unbalance	Load unbalance according to the standard IEEE 1459

Table 14: Keys in Power (METER) screens

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F2	**VIEW**	Switches between Combined, Fundamental and Nonfundamental view.
F3	**1** 2 3 ⅄ T	Shows measurements for phase L1.
	1 **2** 3 ⅄ T	Shows measurements for phase L2.
	1 2 **3** ⅄ T	Shows measurements for phase L3.
	1 2 3 ⅄ T	Shows brief view on measurements on all phases in a single screen.

	1 2 3 ⅄ T	Shows measurement results for TOTAL power measurements.
F4	METER TREND	Switches to METER view. Switches to TREND view (available only during recording).
📷		Triggers Waveform snapshot.
ESC		Returns to the “MEASUREMENTS” submenu.

3.6.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start GENERAL RECORDER).

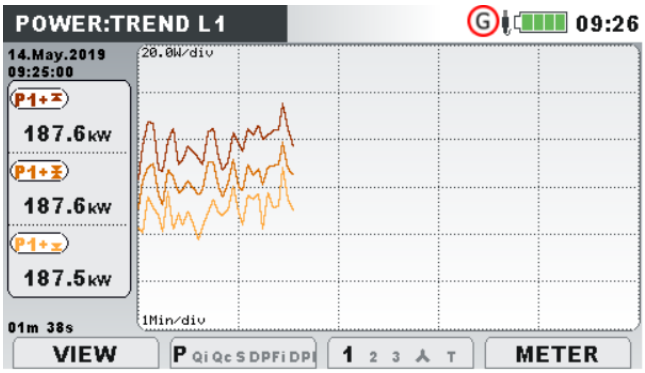

Figure 33: Power trend screen

Table 15: Instrument screen symbols and abbreviations

P1±, P2±, P3±, Pt±	View: **Combined** power Maximal (⧗), average (Σ) and minimal (⧖) value of consumed (P_1^+, P_2^+, P_3^+, P_{tot}^+) or generated (P_1^-, P_2^-, P_3^-, P_{tot}^-) active combined power for time interval (IP) selected by cursor.
P1±, P2±, P3±, P+±	View: **Fundamental** power Maximal (⧗), average (Σ) and minimal (⧖) value of consumed ($Pfund_1^+$, $Pfund_2^+$, $Pfund_3^+$, $P+_{tot}^+$) or generated ($Pfund_1^-$, $Pfund_2$, $Pfund_3$, $P+_{tot}^-$) active fundamental power for time interval (IP) selected by cursor.
Ni1±, Ni2±, Ni3±, Nit±	View: **Combined** power Maximal (⧗), average (Σ) and minimal (⧖) value of consumed (N_{1ind}^+, N_{2ind}^+, N_{3ind}^+, N_{totind}^+) or generated (N_{1ind}^-, N_{2ind}^-, N_{3ind}^-, N_{totind}^-) inductive combined nonactive power for time interval (IP) selected by cursor.
Nc1±, Nc2±, Nc3±, Nct±	View: **Combined** power Maximal (⧗), average (Σ) and minimal (⧖) value of consumed (N_{1cap}^+, N_{2cap}^+, N_{3cap}^+, N_{totcap}^+) or generated (N_{1cap}^-, N_{2cap}^-, N_{3cap}^-, N_{totcap}^-) capacitive combined nonactive power for time interval (IP) selected by cursor.
S1, S2, S3, Se	View: **Combined** power Maximal (⧗), average (Σ) and minimal (⧖) value of combined apparent power (S_1, S_2, S_3, Se_{tot}) for time interval (IP) selected by cursor.

S1, S2, S3, S+	View: **Fundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of fundamental apparent power ($Sfund_1$, $Sfund_2$, $Sfund_3$, S^+_{tot}) for time interval (IP) selected by cursor.
PFi1±, PFi2±, PFi3±, PFit±	View: **Combined** power Maximal (⧗), average (⧗) and minimal (⧗) value of inductive power factor (1st quadrant: PF_{1ind}^+, PF_{2ind}^+, PF_{3ind}^+, PF_{totind}^+ and 3rd quadrant: PF_{1ind}^-, PF_{2ind}^-, PF_{3ind}^-, PF_{totind}^-) for time interval (IP) selected by cursor.
PFc1±, PFc2±, PFc3±, PFct±	View: **Combined** power Maximal (⧗), average (⧗) and minimal (⧗) value of capacitive power factor (4th quadrant: PF_{1cap}^+, PF_{2cap}^+, PF_{3cap}^+, PF_{totcap}^+ and 2nd quadrant: PF_{1cap}^-, PF_{2cap}^-, PF_{3cap}^-, PF_{totcap}^-) for time interval (IP) selected by cursor.
Qi1±, Qi2±, Qi3±, Q+i±	View: **Fundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of consumed (Q_{1ind}^+, Q_{2ind}^+, Q_{3ind}^+, Q^+_{totind}) or generated (Q_{1ind}^-, Q_{2ind}^-, Q_{3ind}^-, Q^+_{totind}) fundamental reactive inductive power for time interval (IP) selected by cursor.
Qc1±, Qc2±, Qc3±, Q+c±	View: **Fundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of consumed (Q_{1cap}^+, Q_{2cap}^+, Q_{3cap}^+, Q^+_{captot}) or generated (Q_{1cap}^-, Q_{2cap}^-, Q_{3cap}^-, Q^+_{captot}) fundamental reactive capacitive power for time interval (IP) selected by cursor.
DPFi1±, DPFi2±, DPFi3± DPF+it±	View: **Fundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of inductive displacement power factor (1st quadrant: DPF_{1ind}^+, DPF_{2ind}^+, DPF_{3ind}^+, DPF_{totind}^+, and 3rd quadrant: DPF_{1ind}^-, DPF_{2ind}^-, DPF_{3ind}^- DPF_{totind}^-,) for time interval (IP) selected by cursor.
DPFc1±, DPFc2±, DPFc3± DPF+ct±	View: **Fundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of capacitive displacement power factor (4th quadrant: DPF_{1cap}^+, DPF_{2cap}^+, DPF_{3cap}^+, DPF_{totcap}^+, and 2nd quadrant: DPF_{1cap}^-, DPF_{2cap}^-, DPF_{3cap}^-, DPF_{totcap}^+) for time interval (IP) selected by cursor.
Sn1, Sn2, Sn3, Sen	View: **Nonfundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of consumed or generated nonfundamental apparent power (S_{N1}, S_{N2}, S_{N3}, Se_{Ntot}) for time interval (IP) selected by cursor.
Di1, Di2, Di3, Dei	View: **Nonfundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of consumed or generated phase current distortion power (D_{I1}, D_{I2}, D_{I3}, Dei_{tot}) for time interval (IP) selected by cursor.
Dv1, Dv2, Dv3, Dev	View: **Nonfundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of consumed or generated phase voltage distortion power (Dv_1, Dv_2, Dv_3, Dev_{tot}) for time interval (IP) selected by cursor.
Ph1±, Ph2±, Ph3±, Pht±	View: **Nonfundamental** power Maximal (⧗), average (⧗) and minimal (⧗) value of consumed (P_{H1}^+, P_{H2}^+, P_{H3}^+, P_{Htot}^+) or generated (P_{H1}^-, P_{H2}^-, P_{H3}^-, P_{Htot}^-) active harmonic power for time interval (IP) selected by cursor.

Table 16: Keys in Power (TREND) screens

F1	**VIEW**	Selects which measurement should instrument represent on graph: • Consumed or Generated Measurements related to consumed (suffix: +) or generated power (suffix: -). • Combined, Fundamental or Nonfundamental Measurement related to fundamental power, nonfundamental power or combined. Keys in VIEW window: ▲ ◀ ▶ ▼ — Selects option. ENTER — Confirms selected option. ESC — Exits selection window without change.
F2		If Combined power is selected:
	P Ni Nc S PFi Pfc	Shows combined active power trend.
	P **Ni** Nc S PFi Pfc	Shows combined inductive nonactive power trend.
	P Ni **Nc** S PFi Pfc	Shows combined capacitive nonactive power trend.
	P Ni Nc **S** PFi Pfc	Shows combined apparent power trend.
	P Ni Nc S **PFi** Pfc	Shows inductive power factor trend.
	P Ni Nc S Pfi **PFc**	Shows capacitive power factor trend.
		If Fundamental power is selected:
	P Qi Qc S DPFi DPfc	Shows fundamental active power trend.
	P **Qi** Qc S DPFi DPfc	Shows fundamental inductive reactive power trend.
	P Qi **Qc** S DPFi DPfc	Shows fundamental capacitive reactive power trend.
	P Qi Qc **S** DPFi DPfc	Shows fundamental apparent power trend.
	P Qi Qc S **DPFi** DPfc	Shows inductive displacement power factor trend.
	P Qi Qc S DPfi **DPFc**	Shows capacitive displacement power factor trend.
		If Nonfundamental power is selected:
	Sn Di Dv Ph	Shows nonfundamental apparent power trend.
	Sn **Di** Dv Ph	Shows nonfundamental current distortion power.
	Sn Di **Dv** Ph	Shows nonfundamental voltage distortion power.
	Sn Di Dv **Ph**	Shows nonfundamental active power.
F3		Selects between phase, all-phases and Total power view:
	1 2 3 ⅄ T	Shows power parameters for phase L1.

	1 2 3 ⅄ T	Shows power parameters for phase L2.
	1 2 3 ⅄ T	Shows power parameters for phase L3.
	1 2 3 ⅄ T	Shows power parameters for phases L1, L2 and L3 on the same graph.
	1 2 3 ⅄ T	Shows Total power parameters.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
◀ ▶	Moves cursor and selects time interval (IP) for observation.	
ESC	Returns to the "MEASUREMENTS" submenu.	

3.7 Energy

3.7.1 Meter

Instrument shows status of energy counters in energy menu. Results can be seen in a tabular (METER) form. Energy measurement is active only if GENERAL RECORDER is active. See section 3.14 for instructions how to start GENERAL RECORDER. The meter screens are shown on figures below.

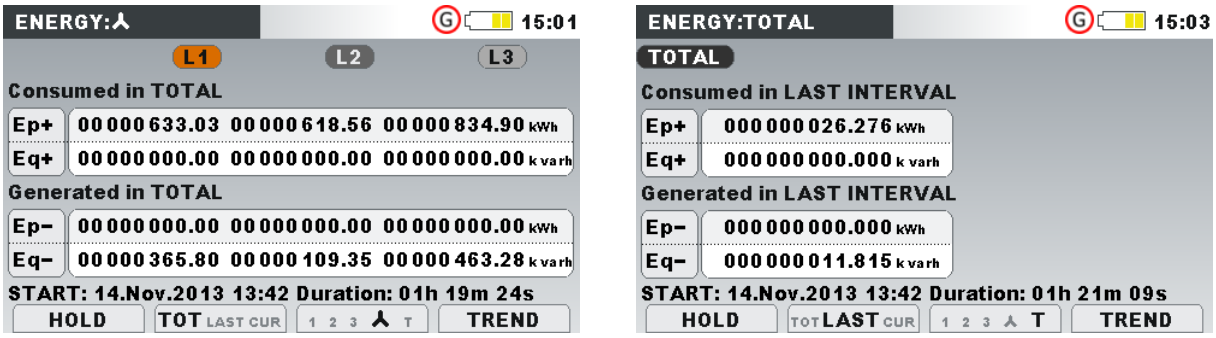

Figure 34: Energy counters screen

Table 17: Instrument screen symbols and abbreviations

Ep+	Consumed (+) phase (Ep_1^+, Ep_2^+, Ep_3^+) or total (Ep_{tot}^+) active energy
Ep-	Generated (-) phase (Ep_1^-, Ep_2^-, Ep_3^-) or total (Ep_{tot}^-) active energy
Eq+	Consumed (+) phase (Eq_1^+, Eq_2^+, Eq_3^+) or total (Eq_{tot}^+) fundamental reactive energy
Eq-	Generated (-) phase (Eq_1^-, Eq_2^-, Eq_3^-) or total (Eq_{tot}^-) fundamental reactive energy
Start	Recorder start time and date
Duration	Recorder elapsed time

Table 18: Keys in Energy (METER) screens

F1	**HOLD**	Holds measurement on display.
	RUN	Runs held measurement.
F2	**TOT** LAST CUR	Shows energy registers for whole record.
	TOT **LAST** CUR	Shows energy registers for last interval.
	TOT LAST **CUR**	Shows energy registers for current interval.
F3	**1** 2 3 ⅄ T	Shows energy parameters for phase L1.
	1 **2** 3 ⅄ T	Shows energy parameters for phase L2.
	1 2 **3** ⅄ T	Shows energy parameters for phase L3.
	1 2 3 **⅄** T	Shows all phases energy.
	1 2 3 ⅄ **T**	Shows energy parameters for Totals.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view.
	EFF	Switches to EFFICIENCY view.
		Triggers Waveform snapshot.
ESC		Returns to the “MEASUREMENTS” submenu.

3.7.2 Trend

TREND view is available only during active recording (see section 3.14 for instructions how to start GENERAL RECORDER).

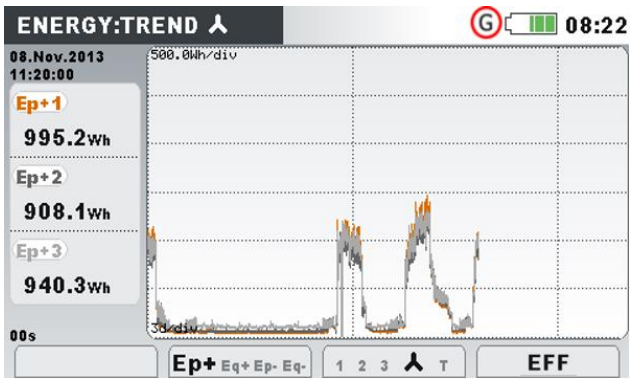

Figure 35: Energy trend screen

Table 19: Instrument screen symbols and abbreviations

Ep+	Consumed (+) phase (Ep_1^+, Ep_2^+, Ep_3^+) or total (Ep_{tot}^+) active energy
Ep-	Generated (-) phase (Ep_1^-, Ep_2^-, Ep_3^-) or total (Ep_{tot}^-) active energy
Eq+	Consumed (+) phase (Eq_1^+, Eq_2^+, Eq_3^+) or total (Eq_{tot}^+) fundamental reactive energy
Eq-	Generated (-) phase (Eq_1^-, Eq_2^-, Eq_3^-) or total (Eq_{tot}^-) fundamental reactive energy
Start	Recorder start time and date
Duration	Recorder elapsed time

Table 20: Keys in Energy (TREND) screens

F2	**Ep+** Eq+ Ep- Eq-	Shows active consumed energy for time interval (IP) selected by cursor.
	Ep+ **Eq+** Ep- Eq-	Shows reactive consumed energy for time interval (IP) selected by cursor.
	Ep+ Eq+ **Ep-** Eq-	Shows active generated energy for time interval (IP) selected by cursor.
	Ep+ Eq+ Ep- **Eq-**	Shows reactive generated energy for time interval (IP) selected by cursor.
F3	**1** 2 3 ⅄ T	Shows energy records for phase L1.
	1 **2** 3 ⅄ T	Shows energy records for phase L2.
	1 2 **3** ⅄ T	Shows energy records for phase L3.
	1 2 3 ⅄ T	Shows all phases energy records.
	1 2 3 ⅄ **T**	Shows energy records for Totals.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view.
	EFF	Switches to EFFICIENCY view.
ESC		Returns to the "MEASUREMENTS" submenu.

3.7.3 Efficiency

EFFICIENCY view is available only during active recording (see section 3.14 for instructions how to start GENERAL RECORDER).

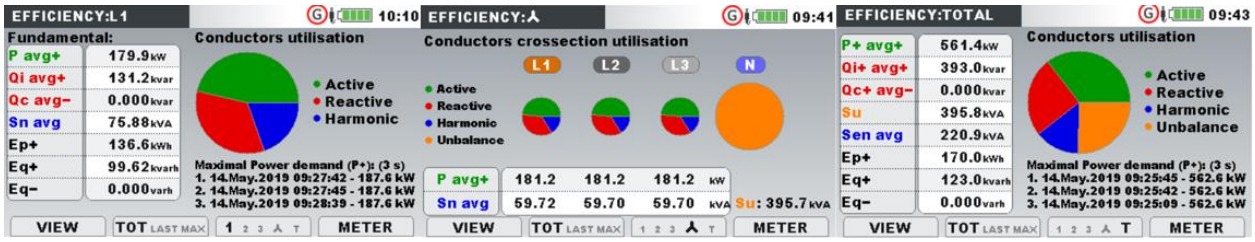

Figure 36: Energy efficiency screen

Table 21: Instrument screen symbols and abbreviations

P avg+	Consumed phase fundamental active power ($Pfund_1^+$, $Pfund_2^+$, $Pfund_3^+$)
P+ avg+	Positive sequence of total fundamental consumed active power ($P^+_{tot}{}^+$)
P avg-	Generated phase fundamental active power ($Pfund_1^-$, $Pfund_2^-$, $Pfund_3^-$)
P+ avg-	Positive sequence of total fundamental generated active power ($P^+_{tot}{}^-$) Shown active power is averaged over chosen time interval (key: F2) • TOT – shows total average (for complete record) active power • LAST – shows average active power in the last interval • MAX - shows average active power in interval where *Ep* was maximal.
Qi avg+ Qi+ avg+	Consumed phase fundamental inductive reactive power ($Qfund_{ind1}^+$, $Qfund_{ind2}^+$, $Qfund_{ind3}^+$)

Qi avg- Qi+ avg-	Positive sequence of total inductive fundamental consumed reactive power ($Q^{+}_{tot}{}^{+}$) Generated phase fundamental inductive reactive power ($Qfund_{ind1}^{-}$, $Qfund_{ind2}^{-}$, $Qfund_{ind3}^{-}$) Positive sequence of total inductive fundamental generated reactive power ($Q^{+}_{tot}{}^{-}$) Shown fundamental inductive reactive power is averaged over chosen time interval (key: F2) • TOT – shows total average (for complete record) fundamental inductive reactive power • LAST – shows average fundamental inductive reactive power in the last interval • MAX – shows average fundamental inductive reactive power in interval where *Ep* was maximal.
Qc avg+ Qc+ avg+ Qc avg- Qc+ avg-	Consumed phase fundamental capacitive reactive power ($Qfund_{cap1}^{+}$, $Qfund_{cap2}^{+}$, $Qfund_{cap3}^{+}$) Positive sequence of total capacitive fundamental consumed reactive power ($Q^{+}_{tot}{}^{+}$) Generated phase fundamental capacitive reactive power ($Qfund_{cap1}^{-}$, $Qfund_{cap2}^{-}$, $Qfund_{cap3}^{-}$) Positive sequence of total capacitive fundamental generated reactive power ($Q^{+}_{tot}{}^{+}$) Shown fundamental capacitive reactive power is averaged over chosen time interval (key: F2) • TOT – shows total average (for complete record) fundamental capacitive reactive power • LAST – shows average fundamental capacitive reactive power in the last interval • MAX – shows average fundamental capacitive reactive power in interval where *Ep* was maximal.
Sn avg Sen avg	Phase nonfundamental apparent power (S_{N1}, S_{N2}, S_{N3}) Total effective nonfundamental apparent power (S_{eN}). Shown nonfundamental apparent power is averaged over chosen time interval (key: F2) • TOT – shows total average (for complete record) of nonfundamental apparent power • LAST – shows average nonfundamental apparent power in the last interval • MAX – shows average nonfundamental apparent power in interval where *Ep* was maximal.
Su	Fundamental unbalanced power, according to the IEEE 1459-2010
Ep+ Ep-	Consumed phase (Ep_1^{+}, Ep_2^{+}, Ep_3^{+}) or total (Ep_{tot}^{+}) active energy Generated phase (Ep_1^{-}, Ep_2^{-}, Ep_3^{-}) or total (Ep_{tot}^{-}) active energy Shown active energy depends on chosen time interval (key: F2) • TOT – shows accumulated energy for complete record • LAST – shows accumulated energy in last interval • MAX – shows maximal accumulated energy in any interval
Eq+ Eq-	Consumed (+) phase (Eq_1^{+}, Eq_2^{+}, Eq_3^{+}) or total (Eq_{tot}^{+}) fundamental reactive energy Generated (-) phase (Eq_1^{-}, Eq_2^{-}, Eq_3^{-}) or total (Eq_{tot}^{-}) fundamental reactive energy Shown reactive energy depends on chosen time interval (key: F2) • TOT – shows accumulated energy for complete record • LAST – shows accumulated energy in last interval • MAX – shows accumulated reactive energy in interval where *Ep* was maximal.
Conductors utilisation	Shows conductor cross section utilisation for chosen time interval (TOT/LAST/MAX): • GREEN colour – represents part of conductor cross section (wire) used for active energy transfer (*Ep*) • RED colour – represents part of conductor cross section (wire) used for fundamental reactive energy transfer (*Eq*)

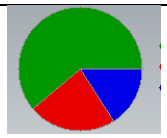	• BLUE colour – represents part of conductor cross section (wire) used for nonfundamental (harmonic) apparent energy transfer (S_N) • BROWN colour – represents unbalanced power (S_U) portion flowing in polyphase system in respect to phase power flow.
Date	End time of shown interval.
Max. Power Demand	Shows three intervals where measured fundamental active power was maximal. According to the selected channel (key: F3), and VIEW (key: F1) consumed phase and total fundamental active power is shown ($Pfund_1^+$, $Pfund_2^+$, $Pfund_3^+$, $P^+_{tot}{}^+$) or generated phase and total fundamental active power is shown ($Pfund_1^-$, $Pfund_2^-$, $Pfund_3^-$, $P^+_{tot}{}^-$)

Table 22: Keys in Energy (TREND) screens

F1	**VIEW**	Switches between Consumed (+) and Generated (-) energy view.
F2	**TOT** LAST MAX	Shows parameters for complete record duration
	TOT **LAST** MAX	Shows parameters for last (complete) recorded interval
	TOT LAST **MAX**	Shows parameters for interval, where active energy was maximal
F3	**1** 2 3 ⅄ T	Shows energy records for phase L1.
	1 **2** 3 ⅄ T	Shows energy records for phase L2.
	1 2 **3** ⅄ T	Shows energy records for phase L3.
	1 2 3 ⅄ T	Shows all phases energy records.
	1 2 3 ⅄ **T**	Shows energy records for Totals.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view.
	EFF	Switches to EFFICIENCY view.
ESC		Returns to the “MEASUREMENTS” submenu.

3.8 Harmonics / inter-harmonics

Harmonics presents voltage and current signals as a sum of sinusoids of power frequency and its integer multiples. Sinusoidal wave with frequency k-times higher than fundamental (k is an integer) is called harmonic wave and is denoted with amplitude and a phase shift (phase angle) to a fundamental frequency signal. If a signal decomposition with Fourier transformation results with presence of a frequency that is not integer multiple of fundamental, this frequency is called inter-harmonic frequency and component with such frequency is called inter-harmonic. See 5.1.8 for details.

3.8.1 Meter

By entering HARMONICS option from Measurements submenu, the tabular HARMONICS (METER) screen is shown *(see figure below)*. In this screens’ voltage and current harmonics or inter-harmonics and THD are shown.

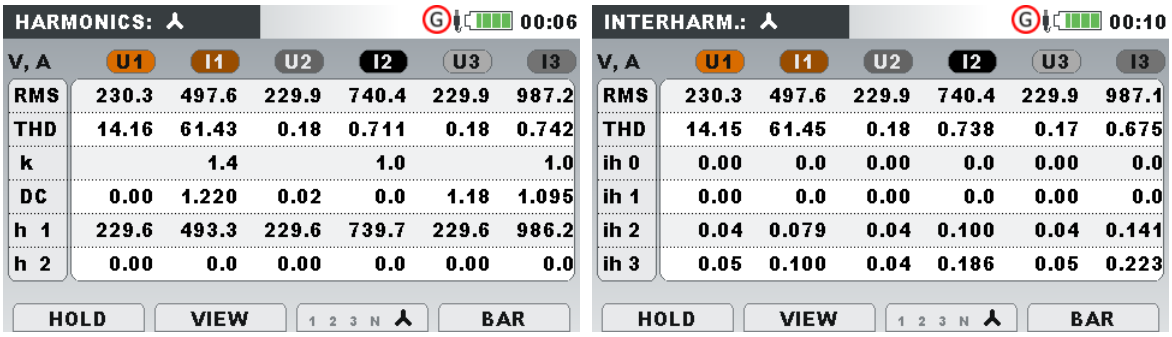

Figure 37: Harmonics and inter-harmonics (METER) screens

For phase harmonics presentation, there are also Power harmonics presented, for each phase separately:

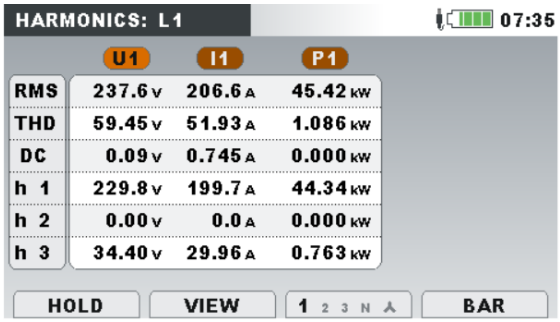

Figure 38: Phase harmonics presentation (U,I,P)

Description of symbols and abbreviations used in METER screens are shown in table below.

Table 23: Instrument screen symbols and abbreviations

RMS	RMS voltage / current value
THD	Total voltage / current harmonic distortion THD_U and THD_I in % of fundamental voltage / current harmonic or in RMS V, A.
k	k-factor (unit-less) indicates the amount of harmonics that load generate
DC	Voltage or current DC component in % of fundamental voltage / current harmonic or in RMS V, A.
h1 … h50	n-th harmonic voltage Uh_n or current Ih_n component in % of fundamental voltage / current harmonic or in RMS V, A.
ih0 … ih50	n-th inter-harmonic voltage Uih_n or current Iih_n component in % of fundamental voltage / current harmonic or in RMS V, A.

Table 24: Keys in Harmonics / inter-harmonics (METER) screens

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F2	**VIEW**	Switches view between Harmonics and Inter-harmonics. Switches units between: • RMS (Volts, Amperes)

		• % of fundamental harmonic Keys in VIEW window: Selects option. ENTER — Confirms selected option. ESC — Exits selection window without change.
F3		Selects between single phase, neutral, all-phases and line harmonics / inter-harmonics view.
	1 2 3 N ⅄	Shows harmonics / inter-harmonics components for phase L1.
	1 2 3 N ⅄	Shows harmonics / inter-harmonics components for phase L2.
	1 2 3 N ⅄	Shows harmonics / inter-harmonics components for phase L3.
	1 2 3 N ⅄	Shows harmonics / inter-harmonics components for neutral channel.
	1 2 3 N ⅄	Shows harmonics / inter-harmonics components for all phases on single screen.
	12 23 31 Δ	Shows harmonics / inter-harmonics components for phase L12.
	12 23 31 Δ	Shows harmonics / inter-harmonics components for phase L23.
	12 23 31 Δ	Shows harmonics / inter-harmonics components for phase L31.
	12 23 31 Δ	Shows harmonics / inter-harmonics components for phase-to-phase voltages.
F4	METER	Switches to METER view.
	BAR	Switches to BAR view.
	AVG	Switches to AVG (average) view (available only during recording).
	TREND	Switches to TREND view (available only during recording).
▲ ▼		Shifts through harmonic / interharmonic components.
📷		Triggers Waveform snapshot.
ESC		Returns to the “MEASUREMENTS” submenu.

3.8.2 Histogram (Bar)

Bar screen displays dual bar graphs. The upper bar graph shows instantaneous voltage harmonics and the lower bar graph shows instantaneous current harmonics.

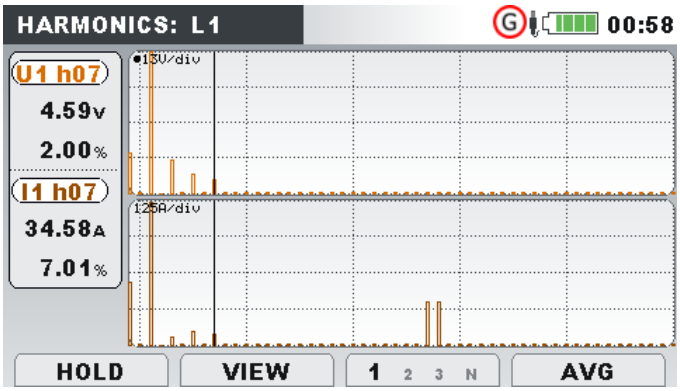

Figure 39: Harmonics histogram screen

Description of symbols and abbreviations used in BAR screens are shown in table below.

Table 25: Instrument screen symbols and abbreviations

Ux h01 … h50	Instantaneous voltage harmonic / inter-harmonic component in V_{RMS} and in % of fundamental voltage
Ix h01 … h50	Instantaneous current harmonic / inter-harmonic component in A_{RMS} and in % of fundamental current
Ux DC	Instantaneous DC voltage in V and in % of fundamental voltage
Ix DC	Instantaneous DC current in A and in % of fundamental current
Ux THD	Instantaneous total voltage harmonic distortion THD_U in V and in % of fundamental voltage
Ix THD	Instantaneous total current harmonic distortion THD_I in A_{RMS} and in % of fundamental current

Table 26: Keys in Harmonics / inter-harmonics (BAR) screens

F1	**HOLD**	Holds measurement on display.
	RUN	Runs held measurement.
F2	**VIEW**	Switches view between harmonics and inter-harmonics. Keys in VIEW window: ◀ ▶ Selects option. ENTER Confirms selected option. ESC Exits selection window without change.
F3		Selects between single phases and neutral channel harmonics / inter-harmonics bars.
	1 2 3 N	Shows harmonics / inter-harmonics components for phase L1.
	1 **2** 3 N	Shows harmonics / inter-harmonics components for phase L2.
	1 2 **3** N	Shows harmonics / inter-harmonics components for phase L3.

	1 2 3 **N**	Shows harmonics / inter-harmonics components for neutral channel.
	12 23 31	Shows harmonics / inter-harmonics components for phase L12.
	12 **23** 31	Shows harmonics / inter-harmonics components for phases L23.
	12 23 **31**	Shows harmonics / inter-harmonics components for phases L31.
F4	**METER**	Switches to METER view.
	BAR	Switches to BAR view.
	AVG	Switches to AVG (average) view (available only during recording).
	TREND	Switches to TREND view (available only during recording).
▲ ▼	Scales displayed histogram by amplitude.	
◀ ▶	Scrolls cursor to select single harmonic / inter-harmonic bar.	
ENTER	Toggles cursor between voltage and current histogram.	
📷	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.8.3 Harmonics Average Histogram (Avg Bar)

During active GENERAL RECORDER, Harmonics average histogram AVG view is available (see section 3.14 for instructions how to start GENERAL RECORDER). In this view average voltage and current harmonic values are shown (averaged from beginning of the recording to the current moment). Harmonics average histogram screen displays dual bar graphs. The upper bar graph shows average voltage harmonics and the lower bar graph shows average current harmonics.

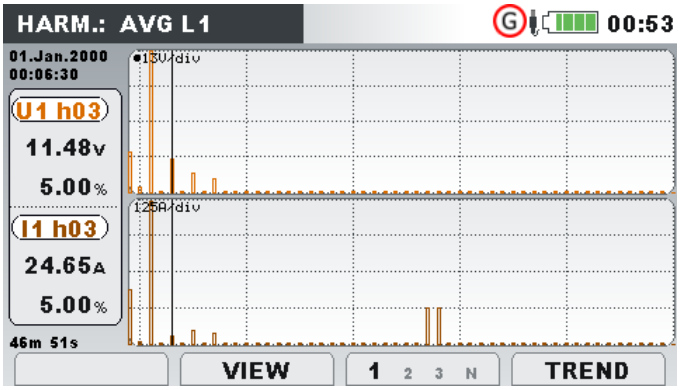

Figure 40: Harmonics average histogram screen

Description of symbols and abbreviations used in AVG screens are shown in table below.

Table 27: Instrument screen symbols and abbreviations

Ux h01 … h50	Average voltage harmonic / inter-harmonic component in V_{RMS} and in % of fundamental voltage (from beginning of the recording)

Ix h01 … h50	Average current harmonic / inter-harmonic component in A_{RMS} and in % of fundamental current
Ux DC	Average DC voltage in V and in % of fundamental voltage
Ix DC	Average DC current in A and in % of fundamental current
Ux THD	Average total voltage harmonic distortion THD_U in V and in % of fundamental voltage
Ix THD	Average total current harmonic distortion THD_I in A_{RMS} and in % of fundamental current

Table 28: Keys in Harmonics / inter-harmonics (AVG) screens

F2	**VIEW**	Switches view between harmonics and inter-harmonics. Keys in VIEW window: ◀ ▶ Selects option. ENTER Confirms selected option. ESC Exits selection window without change.
F3		Selects between single phases and neutral channel harmonics / inter-harmonics bars.
	1 2 3 N	Shows harmonics / inter-harmonics components for phase L1.
	1 **2** 3 N	Shows harmonics / inter-harmonics components for phase L2.
	1 2 **3** N	Shows harmonics / inter-harmonics components for phase L3.
	1 2 3 **N**	Shows harmonics / inter-harmonics components for neutral channel.
	12 23 31	Shows harmonics / inter-harmonics components for phase L12.
	12 **23** 31	Shows harmonics / inter-harmonics components for phases L23.
	12 23 **31**	Shows harmonics / inter-harmonics components for phases L31.
F4	**METER**	Switches to METER view.
	BAR	Switches to BAR view.
	AVG	Switches to AVG (average) view (available only during recording).
	TREND	Switches to TREND view (available only during recording).
▲ ▼	Scales displayed histogram by amplitude.	
◀ ▶	Scrolls cursor to select single harmonic / inter-harmonic bar.	
ENTER	Toggles cursor between voltage and current histogram.	
📷	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.8.4 Trend

During active GENERAL RECORDER, TREND view is available (see section 3.14 for instructions how to start GENERAL RECORDER). Voltage and current harmonic / inter-harmonic components can be observed by cycling function key F4 (METER-BAR-AVG-TREND).

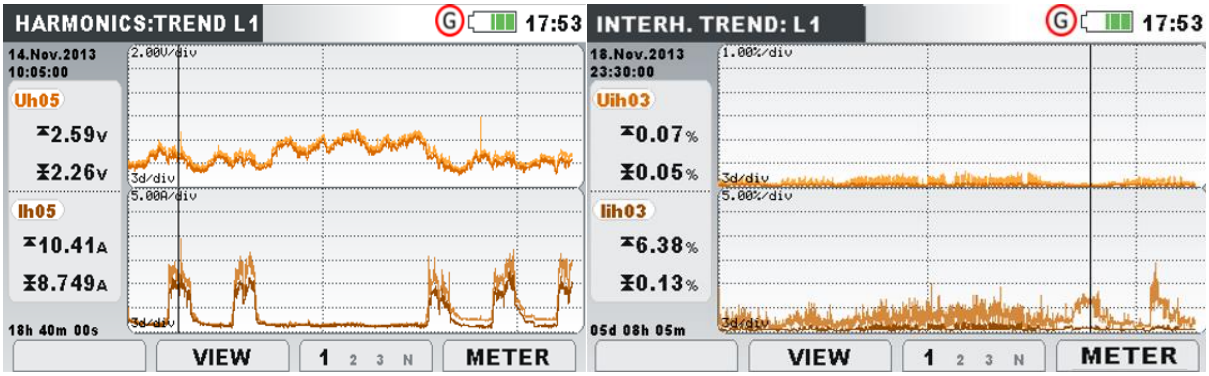

Figure 41: Harmonics and inter-harmonics trend screen

Table 29: Instrument screen symbols and abbreviations

ThdU	Interval maximal (⧗) and average (⧖) value of total voltage harmonic distortion THD_U for selected phase
ThdI	Interval maximal (⧗) and average (⧖) value of total current harmonic distortion THD_I for selected phase
Udc	Interval maximal (⧗) and average (⧖) value of DC voltage component for selected phase
Idc	Interval maximal (⧗) and average (⧖)value of selected DC current component for selected phase
Uh01…Uh50 Uih01…Uih50	Interval maximal (⧗) and average (⧖) value for selected n-th voltage harmonic / inter-harmonic component for selected phase
Ih01…Ih50 Iih01…Ih50	Interval maximal (⧗) and average (⧖)value of selected n-th current harmonic / inter-harmonic component for selected phase

Table 30: Keys in Harmonics / inter-harmonics (TREND) screens

		Switches between harmonics or inter-harmonics view. Switches measurement units between RMS V,A or % of fundamental harmonic. Selects harmonic number for observing.
F2	**VIEW**	Keys in VIEW window:
		Selects option.

	ENTER	Confirms selected option.
	ESC	Exits selection window without change.

F3		Selects between single phases and neutral channel harmonics / inter-harmonics trends.
	1 2 3 N	Shows selected harmonics / inter-harmonics components for phase L1.
	1 **2** 3 N	Shows selected harmonics / inter-harmonics components for phase L2.
	1 2 **3** N	Shows selected harmonics / inter-harmonics components for phase L3.
	1 2 3 **N**	Shows selected harmonics / inter-harmonics components for neutral channel.
	12 23 31	Shows selected harmonics / inter--harmonics components for phase to phase voltage L12.
	12 **23** 31	Shows selected harmonics / inter-harmonics components for phase to phase voltage L23.
	12 23 **31**	Shows selected harmonics / inter-harmonics components for phase to phase voltage L31.
F4	**METER**	Switches to METER view.
	BAR	Switches to BAR view.
	AVG	Switches to AVG (average) view (available only during recording).
	TREND	Switches to TREND view (available only during recording).
◀ ▶	Moves cursor and select time interval (IP) for observation.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.9 Flickers

Flickers measure the human perception of the effect of amplitude modulation on the mains voltage powering a light bulb. In Flickers menu instrument shows measured flicker parameters. Results can be seen in a tabular (METER) or a graphical form (TREND) - which is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recording. In order to understand meanings of particular parameter see section 5.1.9.

3.9.1 Meter

By entering FLICKERS option from MEASUREMENTS submenu, the FLICKERS tabular screen is shown *(see figure below)*.

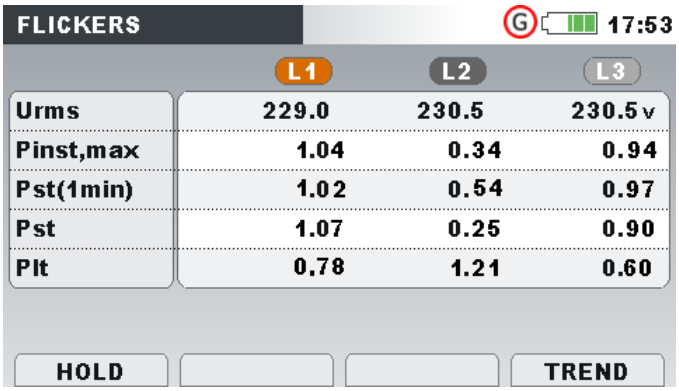

Figure 42: Flickers table screen

Description of symbols and abbreviations used in METER screen is shown in table below. Note that Flickers measurement intervals are synchronised to real time clock, and therefore refreshed on minute, 10 minutes and 2 hours intervals.

Table 31: Instrument screen symbols and abbreviations

Urms	True effective value U_1, U_2, U_3, U_{12}, U_{23}, U_{31}
Pinst,max	Maximal instantaneous flicker for each phase refreshed each 10 seconds
Pst(1min)	Short term (1 min) flicker P_{st1min} for each phase measured in last minute
Pst	Short term (10 min) flicker P_{st} for each phase measured in last 10 minutes
Plt	Long term flicker (2h) P_{st} for each phase measured in last 2 hours

Table 32: Keys in Flickers (METER) screen

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.9.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start recording). Flicker parameters can be observed by cycling function key F4 (METER -TREND). Note that Flicker meter recording intervals are determinate by standard IEC 61000-4-15. Flicker meter therefore works independently from chosen recording interval in GENERAL RECORDER.

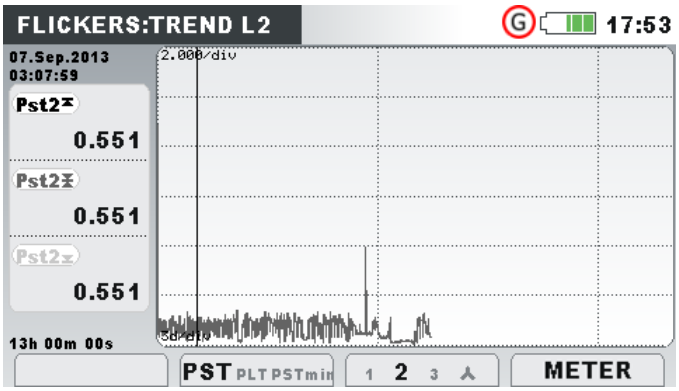

Figure 43: Flickers trend screen

Table 33: Instrument screen symbols and abbreviations

Pst1m1, Pst1m2, Pst1m3, Pst1m12, Pst1m23, Pst1m31	Maximal (▲), average (⧗) and minimal (▼) value of 1-minute short term flicker $P_{st(1min)}$ for phase voltages U_1, U_2, U_3 or line voltages U_{12}, U_{23}, U_{31}
Pst1, Pst2, Pst3, Pst12, Pst23, Pst31	Maximal (▲), average (⧗) and minimal (▼) value of 10-minutes short term flicker P_{st} for phase voltages U_1, U_2, U_3 or line voltages U_{12}, U_{23}, U_{31}
Plt1, Plt2, Plt3, Plt12, Plt23, Plt31	Maximal (▲), average (⧗) and minimal (▼) value of 2-hours long term flicker P_{lt} in phase voltages U_1, U_2, U_3 or line voltages U_{12}, U_{23}, U_{31}

Table 34: Keys in Flickers (TREND) screens

F2		Selects between the following options:
	Pst Plt Pstmin	Shows 10 min short term flicker P_{st}.
	Pst **Plt** Pstmin	Shows long term flicker P_{lt}.
	Pst Plt **Pstmin**	Shows 1 min short term flicker P_{st1min}.
F3		Selects between trending various parameters:
	1 2 3 ⅄	Shows selected flicker trends for phase L1.
	1 **2** 3 ⅄	Shows selected flicker trends for phase L2.
	1 2 **3** ⅄	Shows selected flicker trends for phase L3.
	1 2 3 ⅄	Shows selected flicker trends for all phases (average only).
	12 23 31 Δ	Shows selected flicker trends for phases L12.
	12 **23** 31 Δ	Shows selected flicker trends for phases L23.
	12 23 **31** Δ	Shows selected flicker trends for phases L31.
	12 23 31 **Δ**	Shows selected flicker trends for all phases (average only).
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
◀ ▶	Moves cursor and selects time interval (IP) for observation.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.10 Phase Diagram

Phase diagram graphically represent fundamental voltages, currents and phase angles of the network. This view is strongly recommended for checking instrument connection before measurement. Note that most measurement issues arise from wrongly connected instrument (see 4.1 for recommended measuring practice). On phase diagram screens instrument shows:

- Graphical presentation of voltage and current phase vectors of the measured system,
- Unbalance of the measured system.

3.10.1 Phase diagram

By entering PHASE DIAGRAM option from MEASUREMENTS submenu, the following screen is shown *(see figure below)*.

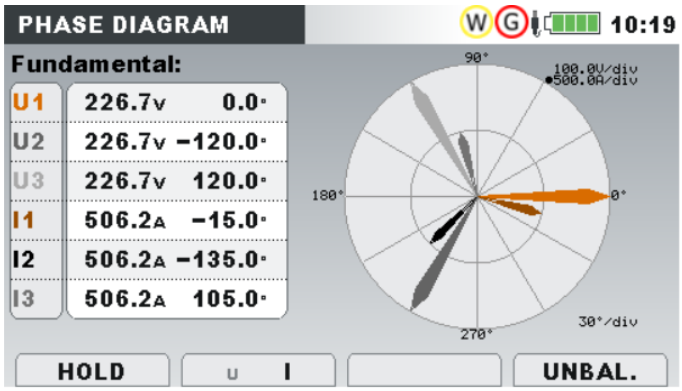

Figure 44: Phase diagram screen

Table 35: Instrument screen symbols and abbreviations

U1, U2, U3	Fundamental voltages $Ufund_1$, $Ufund_2$, $Ufund_3$ with relative phase angle to $Ufund_1$
U12, U23, U31	Fundamental voltages $Ufund_{12}$, $Ufund_{23}$, $Ufund_{31}$ with relative phase angle to $Ufund_{12}$
I1, I2, I3	Fundamental currents $Ifund_1$, $Ifund_2$, $Ifund_3$ with relative phase angle to $Ufund_1$ or $Ufund_{12}$

Table 36: Keys in Phase diagram screen

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F2	**U** I	Selects voltage for scaling (with cursors).
	I U	Selects current for scaling (with cursors).
F4	**METER**	Switches to PHASE DIAGRAM view.
	UNBAL.	Switches to UNBALANCE DIAGRAM view.
	TREND	Switches to TREND view (available only during recording).
▲ ▼	Scales voltage or current phasors.	
📷	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.10.2 Unbalance diagram

Unbalance diagram represents current and voltage unbalance of the measuring system. Unbalance arises when RMS values or phase angles between consecutive phases are not equal. Diagram is shown on figure below.

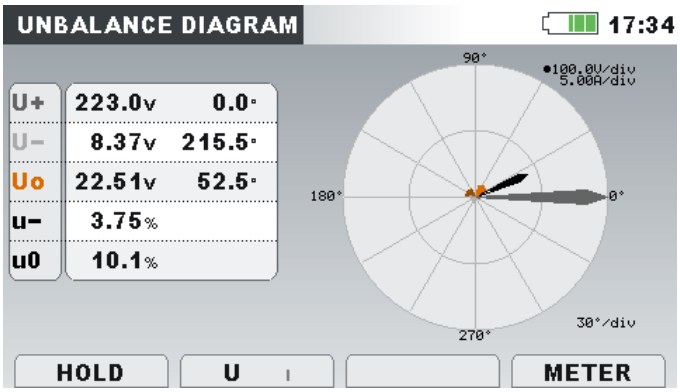

Figure 45: Unbalance diagram screen

Table 37: Instrument screen symbols and abbreviations

U0 I0	Zero sequence voltage component U^0 Zero sequence current component I^0
U+ I+	Positive sequence voltage component U^+ Positive sequence current component I^+
U- I-	Negative sequence voltage component U^- Negative sequence current component I^-
u- i-	Negative sequence voltage ratio u^- Negative sequence current ratio i^-
u0 i0	Zero sequence voltage ratio u^0 Zero sequence current ratio i^0

Table 38: Keys in Unbalance diagram screens

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F2	**U I**	Shows voltage unbalance measurement and selects voltage for scaling (with cursors)
	I U	Shows current unbalance measurement and selects current for scaling (with cursors)
F4	**METER**	Switches to PHASE DIAGRAM view.
	UNBAL.	Switches to UNBALANCE DIAGRAM view.
	TREND	Switches to TREND view (available only during recording).
▲ ▼	Scales voltage or current phasors.	
📷	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.10.3 Unbalance trend

During active recording UNBALANCE TREND view is available (see section 3.14 for instructions how to start GENERAL RECORDER).

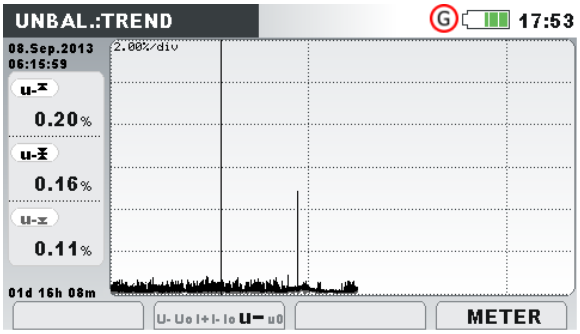

Figure 46: Symmetry trend screen

Table 39: Instrument screen symbols and abbreviations

u-	Maximal (⧗), average (⧖) and minimal (⧗) value of negative sequence voltage ratio u-
u0	Maximal (⧗), average (⧖) and minimal (⧗) value of zero sequence voltage ratio u^0
i-	Maximal (⧗), average (⧖) and minimal (⧗) value of negative sequence current ratio i-
i0	Maximal (⧗), average (⧖) and minimal (⧗) value of zero sequence current ratio i^0
U+	Maximal (⧗), average (⧖) and minimal (⧗) value of positive sequence voltage U^+
U-	Maximal (⧗), average (⧖) and minimal (⧗) value of negative sequence voltage U^-
U0	Maximal (⧗), average (⧖) and minimal (⧗) value of zero sequence voltage U^0
I+	Maximal (⧗), average (⧖) and minimal (⧗) value of positive sequence current I^+
I-	Maximal (⧗), average (⧖) and minimal (⧗) value of negative sequence current I^-
I0	Maximal (⧗), average (⧖) and minimal (⧗) value of zero sequence current I^0

Table 40: Keys in Unbalance trend screens

F2	**U+** U- U0 I+ I- I0 u+ u0 i+ i0	Shows selected voltage and current unbalance measurement (U^+, U^-, U^0, I^+, I^-, I^0, u^-, u^0, i^-, i^0).
F4	**METER**	Switches to PHASE DIAGRAM view.
	UNBAL.	Switches to UNBALANCE DIAGRAM view.
	TREND	Switches to TREND view (available only during recording).
◀ ▶	Moves cursor and selects time interval (IP) for observation.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.11 Temperature

MI 2893/MI 2892/MI 2885 instruments are capable of measuring and recording temperature with Temperature probe A 1354. Temperature is expressed in both units, Celsius and Fahrenheit degrees. See following sections for instructions how to start recording. In order to learn how to set up neutral clamp input with the temperature sensor, see section 4.2.4.

3.11.1 Meter

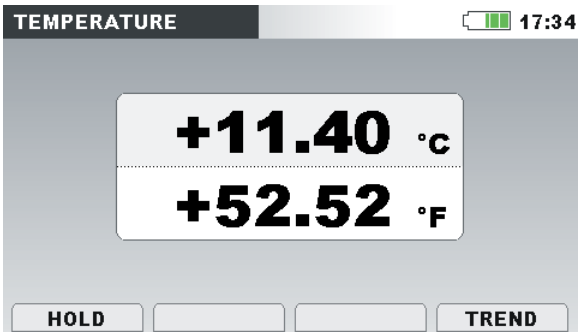

Figure 47: Temperature meter screen

Table 41: Instrument screen symbols and abbreviations

^{0}C	Current temperature in Celsius degrees
^{0}F	Current temperature in Fahrenheit degrees

Table 42: Keys in Temperature meter screen

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.11.2 Trend

Temperature measurement TREND can be viewed during the recording in progress. Records containing temperature measurement can be viewed from Memory list and by using PC software PowerView v3.0.

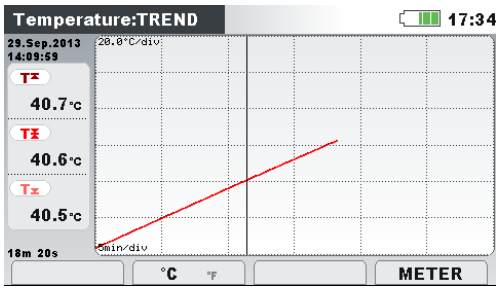

Figure 48: Temperature trend screen

Table 43: Instrument screen symbols and abbreviations

T:	Maximal (⧗), average (⧖) and minimal (⧗) temperature value for last recorded time interval (IP)

Table 44: Keys in Temperature trend screens

F2	**°C** °F	Shows temperature in Celsius degrees.
	°C **°F**	Shows temperature in Fahrenheit degrees.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
ESC	Returns to the “MEASUREMENTS” submenu.	

3.12 Under deviation and over deviation

Under deviation and over deviation parameters are useful when it is important to avoid, for example, having sustained under voltages being cancelled in data by sustained over voltages. Results can be seen in a tabular (METER) or a graphical form (TREND) view - which is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recording. In order to understand meanings of particular parameter see section 5.1.12.

3.12.1 Meter

By entering DEVIATION option from MEASUREMENTS submenu, the UNDER/OVER DEVIATION tabular screen is shown *(see figure below)*.

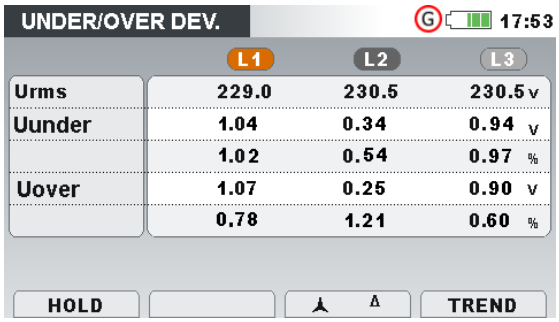

Figure 49: Under deviation and over deviation table screen

Description of symbols and abbreviations used in METER screen is shown in table below.

Table 45: Instrument screen symbols and abbreviations

Urms	True effective value U_1, U_2, U_3, U_{12}, U_{23}, U_{31}
Uunder	Instantaneous under deviation voltage U_{Under} expressed in voltage and % of nominal voltage
Uover	Instantaneous over deviation voltage U_{Over} expressed in voltage and % of nominal voltage

Table 46: Keys in Under deviation and over deviation (METER) screen

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F3		Selects between trending various parameters
	⅄ Δ	Shows under/over deviations measurements for all phase voltages
	⅄ **Δ**	Shows under/over deviations measurements for all phase to phase voltages
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
📷	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.12.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start recording). Under deviation and over deviation parameters can be observed by cycling function key F4 (METER -TREND).

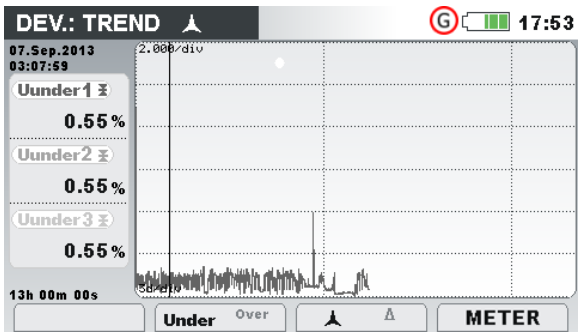

Figure 50: Under-deviation and over-deviation TREND screen

Table 47: Instrument screen symbols and abbreviations

Uunder1 Uunder2 Uunder3 Uunder12 Uunder22 Uunder31	Interval average (⧗) value of corresponding under deviation voltage U_{1Under}, U_{2Under}, U_{3Under}, $U_{12Under}$, $U_{23Under}$, $U_{31Under}$, expressed in % of nominal voltage.
Uover1 Uover2 Uover3 Uover12 Uover23 Uover31	Interval average (⧗) value of corresponding over deviation voltage U_{1Over}, U_{2Over}, U_{3Over}, U_{12Over}, U_{23Over}, U_{31Over}, expressed in % of nominal voltage.

Table 48: Keys in Under deviation and Over deviation (TREND) screens

F2		Selects between the following options:
	Under Over	Shows under deviation trends
	Under **Over**	Shows over deviation trends
F3		Selects between trending various parameters:
	⅄ Δ	Shows trends for all phase under/over deviations
	⅄ **Δ**	Shows trends for all lines under/over deviations
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
◀ ▶	Moves cursor and selects time interval (IP) for observation.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.13 Signalling

Mains signalling voltage, called “ripple control signal” in certain applications, is a burst of signals, often applied at a non-harmonic frequency, that remotely control industrial equipment, revenue meters, and other devices. Before observing signalling measurements, user should set-up signalling frequencies in signalling setup menu (see section 3.21.4).

Results can be seen in a tabular (METER) or a graphical form (TREND) - which is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recording. In order to understand meanings of particular parameter see section 5.1.9.

3.13.1 Meter

By entering SIGNALLING option from MEASUREMENTS submenu, the SIGNALLING tabular screen is shown *(see figure below)*.

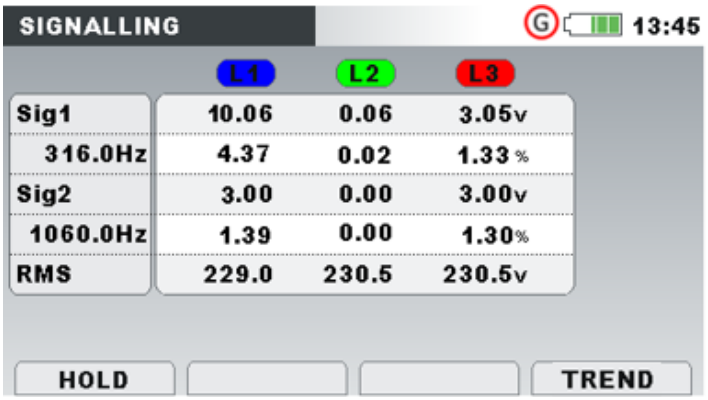

Figure 51: Signalling meter screen

Description of symbols and abbreviations used in METER screen is shown in table below.

Table 49: Instrument screen symbols and abbreviations

Sig1 316.0 Hz	True effective value signal voltage (U_{Sig1}, U_{Sig2}, U_{Sig3}, U_{Sig12}, U_{Sig23}, U_{Sig31}) for a user-specified carrier frequency (316.0 Hz in shown example) expressed in Volts or percent of fundamental voltage
Sig2 1060.0 Hz	True effective value signal voltage (U_{Sig1}, U_{Sig2}, U_{Sig3}, U_{Sig12}, U_{Sig23}, U_{Sig31}) for a user-specified carrier frequency (1060.0 Hz in shown example) expressed in Volts or percent of fundamental voltage
RMS	True effective value of phase or phase to phase voltage U_{Rms} (U_1, U_2, U_3, U_{12}, U_{23}, U_{31})

Table 50: Keys in Signalling (METER) screen

F1	**HOLD**	Holds measurement on display. Hold clock time will be displayed in the right top corner.
	RUN	Runs held measurement.
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
	TABLE	Switches to TABLE view (available only during recording).
	Triggers Waveform snapshot.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.13.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start recording). Signalling parameters can be observed by cycling function key F4 (METER -TREND).

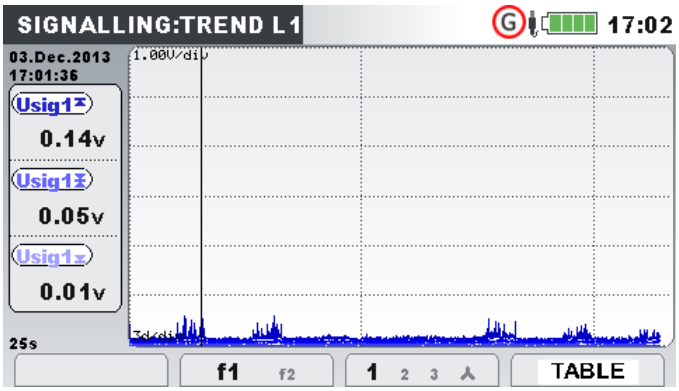

Figure 52: Signalling trend screen

Table 51: Instrument screen symbols and abbreviations

Usig1, Usig2, Usig3, Usig12, Usig23, Usig31	Maximal (▲), average (⧗) and minimal (▼) value of (U_{Sig1}, U_{Sig2}, U_{Sig3}, U_{Sig12}, U_{Sig23}, U_{Sig31}) signal voltage for a user-specified Sig1/Sig2 frequency (Sig1 = 316.0 Hz / Sig2 = 1060.0 Hz in shown example).
14.Nov.2013 13:50:00	Timestamp of interval (IP) selected by cursor.
22h 25m 00s	Current GENERAL RECORDER time (Days hours: min: sec)

Table 52: Keys in Signalling (TREND) screen

F2		Selects between the following options:
	f1 f2	Shows signal voltage for a user-specified signalling frequency (Sig1).
	f1 **f2**	Shows signal voltage for a user-specified signalling frequency (Sig2).
F3		Selects between trending various parameters:
	1 2 3 ⅄	Shows signalling for phase 1
	1 **2** 3 ⅄	Shows signalling for phase 2
	1 2 **3** ⅄	Shows signalling for phase 3
	1 2 3 **⅄**	Shows signalling for all phases (average only)
	12 23 31 Δ	Shows signalling for phase to phase voltage L12.
	12 **23** 31 Δ	Shows signalling for phase to phase voltage L23.
	12 23 **31** Δ	Shows signalling for phase to phase voltage L31.
	12 23 31 **Δ**	Shows signalling for all phase to phase voltages (average only).
F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
	TABLE	Switches to TABLE view (available only during recording).
◀ ▶	Moves cursor and select time interval (IP) for observation.	
ESC	Returns to the “MEASUREMENTS” submenu.	

3.13.3 Table

During active recording TABLE view is available (see section 3.14 for instructions how to start recording), by cycling function key F4 (METER –TREND - TABLE). Signalling events can be here observed as required by standard IEC 61000-4-30. For each signalling event instrument capture waveform which can be observed in PowerView.

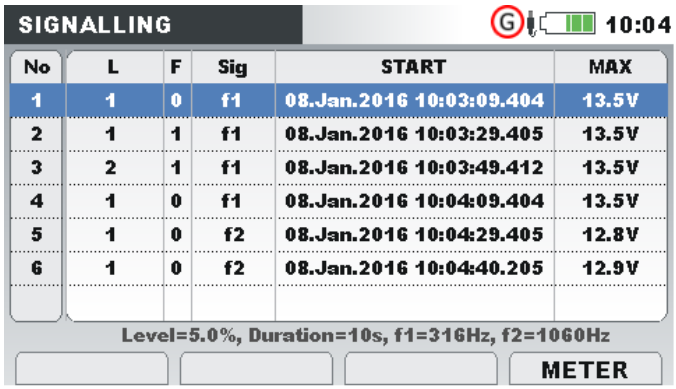

Figure 53: Signalling table screen

Table 53: Instrument screen symbols and abbreviations

No	Signalling event number
L	Phases on which signalling event occurred
F	Flag indication • 0 – none of intervals are flagged • 1 – at least one of intervals inside recorded signalling is flagged
Sig	Frequency on which signalling occurred, defined as “Sign. 1” frequency (f1) and “Sign. 2” frequency (f2) in SIGNALLING SETUP menu. See 3.21.4 for details.
START	Time when observed Signalling voltage crosses threshold boundary.
MAX	Maximal voltage level recorder captured during signalling events
Level	Threshold level in % of nominal voltage Un, defined in SIGNALLING SETUP menu. See 3.21.4 for details.
Duration	Duration of captured waveform, defined in SIGNALLING SETUP menu. See 3.21.4 for details.
f1	1st observed signalling frequency.
f2	2nd observed signalling frequency.

Table 54: Keys in Signalling (TABLE) screen

F4	**METER**	Switches to METER view.
	TREND	Switches to TREND view (available only during recording).
	TABLE	Switches to TABLE view (available only during recording).
▲ ▼	Moves cursor through signalling table.	

ESC	Returns to the “MEASUREMENTS” submenu.

3.14 General Recorder

MI 2893/MI 2892/MI 2885 has ability to record measured data in the background. By entering GENERAL RECORDER option from RECORDERS submenu, recorder parameters can be customized in order to meet criteria about interval, start time and duration for the recording campaign. General recorder setup screen is shown below:

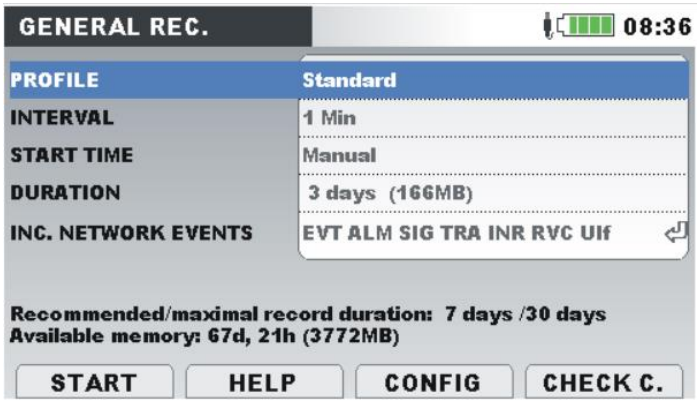

Figure 54: General recorder setup screen

Description of General recorder settings is given in the following table:

Table 55: General recorder settings description and screen symbols

G	General recorder is active, waiting for start condition to be met. After start conditions are met (defined start time), instrument will capture waveform snapshot and start (activate) General recorder.
G	General recorder is active, recording in progress **Note:** Recorder will run until one of the following end conditions is met: • **STOP** key was pressed by user • Given Duration criteria was met • Maximal record length was reached • SD CARD is full **Note:** If recorder start time is not explicitly given, recorder start depends on Real Time clock multiple of interval. For example: recorder is activated at 12:12 with 5-minute interval. Recorder will actually start at 12:15. **Note:** If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down automatically. After power restauration, it will automatically start new recording session.
A	Capturing of predefined Alarms under progress
E	Capturing of predefined Events under progress

I	Capturing of Inrush under progress
R	Capturing of RVC under progress
S	Capturing of Signalling under progress
T	Capturing of Transient under progress
Profile	Select recording profile: • Standard profile. Include all measurement in record. Suitable for most PQ measurement • Limited profile. Include limited set of measurements (most important). Suitable for long records with short interval (1-week record with 1 second interval). See section 4.4 for details.
Interval	Define the measured interval. Available settings are from 1 second to 120 minutes. Available intervals: 1 sec, 3 sec, 5 sec, 10 sec, 1 min, 2 min, 5 min, 10 min, 15 min, 30 min, 60 min, 120 min
Start time	Define start time of recording: • Manual, pressing function key F1 • At the given time and date.
Duration	Define recording duration. General recorder will record measurement for given time duration: • Manual, • 5, 10, 20, 30 minutes • 1, 6 or 12 hours, or • 1, 2, 3, 7, 15, 30, 60 days. Note: number of available duration intervals is related to the recorder period.
Included	Define network events, which are captured and registered during recorder session – ON/OFF selection: **MI 2893:** 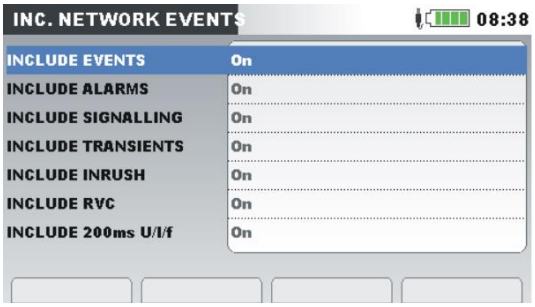

	MI 2892/MI 2885:
Recommended/maximal record duration:	Show recommended and maximal Duration parameter for giver recording Interval.
Available memory	Show SD card free space

Table 56: Keys in General recorder setup screen

F1	**START** **STOP**	Starts the recorder. Stops the recorder.
F2	**HELP**	Show help screen where it's explained which measurements will be recoded with Limited and Standard profile. 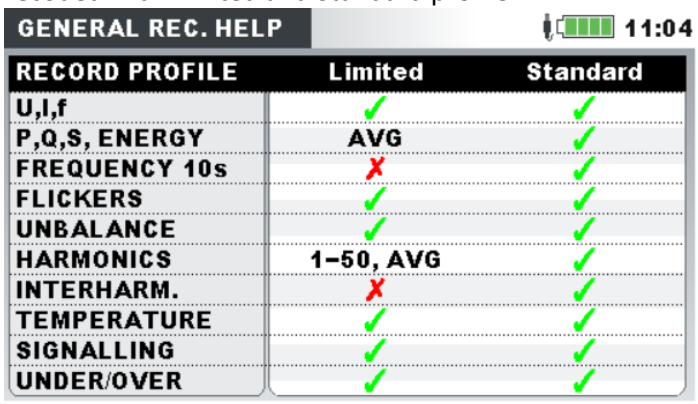 See section 4.4 for details.
F3	**CONFIG**	Shortcut to Connection setup. See 4.2 for details.
F4	**CHECK C.**	Check connection settings. See 3.21.1 for details.
ENTER		Enters recorder starting date/time setup. 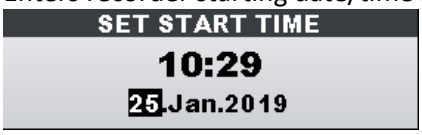 Keys in Set start time window: ◀ ▶ — Selects parameter to be changed. ▲ ▼ — Modifies parameter. ENTER — Confirms selected option. ESC — Exits Set start time window without modifications.

▲ ▼	Selects parameter to be changed.
◀ ▶	Modifies parameter.
ESC	Returns to the “RECORDERS” submenu.

3.15 Waveform/Inrush recorder

Waveform recording is a powerful tool for troubleshooting and capturing current and voltage waveforms and inrushes. Waveform recorder saves a defined number of periods of voltage and current on a trigger occurrence. Each recording consists of pre-trigger interval (before trigger) and post-trigger interval (after trigger).

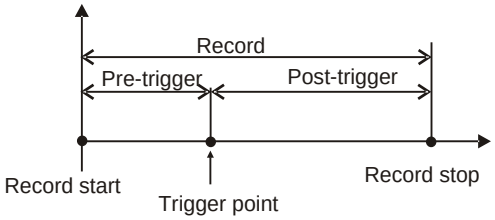

Figure 55: Triggering in waveform record

3.15.1 Setup

Waveform recorder setup menu is available from:
MAIN MENU → MEASUREMENT SETUP → WAVE.REC.SETUP
or
MAIN MENU → RECORDERS → WAVEFORM REC → F3 (SETUP)

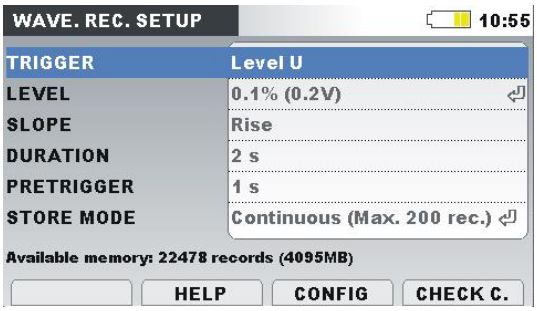

Figure 56: Waveform recorder setup screen

Table 57: Waveform recorder settings description and screen symbols

W	Waveform recorder is active, waiting for trigger (presented only in case, when Waveform recorder is started)
W	Waveform recorder is active, recording in progress (presented only in case, when Waveform recorder is started)
Trigger	Trigger source set up: • **Events** – triggered by voltage event (see 3.21.2); • **Alarms** – triggered by alarm activation (see 3.21.3);

	• **Events & Alarms** – triggered by alarm or event; • **Level U** – triggered by voltage level; • **Level I** – triggered by current level (inrush). • **Interval** – periodical trigger for given time period (each 10 minutes for example). Interval between two-time triggered waveforms in Interval trigger type
Level*	Voltage or current level in % of nominal voltage or current and in (V or A), which will trigger recording
Slope*	• **Rise** – triggering will occur only if voltage or current rise above given level • **Fall** - triggering will occur only if voltage or current fall below given level • **Any** – triggering will occur if voltage or current rise above or fall below given level
Duration	Record length.
Pretrigger	Recorded interval before triggering occurs.
Store mode	Store mode setup: • **Single** – waveform recording ends after first trigger; • **Continuous (Max. 1500 record)**– consecutive waveform recording until user stops the measurement or instrument runs out of storage memory. Every consecutive waveform recording will be treated as a separate record. By default, 200 records can be recorded. This value can be changed, if necessary. More than 200 records can slow down the instrument.

* Available only if Level U or Level I triggering is selected.

Table 58: Keys in Waveform recorder setup screen

F2	**HELP**	Show help screens. See 5.1.19 for details. 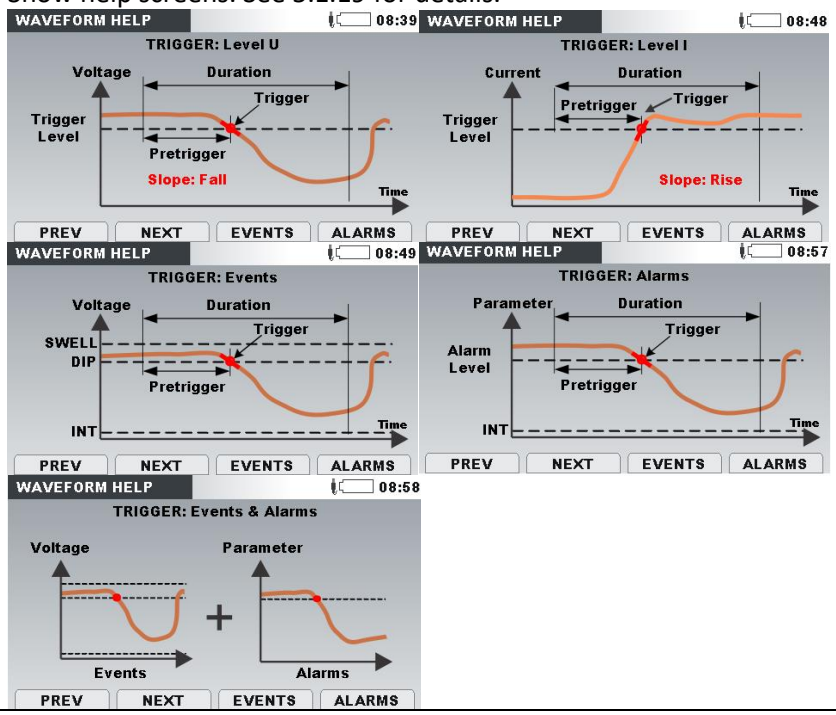
F3	**CONFIG**	Shortcut to CONNECTION SETUP menu. See 3.21.1 for details.

F4	**CHECK C.**	Check connection settings. See 3.21.1 for details.
▲ ▼	Selects parameter to be changed.	
◀ ▶	Modifies parameter.	
ENTER	Enter into submenu (⏎).	
ESC	Returns to the submenu.	

3.15.2 Capturing waveform

After waveform recorder is started, instrument waits for trigger occurrence. This can be seen by observing status bar, where icon W is present. If trigger conditions are met, recording will be started.

Following screen opens when a user switches to WAVEFORM REC. view.

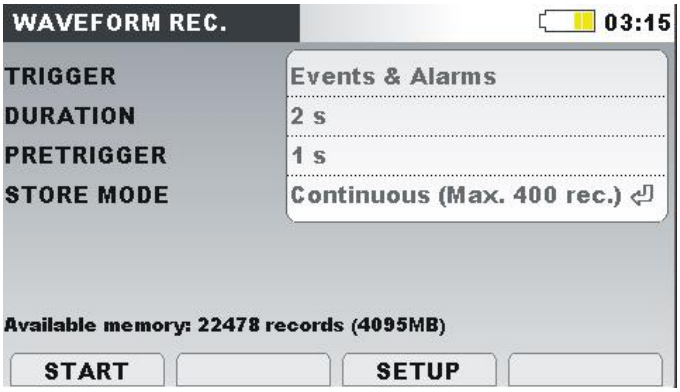

Figure 57: Waveform recorder capture screen

F1	**START**	Starts waveform recording.
F3	**SETUP**	Shortcut to WAVE. REC. SETUP menu. See 3.21.1 for details.
ESC		*Returns to the "WAVEFORM REC." menu.*

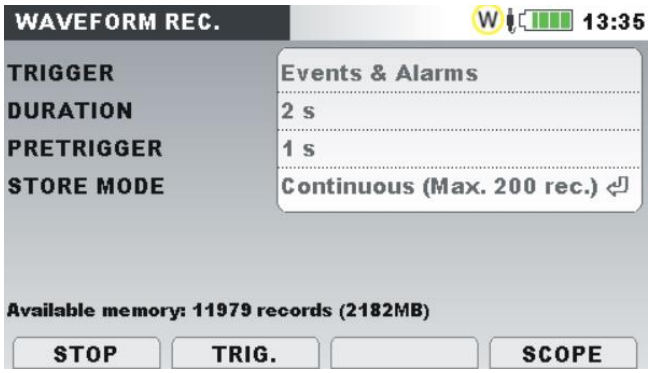

Figure 58: Waveform recorder screen

F1	**STOP**	Stops waveform recording. ***Note:*** If user forces waveform recorder to stop before trigger occurs, no data will be recorded. Data recording occurs only when trigger is activated.
F2	**TRIG**	Manually generates trigger condition
ESC		*Returns to the "WAVEFORM REC. " menu.*

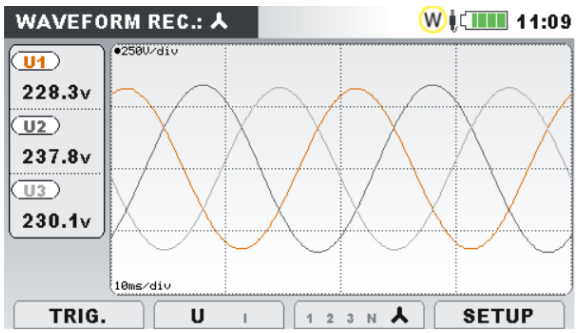

Figure 59: Waveform recorder scope screen

Table 59: Instrument screen symbols and abbreviations

W	Waveform recorder is active, waiting for trigger
W	Waveform recorder is active, recording in progress
U1, U2, U3, Un	True effective value of phase voltage: U_{1Rms}, U_{2Rms}, U_{3Rms}, U_{NRms}
U12, U23, U31	True effective value of phase-to-phase (line) voltage: U_{12Rms}, U_{23Rms}, U_{31Rms}
I1, I2, I3, In	True effective value of current: I_{1Rms}, I_{2Rms}, I_{3Rms}, I_{NRms}

Table 60: Keys in Waveform recorder capture screen

F1	**TRIG.**	Manually generates trigger condition (Active only if recording is in progress).
F2	**U** I U,I U/I	Selects which waveforms to show: Shows voltage waveform.

	U **I** U,I U/I	Shows current waveform.
	U I **U,I** U/I	Shows voltage and current waveforms on single graph.
	U I U,I **U/I**	Shows voltage and current waveforms on separate graphs.
F3		Selects between phase, neutral, all-phases and line view:
	1 2 3 N ⅄	Shows waveforms for phase L1.
	1 **2** 3 N ⅄	Shows waveforms for phase L2.
	1 2 **3** N ⅄	Shows waveforms for phase L3.
	1 2 3 **N** ⅄	Shows waveforms for neutral channel.
	1 2 3 N ⅄	Shows waveforms for all phases.
	12 23 31 Δ	Shows waveforms for phase to phase voltage L12.
	12 **23** 31 Δ	Shows waveforms for phase to phase voltage L23.
	12 23 **31** Δ	Shows waveforms for phase to phase voltage L31.
	12 23 31 **Δ**	Shows waveforms for all phase-to-phase voltages.
F4	**SETUP**	Switches to SETUP view. (Active only if recording in progress).
ENTER	Selects which waveform to zoom (only in U,I or U/I).	
▲ ▼	Sets vertical zoom.	
◀ ▶	Sets horizontal zoom.	
ESC	Returns to the “WAVEFORM RECORDER” setup screen.	

3.15.3 Captured waveform

Captured waveforms can be viewed from the Memory list menu.

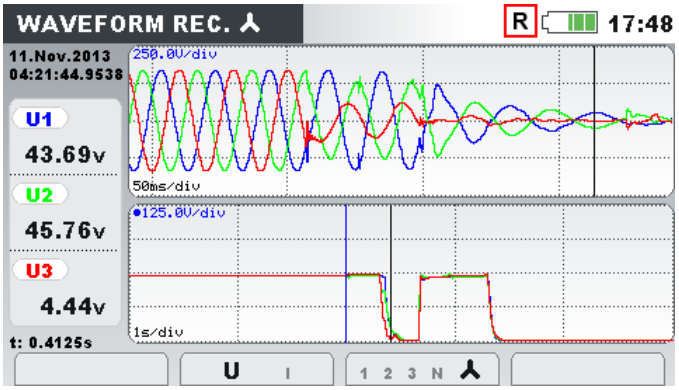

Figure 60: Captured waveform recorder screen

Table 61: Instrument screen symbols and abbreviations

R	Memory list recall. Shown screen is recalled from memory
t:	Cursor position in seconds (regarding to trigger time – blue line on graph)
u1(t), u2(t), u3(t), un(t)	Samples value of phase voltages U_1, U_2, U_3, U_N.
u12(t), u23(t), u31(t)	Samples value of phase to phase voltages U_{12}, U_{23}, U_{31}.
i1(t), i2(t), i3(t), in(t)	Samples value of phase currents I_1, I_2, I_3, I_N.

U1, U2, U3, Un	True effective half cycle phase voltage $U_{Rms(1/2)}$
U12, U23, U31	True effective half cycle phase to phase voltage $U_{Rms(1/2)}$
I1, I2, I3, In	True effective half cycle value $I_{Rms(1/2)}$

Table 62: Keys in captured waveform recorder screens

F2		Selects between the following options:
	U I U,I U/I	Shows voltage waveform.
	U **I** U,I U/I	Shows current waveform.
	U I **U,I** U/I	Shows voltage and current waveforms (single mode).
	U I U,I **U/I**	Shows voltage and current waveforms (dual mode).
F3		Selects between phase, neutral, all-phases and view:
	1 2 3 N ⅄	Shows waveforms for phase L1.
	1 **2** 3 N ⅄	Shows waveforms for phase L2.
	1 2 **3** N ⅄	Shows waveforms for phase L3.
	1 2 3 **N** ⅄	Shows waveforms for neutral channel.
	1 2 3 N **⅄**	Shows all phases waveforms.
	12 23 31 Δ	Shows waveforms for phase to phase voltage L12.
	12 **23** 31 Δ	Shows waveforms for phase to phase voltage L23.
	12 23 **31** Δ	Shows waveforms for phase to phase voltage L31.
	12 23 31 **Δ**	Shows all phase-to-phase waveforms.
▲ ▼	Sets vertical zoom.	
◀ ▶	Moves cursor.	
ENTER	Toggles between sample value and true effective half cycle value at cursor position. Toggles cursor between voltage and current (only in U,I or U/I).	
ESC	Returns to the “MEMORY LIST” submenu.	

3.16 Transient recorder

*Transient is a term for **short, highly damped** momentary voltage or current disturbance.*

Table 63: Transients on the low voltage network

Rise time	Cause
>100 µs	• Operation of current-limiting fuses (amplitude up to 1 kV – 2 kV) • Activation of capacitors banks for power factor corrections (amplitude up tp 2 -3 times of nominal peak voltage) • Transference of switching transient over voltages from MV to LV across MV/LV transformers by electromagnetic coupling (amplitude up to 1 kV)
1 µs to 100 µs	• Direct lightning stroke on the LV line conductors (amplitude up to 20 kV) • Induction coupling of a lightning stroke in a vicinity of an L line (amplitude up to 6 kV, high energy levels) • Resistive coupling associated with lightning currents flowing in the common earth paths of network (amplitude up to 10 kV) • Transference of transients from MV to LV by capacitive transformer coupling (amplitude up to 6 kV) • Operation of fuses (amplitude up to 2 kV, low energy content generally)
<1 µs	• Local load switching od small inductive currents and short wiring (amplitude up to 2 kV) • Fast transients due to switching in LV by air-gap switches

3.16.1 Power Master XT - MI 2893

A transient recording is recording with the 1 MSamples/sec sampling rate. The principle of measurement is similar to waveform recording, but with higher sampling rate. In contrary to waveform recording, where recording is triggered based on RMS values, trigger in transient recorder is based on sample values.

Notes:

- **To detect voltage transients at 3W connection, GND terminal should be connected according the proposed connection. Trigger selection should be selected as "GND";**
- **To detect voltage transients at Open Delta connection, GND terminal should be connected according the proposed connection. Trigger selection should be selected as "GND". For detecting transients in L2 current, also L2 current clamps should be connected;**
- **Transient measurements (high frequency events) on the secondary side of transformers (current and voltage transient measurements) could suppressed and/or distorted due to narrow frequency response of transformers. Same effect could be also present when measuring transients with the flex current clamps;**
- **For proper current transient measurements, it is obligatory to use fixed current range.**

3.16.1.1 Setup

Transient recorder setup menu is available from:
MAIN MENU → MEASUREMENT SETUP → TRANSIENT SETUP
or

MAIN MENU → RECORDERS → TRANSIENT REC. → F3 (SETUP)

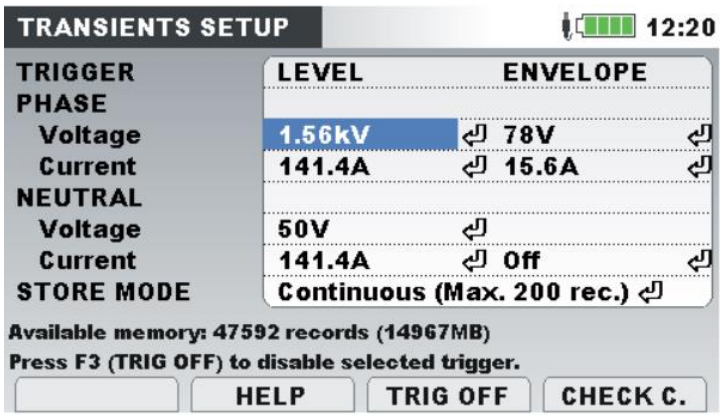

Figure 61: Transient recorder setup screen – MI 2893

Table 64: Transient recorder settings description and screen symbols

	Envelope: Trigger value is based on envelope within voltage/current that is expected. As reference, voltage/current waveform from previous cycle is taken. If current sample is not within envelope, triggering will occur. See 5.1.20 for details. **Phase voltage limits:** Minimum value: 0.0055 * U_{nom} * sqrt(2) Maximum value: 1.1 * U_{nom} * sqrt(2) **Neutral voltage limits** → not available **Phase/Neutral current limits:** Minimum value: 0.0055 * I_{nom} * sqrt(2) Maximum value: 1.1 * I_{nom} * sqrt(2)
Trigger	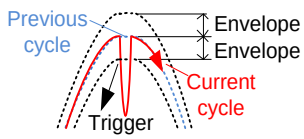 **Level:** Trigger will occur if any sample within period is greater than defined absolute trigger level. Level is defined as absolute expected monitoring value. See 5.1.20 for details. 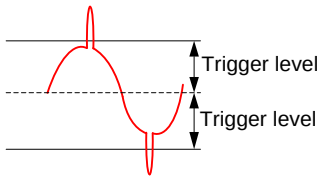 **Phase voltage limits:** Minimum value: U_{nom} Maximum value: 5500 * VT ratio **Neutral voltage limits:**

	Minimum value: 0,0055 * U_{nom} * sqrt(2) Maximum value: 1 V **Phase/Neutral current limits:** Minimum value: 0.1 * sqrt(2) * I_{nom} Maximum value: 1.5 * sqrt(2) * I_{nom}
Trigger type	**PHASE:** **U:** Trigger on transients at active voltage (phase/line) channels **I:** Trigger on transients at active phase current channels **NEUTRAL:** **Un:** Trigger on transients at Ground to Neutral voltage channel **In:** Trigger on transients at Neutral current channel **Note:** Minimum current trigger selection: 10% *I_{nom} * sqrt (2) Maximum current trigger selection: 150%* I_{nom} * sqrt (2)
Store mode	Store mode setup: • **Single** – transient recording ends after first trigger • **Continuous (Max. 1500 rec.)** – consecutive transient recording until user stops the measurement or instrument runs out of storage memory. Every consecutive transient recording will be treated as a separate record. By default, 200 records can be recorded. This value can be changed, if necessary. More than 200 records can slow down the instrument.

Table 65: Keys in Transient recorder setup screen

F2	**HELP**	Show triggering help screens (valid for voltage and current) See 5.1.20 for details. 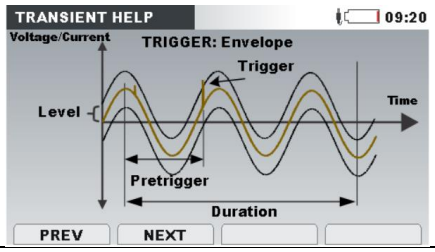
F3	**TRIG OFF**	Deleting the trigger selection
F4	**CHECK C.**	Check connection settings. See *3.21.1* for details.
		Selects parameter to be changed.

◀ ▶	Modifies parameter.
ENTER	Enter into submenu (⏎).
ESC	Returns to the submenu.

3.16.2Power Master/Master Q4 - MI 2892/MI 2885

A transient recording is recording with the 49 kSamples/sec sampling rate.

3.16.2.1 Setup

Transient recorder setup menu is available from:
MAIN MENU → MEASUREMENT SETUP → TRANSIENT SETUP
or
MAIN MENU → RECORDERS → TRANSIENT REC. → F3 (SETUP)

Figure 62: Transient recorder setup screen – MI 2892/MI 2885

Note: only single trigger could be selected. Selecting the trigger, one will automatically deselect other ones.

Table 66: Transient recorder settings description and screen symbols

Trigger	**Envelope:** Trigger value is based on envelope within voltage/current that is expected. As reference, voltage/current waveform from previous cycle is taken. If current sample is not within envelope, triggering will occur. See 5.1.20 for details. **Phase voltage limits:** Minimum value: 0.0055 * U_{nom} * sqrt(2) Maximum value: 1.1 * U_{nom} * sqrt(2) **Neutral voltage limits** → not available **Phase/Neutral current limits:** Minimum value: 0.0055 * I_{nom} * sqrt(2) Maximum value: 1.1 * I_{nom} * sqrt(2)

	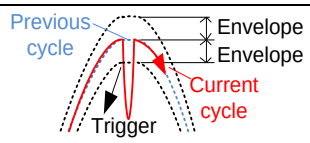 **Level:** Trigger will occur if any sample within period is greater than defined absolute trigger level. Level is defined as absolute expected monitoring value. See 5.1.20 for details. 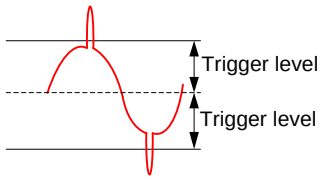 **Phase voltage limits:** Minimum value: U_{nom} Maximum value: 5500 * VT ratio **Neutral voltage limits:** Minimum value: 0,0055 * U_{nom} * sqrt(2) Maximum value: 1 V **Phase/Neutral current limits:** Minimum value: 0.1 * sqrt(2) * I_{nom} Maximum value: 1.5 * sqrt(2) * I_{nom}
Trigger type	**PHASE:** **U:** Trigger on transients at active voltage (phase/line) channels **I:** Trigger on transients at active phase current channels **NEUTRAL:** **Un:** Trigger on transients at Ground to Neutral voltage channel **In:** Trigger on transients at Neutral current channel **Note:** Minimum current trigger selection: 10% *I_{nom} * sqrt (2) Maximum current trigger selection: 150%* I_{nom} * sqrt (2)
Store mode	Store mode setup: • **Single** – transient recording ends after first trigger • **Continuous (Max. 1500 rec.)** – consecutive transient recording until user stops the measurement or instrument runs out of storage memory. Every consecutive transient recording will be treated as a separate record. By default, 200 records can be recorded. This value can be changed, if necessary. More than 200 records can slow down the instrument.
Duration	1, 2, 5, 10, 20, 50 periods (number of capturing periods)
Pretrigger	0, 1, 2, 5, 10, 20 periods (number of capturing periods before trigger)

Table 67: Keys in Transient recorder setup screen

F2	**HELP**	Show triggering help screens (valid for voltage and current) See 5.1.20 for details. 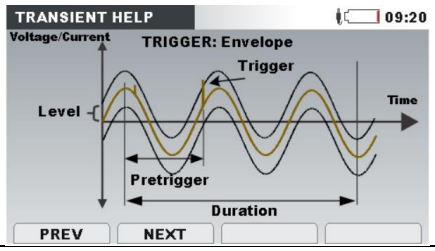
F3	**TRIG OFF**	Deleting the trigger selection
F4	**CHECK C.**	Check connection settings. See *3.21.1* for details.
▲ ▼ ▶ ▶	Selects parameter to be changed.	
◀ ▶	Modifies parameter.	
ENTER	Enter into submenu (⏎).	
ESC	Returns to the submenu.	

3.16.3 Capturing transients

After transient recorder is started, instrument waits for trigger occurrence. This can be seen by observing status bar, where icon (T) is present. If trigger conditions are met, recording will be started.

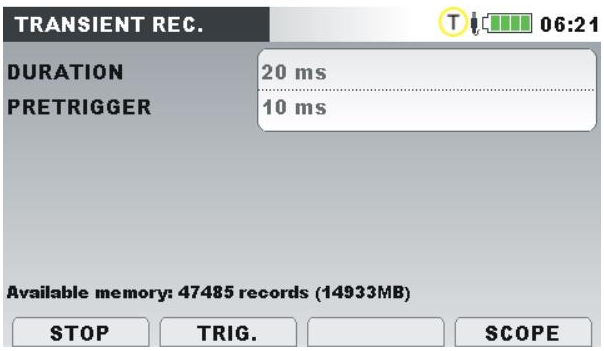

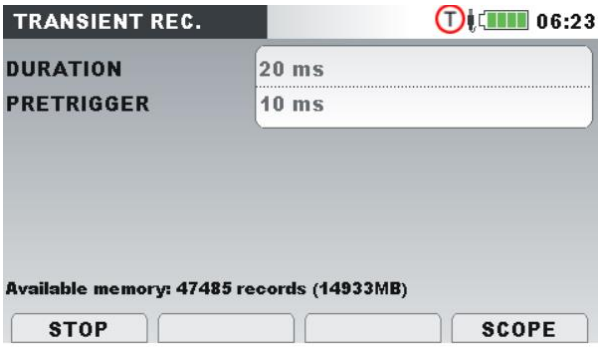

Figure 63: Transient recorder capture screen (waiting phase/recording) – MI 2893

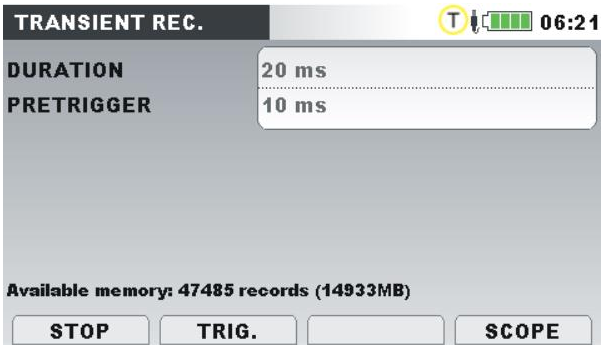

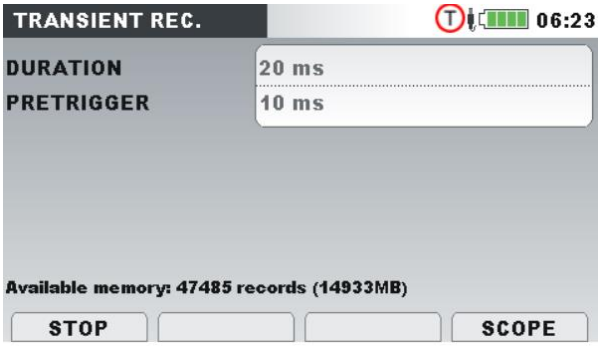

Figure 64: Transient recorder capture screen (waiting phase/recording) – MI 2892/MI 2885

Table 68: Instrument screen symbols and abbreviations

T	Transient recorder is active, waiting for trigger
T	Transient recorder is active, recording in progress
U1, U2, U3, Un	True 1-cycle effective value of phase voltage: U_{1Rms}, U_{2Rms}, U_{3Rms}, U_{NRms}
U12, U23, U31	True 1-cycle effective value of phase-to-phase voltage: U_{12Rms}, U_{23Rms}, U_{31Rms}
I1, I2, I3, In	True 1-cycle effective value of current: I_{1Rms}, I_{2Rms}, I_{3Rms}, I_{NRms}

Table 69: Keys in Transient recorder capture screen

F1	**TRIG.**	Manually generates trigger condition (Active only if recording is in progress).
F2		Selects which waveforms to show:
	U I U,I U/I	Shows voltage waveform.
	U **I** U,I U/I	Shows current waveform.
	U I **U,I** U/I	Shows voltage and current waveforms on single graph.
	U I U,I **U/I**	Shows voltage and current waveforms on separate graphs.
F3		Selects between phase, neutral, all-phases and line view:
	1 2 3 N ⅄	Shows waveforms for phase L1.
	1 **2** 3 N ⅄	Shows waveforms for phase L2.
	1 2 **3** N ⅄	Shows waveforms for phase L3.
	1 2 3 **N** ⅄	Shows waveforms for neutral channel.
	1 2 3 N **⅄**	Shows waveforms for all phases.
	12 23 31 Δ	Shows waveforms for phase to phase voltage L12.
	12 **23** 31 Δ	Shows waveforms for phase to phase voltage L23.
	12 23 **31** Δ	Shows waveforms for phase to phase voltage L31.
	12 23 31 **Δ**	Shows waveforms for all phase-to-phase voltages.
F4	**SETUP**	Switches to SETUP view *(Active only if recording in progress).*
▲ ▼	Sets vertical zoom.	

ENTER	Selects which waveform to zoom (only in U,I or U/I).
ESC	Returns to the “TRANSIENT RECORDER” screen.

3.16.4 Captured transients

Captured transient records can be viewed from the Memory list where captured waveforms can be analysed. Trigger occurrence is marked with the blue line, while cursor position line is marked in black.

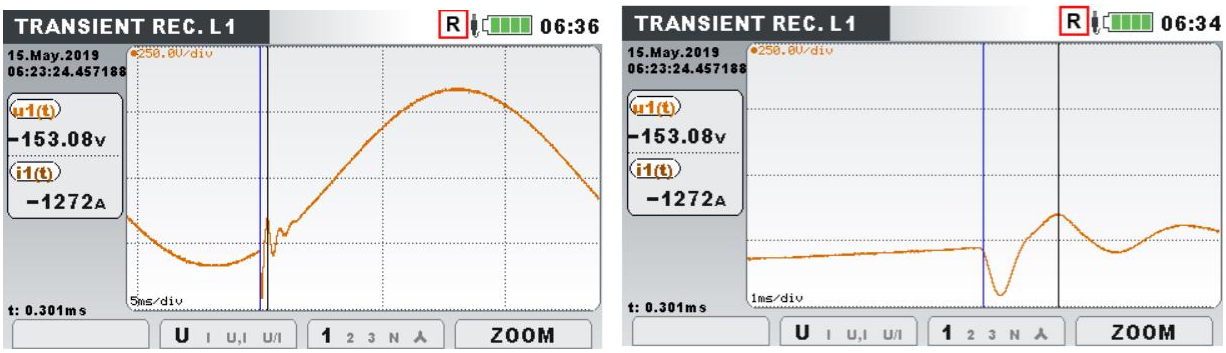

Figure 65: Captured transient recorder screen

Table 70: Instrument screen symbols and abbreviations

R	Memory list recall. Shown screen is recalled from memory
t:	Cursor position regarding to trigger time (blue line on graph)
u1(t), u2(t), u3(t), un(t)	Samples value of phase voltages U_1, U_2, U_3, U_N.
u12(t), u23(t), u31(t)	Samples value of phase to phase voltages U_{12}, U_{23}, U_{31}.
i1(t), i2(t), i3(t), in(t)	Samples value of phase currents I_1, I_2, I_3, I_N.

Table 71: Keys in captured transient recorder screens

F2		Selects between the following options:
	U I U,I U/I	Shows voltage waveform.
	U **I** U,I U/I	Shows current waveform.
	U I **U,I** U/I	Shows voltage and current waveforms (single mode).
	U I U,I **U/I**	Shows voltage and current waveforms (dual mode).
F3		Selects between phase, neutral, all-phases and view:
	1 2 3 N ⅄	Shows waveforms for phase L1.
	1 **2** 3 N ⅄	Shows waveforms for phase L2.
	1 2 **3** N ⅄	Shows waveforms for phase L3.
	1 2 3 **N** ⅄	Shows waveforms for neutral channel.
	1 2 3 N ⅄	Shows waveforms for all phases.
	12 23 31 Δ	Shows waveforms for phase to phase voltage L12.

	12 **23** 31 Δ	Shows waveforms for phase to phase voltage L23.
	12 23 **31** Δ	Shows waveforms for phase to phase voltage L31.
	12 23 31 **Δ**	Shows waveforms for all phase-to-phase voltages.
F4	**ZOOM**	Sets horizontal zoom
▲ ▼	Sets vertical zoom.	
◀ ▶	Moves cursor.	
ENTER	Toggles cursor between voltage and current (only in U,I or U/I).	
ESC	Returns to the “MEMORY LIST” submenu.	

3.17 Events table

In this table captured voltage dips, swells and interrupts are shown. Note that events appear in the table after finishing, when voltage return to the normal value. All events can be grouped according to IEC 61000-4-30. Additionally, for troubleshooting purposes events can be separated by phase. This is toggled by pressing function key F1. Event table is active only during general recording.

3.17.1 Group view

In this view voltage event are grouped according to IEC 61000-4-30 (see section 5.1.12 for details). Table where events are summarized is shown below. Each line in table represents one event, described by event number, event start time, duration and level. Additionally, in colon “T” event characteristics (Type) is shown (see table below for details).

Figure 66: Voltage events in group view screen

By pressing “ENTER” on particular event we can examine event details. Event is split by phase events and sorted by start time.

Figure 67: Voltage event in detail view screen

Table 72: Instrument screen symbols and abbreviations

Date	Date when selected event has occurred
No.	Unified event number (ID)
L	Indicate phase or phase-to-phase voltage where event has occurred: 1 – event on phase U_1 2 – event on phase U_2 3 – event on phase U_3 12 – event on voltage U_{12} 23 – event on voltage U_{23} 31 – event on voltage U_{31} **Note:** This indication is shown only in event details, since one grouped event can have many phase events.
Start	Event start time (when first $U_{Rms(1/2)}$) value crosses threshold.
T	Indicates type of event or transition: D – Dip I – Interrupt S – Swell
Level	Minimal or maximal value in event U_{Dip}, U_{Int}, U_{Swell}
Duration	Event duration.

Table 73: Keys in Events table group view screens

F1	Ph. Ph.	Group view is shown. Press to switch on “PHASE” view. Phase view is shown. Press to switch on “GROUP” view.
F2	ALL INT	Shows all types of events (dips and swell). Interrupts are treated as special case of voltage dip event. START time and Duration in table is referenced to complete voltage event.

ALL INT

Shows poly-phase voltage interrupts only, according to the IEC 61000-4-30 requirements. START time and Duration in table is referenced to voltage interrupt only.

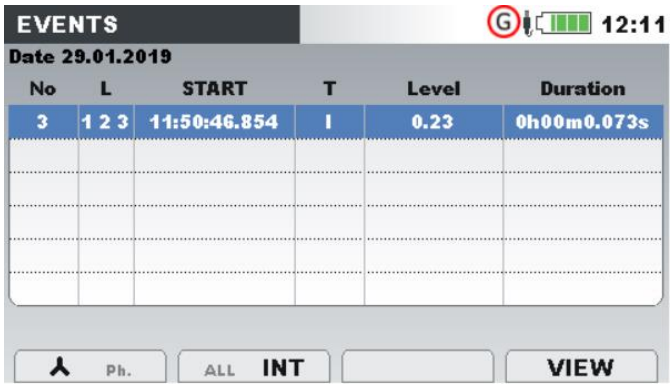

F4 **VIEW**

Shows selected waveform and inrush view.

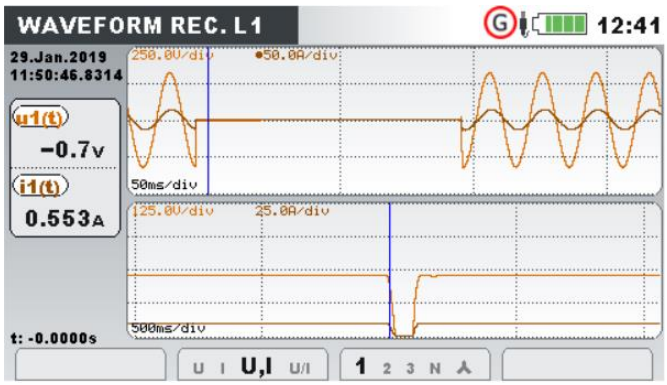

▲ ▼	Selects event.
ENTER	Enters detail event view.
ESC	Returns to Events table group view screen. Returns to “RECORDERS” submenu.

3.17.2Phase view

In this view voltage events are separated by phases. This is convenient view for troubleshooting. Additionally, user can use filters in order to observe only particular type of event on a specific phase. Captured events are shown in a table, where each line contains one phase event. Each event has an

event number, event start time, duration and level. Additionally, in colon “T” type of event is shown (see table below for details).

Figure 68: Voltage events screens

You can also see details of each individual voltage event and waveform/inrush view of all events. Statistics show count registers for each individual event type by phase.

Table 74: Instrument screen symbols and abbreviations

Date	Date when selected event has occurred
No.	Unified event number (ID)
L	Indicate phase or phase-to-phase voltage where event has occurred: 1 – event on phase U_1 2 – event on phase U_2 3 – event on phase U_3 12 – event on voltage U_{12} 23 – event on voltage U_{23} 31 – event on voltage U_{31}
Start	Event start time (when first $U_{Rms(1/2)}$) value crosses threshold.
T	Indicates type of event or transition: D – Dip I – Interrupt S – Swell
Level	Minimal or maximal value in event U_{Dip}, U_{Int}, U_{Swell}
Duration	Event duration.

Table 75: Keys in Events table phase view screens

F1	PH	Group view is shown. Press to switch on “PHASE” view.
	PH	Phase view is shown. Press to switch on “GROUP” view.
F2		Filters events by type:
	DIP INT SWELL	Shows all event types.

	DIP INT SWELL	Shows dips only.
	DIP INT SWELL	Shows interrupts only.
	DIP INT SWELL	Shows swells only.
F3		Filters events by phase:
	1 2 3 T	Shows only events on phase L1.
	1 2 3 T	Shows only events on phase L2.
	1 2 3 T	Shows only events on phase L3.
	1 2 3 T	Shows events on all phases.
	12 23 31 T	Shows only events on phases L12.
	12 23 31 T	Shows only events on phases L23.
	12 23 31 T	Shows only events on phases L31.
	12 23 31 T	Shows events on all phases.
F4	VIEW	Shows selected waveform and inrush view. 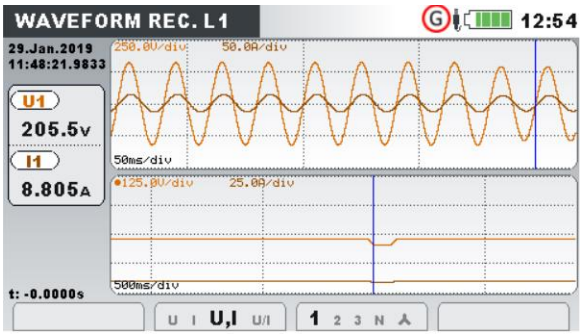
▲ ▼	Selects event.	
ENTER	Enters detail event view.	
ESC	Returns to Events table phase view screen. Returns to the “RECORDERS” submenu.	

3.18 Alarms table

This screen shows list of alarms which went off. Alarms are displayed in a table, where each row represents an alarm. Each alarm is associated with a start time, phase, type, slope, min/max value and duration (see 3.21.3 for alarm setup and 5.1.14 for alarm measurement details).

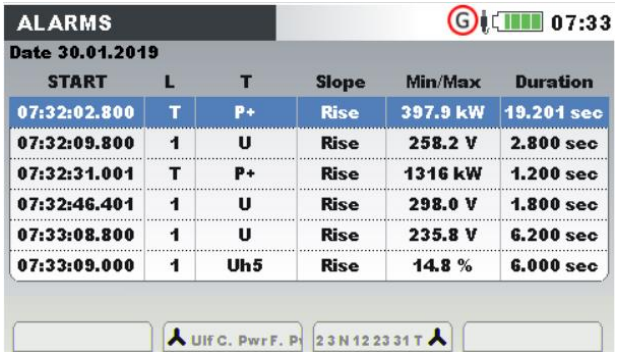

START	L	T	Slope	Min/Max	Duration
07:32:02.800	T	P+	Rise	397.9 kW	19.201 sec
07:32:09.800	1	U	Rise	258.2 V	2.800 sec
07:32:31.001	T	P+	Rise	1316 kW	1.200 sec
07:32:46.401	1	U	Rise	298.0 V	1.800 sec
07:33:08.800	1	U	Rise	235.8 V	6.200 sec
07:33:09.000	1	Uh5	Rise	14.8 %	6.000 sec

Figure 69: Alarms list screen

Table 76: Instrument screen symbols and abbreviations

Date	Date when selected alarm has occurred
Start	Selected alarm start time (when first U_{Rms} value cross threshold)
L	Indicate phase or phase-to-phase voltage where event has occurred: 1 – alarm on phase L_1 2 – alarm on phase L_2 3 – alarm on phase L_3 12 – alarm on line L_{12} 23 – alarm on line L_{23} 31 – alarm on line L_{31}
Slope	Indicates alarms transition: • Rise – parameter has over-crossed threshold • Fall – parameter has under-crossed threshold
Min/Max	Minimal or maximal parameter value during alarm occurrence
Duration	Alarm duration.

Table 77: Keys in Alarms table screens

F2		Filters alarms according to the following parameters:
	UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp	All alarms.
	UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp	Voltage alarms.
	UIF **C. Pwr** F. Pwr NF. Pwr Flick Sym H iH Sig Temp	Combined power alarms.
	UIF C. Pwr **F. Pwr** NF. Pwr Flick Sym H iH Sig Temp	Fundamental power alarms.
	UIF C. Pwr F. Pwr **NF. Pwr** Flick Sym H iH Sig Temp	Nonfundamental power alarms.
	UIF C. Pwr F. Pwr NF. Pwr **Flick** Sym H iH Sig Temp	Flicker alarms.
	UIF C. Pwr F. Pwr NF. Pwr Flick **Sym** H iH Sig Temp	Unbalance alarms.
	UIF C. Pwr F. Pwr NF. Pwr Flick Sym **H** iH Sig Temp	Harmonics alarms.
	UIF C. Pwr F. Pwr NF. Pwr Flick Sym H **iH** Sig Temp	Interharmonics alarms.
	UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH **Sig** Temp	Signalling alarms.
	UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig **Temp**	Temperature alarms.
F3		Filters alarms according to phase on which they

		occurred:
	1 2 3 N 12 23 31 T	Shows only alarms on phase L1.
	1 2 3 N 12 23 31 T	Shows only alarms on phase L2.
	1 2 3 N 12 23 31 T	Shows only alarms on phase L3.
	1 2 3 N 12 23 31 T	Shows only alarms on neutral channel.
	1 2 3 N 12 23 31 T	Shows only alarms on phases L12.
	1 2 3 N 12 23 31 T	Shows only alarms on phases L23.
	1 2 3 N 12 23 31 T	Shows only alarms on phases L31.
	1 2 3 N 12 23 31 T	Shows only alarms on channels which are not channel dependent
	1 2 3 N 12 23 31 T	Shows all alarms.
		Selects an alarm.
ESC		Returns to the “RECORDERS” submenu.

3.19 Rapid voltage changes (RVC) table

In this table captured RVC events are shown. Events appear in the table after finish, when voltage is in the steady state. RVC events are measured and represented according to IEC 61000-4-30. See 5.1.15 for details.

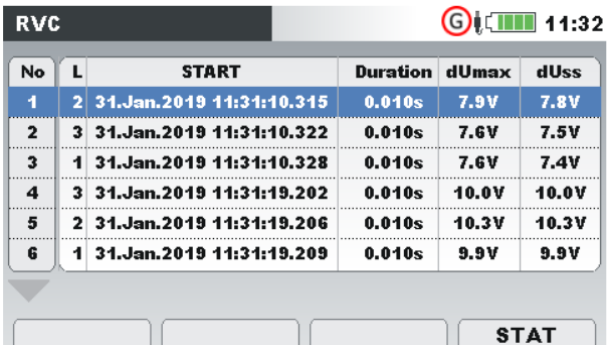

Figure 70: RVC Events table group view screen

Table 78: Instrument screen symbols and abbreviations

No.	Unified event number (ID)
L	Indicate phase or phase-to-phase voltage where event has occurred: 1 – event on phase U_1 2 – event on phase U_2 3 – event on phase U_3 12 – event on voltage U_{12} 23 – event on voltage U_{23} 31 – event on voltage U_{31}
Start	Event start time (when first $U_{Rms(1/2)}$) value crosses threshold.

Duration	Event duration.
dMax	**ΔUmax** - maximum absolute difference between any of the $U_{Rms(1/2)}$ values during the RVC event and the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event.
dUss	**ΔUss** - is the absolute difference between the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event and the first arithmetic mean 100/120 $U_{Rms(1/2)}$ value after the RVC event.

Table 79: Keys in RVC Events table group view screens

F4	**STAT**	Shows event statistics (phase by phase). 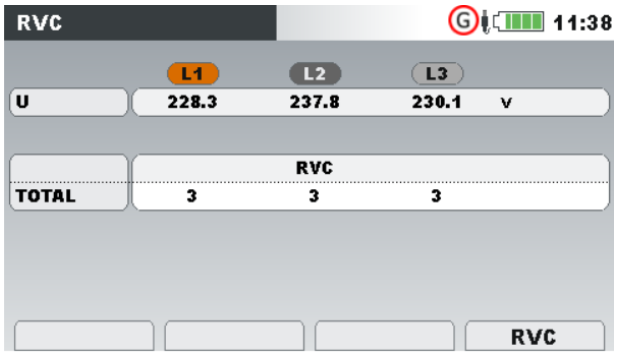
	RVC	Returns to RVC Events table group view screen.
ESC	Returns to RVC Events table group view screen. Returns to "RECORDERS" submenu.	

3.20 Memory List

Using this menu user can view and browse saved records. By entering this menu, information about records is shown.

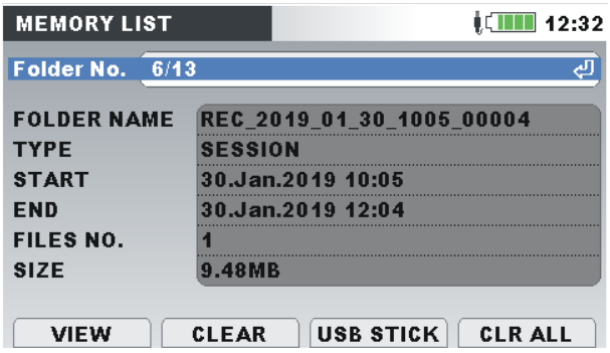

Figure 71: Memory list screen (Folder structure)

Table 80: Instrument screen symbols and abbreviations

Folder No.	Selected Folder number for which details are shown / Number of all folders
FOLDER NAME	Folder name on SD Card. By convention file names are created by following rules:

	REC_YYYY_MM_DD_HHMM_xxxxx, where: • **REC** represent Folder type • **YYYY** represent actual year • **HH** represent actual month • **DD** represent actual day • **HHMM** represent actual hour/minutes • **xxxxx** record number 00000 ÷ 99999 (running index)
TYPE	Indicates type of folder, which can be one of following: • Root (for snapshot data), • Session (for recorded data).
START	Folder creation start time.
END	Folder stop time.
FILES NO.	Number of recorder's and snapshot's files
SIZE	Record size in kilobytes (kB) or megabytes (MB).

Table 81: Keys in Memory list (Folder) screen

F1	**VIEW**	Views details of currently selected folder.
F2	**CLEAR**	Clears selected folder structure.
F3	**USB STICK**	Enable USB memory stick support. 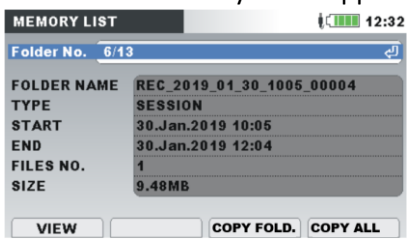 **COPY FOLD.** Copy selected folder to USB **COPY ALL** Copy all data from SD card to USB
F4	**CLR ALL**	Opens confirmation window for clearing all saved records. Keys in confirmation window: ◀ ▶ Selects YES or NO. ENTER Confirms selection. ESC Exits confirmation window without clearing saved records.
◀ ▶	Browses through folders (next or previous folder).	
ESC	Returns to the "RECORDERS" submenu.	

By pressing F1 **(VIEW)** button, details of selected folder are presented:

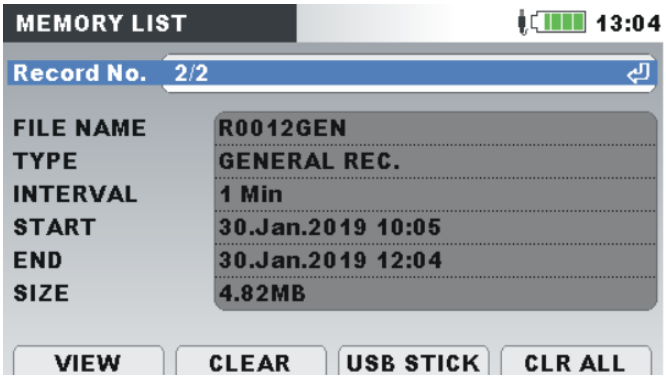

Figure 72: Memory list screen (Recorder data)

Table 82: Instrument screen symbols and abbreviations

Record No	Selected record number, for which details are shown / Number of all records.

FILE NAME	Record name under selected folder structure on SD Card. By convention file names are created by following rules: **Rxxxxyyy.REC**, where:
	• **xxxx** if record number 0000 ÷ 9999
	• **yyy** represent record type
	  ○ WAW – waveform record (samples values)
	  ○ INR – inrush record (RMS values)
	  ○ SNP – waveform snapshot
	  ○ TRA – transient record
	  ○ GEN – general record. General record generates also AVG, EVT, PAR, ALM, SEL files, which can be found on SD Card and are imported into PowerView.

Type	Indicates type of record, which can be one of following: • Snapshot, • Transient record, • Waveform record, • Inrush record, • General record.
Interval	General record recording interval (integration period)
Start	General record start time.
End	General record stop time.
Size	Record size in kilobytes (kB) or megabytes (MB).

Table 83: Keys in Memory list screen

F1	**VIEW**	Views details of currently selected record.
F2	**CLEAR**	Clears selected record.
F3	**USB STICK**	Enable USB memory stick support.

	COPY FOLD. **COPY FILE**	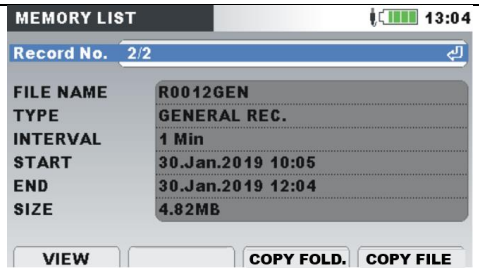 Copy all files from selected folder to USB stick. Copy selected file to USB stick.
F4	**CLR ALL**	Opens confirmation window for clearing all saved records under selected folder. Keys in confirmation window: ◀ ▶ — Selects YES or NO. ENTER — Confirms selection. ESC — Exits confirmation window without clearing saved records.
◀ ▶	Browses through records (next or previous record).	
ESC	Returns to the “Folder” submenu. Returns to the “RECORDERS” submenu.	

3.20.1General Record

This type of record is made by GENERAL RECORDER. Record front page is similar to the GENERAL RECORDER setup screen, as shown on figure below.

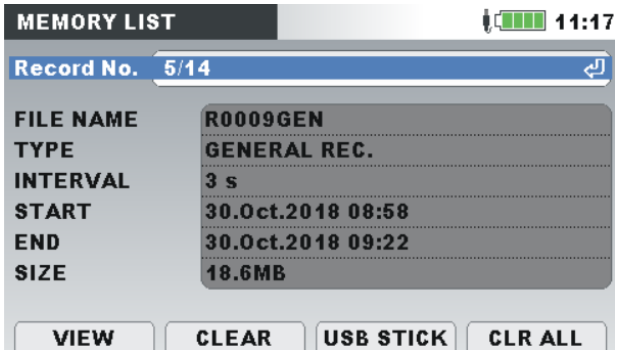

Figure 73: Front page of General record in MEMORY LIST menu

Table 84: Recorder settings description

Record No.	Selected record number, for which details are shown.
FILE NAME	Record name on SD Card
Type	Indicate type of record: General record.
Interval	General record recording interval (integration period)
Start	General record start time.
End	General record stop time.
Size	Record size in kilobytes (kB) or megabytes (MB).

Table 85: Keys in General record front page screen

F1	**VIEW**	Switches to the CHANNELS SETUP menu screen. Particular signal groups can be observed by pressing on F1 key (VIEW). 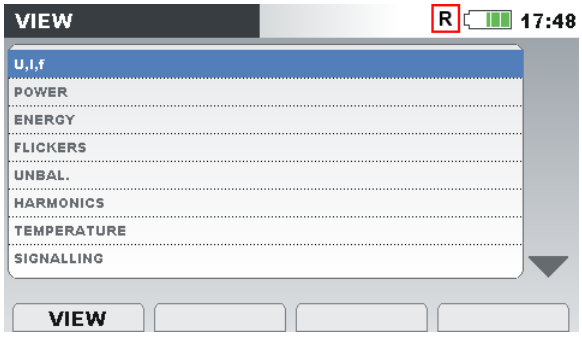 Keys in CHANNELS SETUP menu screen: ▲ ▼ Selects particular signal group.

		F1 ENTER	Enters particular signal group (TREND view).
		ESC	Exits to MEMORY LIST menu.
F2	**CLEAR**	Clears the last record. In order to clear complete memory, delete records one by one.	
F4	**CLR ALL**	Opens confirmation window for clearing all saved records. Keys in confirmation window:	
		◀ ▶	Selects YES or NO.
		ENTER	Confirms selection.
		ESC	Exits confirmation window without clearing saved records.
◀ ▶	Browses through records (next or previous record).		
▲ ▼	Selects parameter (only in CHANNELS SETUP menu).		
ESC	Returns to the “RECORDERS” submenu.		

By pressing F1 **VIEW**, in CHANNELS SETUP menu, TREND graph of selected channel group will appear on the screen. Typical screen is shown on figure below.

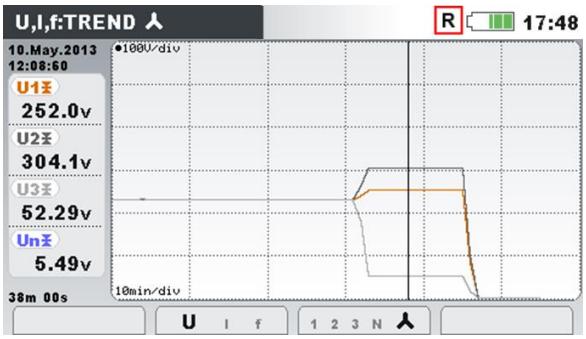

Figure 74: Viewing recorder U,I,f TREND data

Table 86: Instrument screen symbols and abbreviations

R	Memory list recall. Shown screen is recalled from memory.
|	Indicates position of the cursor at the graph.
U1, U2 U3, Un:	Maximal (▲), average (⧗) and minimal (▼) recorded value of phase voltage U_{1Rms}, U_{2Rms}, U_{3Rms}, U_{NRms}, for time interval selected by cursor.
U12, U23, U31	Maximal (▲), average (⧗) and minimal (▼) recorded value of phase-to-phase

	voltage U_{12Rms}, U_{23Rms}, U_{31Rms} for time interval selected by cursor.
Ip:	Maximal (▲), average (⧗) and minimal (▼) recorded value of current I_{1Rms}, I_{2Rms}, I_{3Rms}, I_{NRms}, for time interval selected by cursor.
38m 00s	Time position of cursor regarding to the record start time.
10.May.2013 12:08:50	Time clock at cursor position.

Table 87: Keys in Viewing recorder U,I,f TREND screens

F2		Selects between the following options:
	U I f U,I U/I	Shows voltage trend.
	U **I** f U,I U/I	Shows current trend.
	U I **f** U,I U/I	Shows frequency trend.
	U I f **U,I** U/I	Shows voltage and current trends (single mode).
	U I f U,I **U/I**	Shows voltage and current trends (dual mode).
F3		Selects between phase, neutral, all-phases and view:
	1 2 3 N ⅄	Shows trend for phase L1.
	1 **2** 3 N ⅄	Shows trend for phase L2.
	1 2 **3** N ⅄	Shows trend for phase L3.
	1 2 3 **N** ⅄	Shows trend for neutral channel.
	1 2 3 N **⅄**	Shows all phases trends.
	12 23 31 Δ	Shows trend for phases L12.
	12 **23** 31 Δ	Shows trend for phases L23.
	12 23 **31** Δ	Shows trend for phases L31.
	12 23 31 **Δ**	Shows all phase to phase trends.
◀ ▶	Moves cursor and select time interval (IP) for observation.	
ESC	Returns to the “CHANNELS SETUP” menu screen.	

Note: Other recorded data (power, harmonics, etc.) has similar manipulation principle as described in previous sections of this manual.

3.20.2Waveform snapshot

This type of record can be made by using key (press and hold key). Snapshot is performed only on the measurement screens.

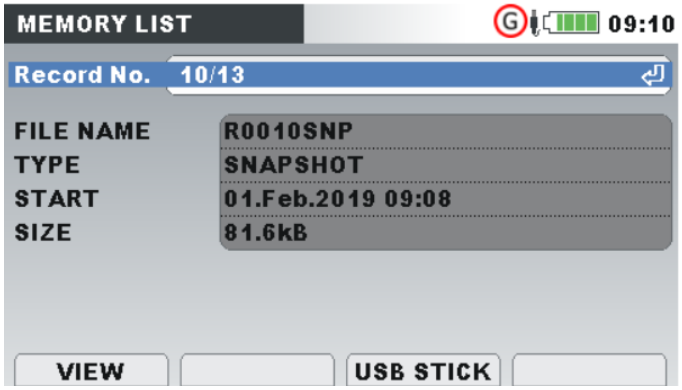

Figure 75: Front page of Snapshot in MEMORY LIST menu

Table 88: Recorder settings description

Record No.	Selected record number, for which details are shown.
FILE NAME	Record name on SD Card
Type	Indicate type of record: • Snapshot.
Start	Record start time.
Size	Record size in kilobytes (kB).

Table 89: Keys in Snapshot record front page screen

F1	**VIEW**	Switches to CHANNELS SETUP menu screen. Particular signal group can be observed by pressing on F1 key (VIEW). Keys in CHANNELS SETUP menu screen: ▲▼ Selects particular signal group. F1 Enters particular signal group

		ENTER	(METER or SCOPE view).
		ESC	Exits to MEMORY LIST menu.
F3	**USB STICK**	Enable USB memory stick support. 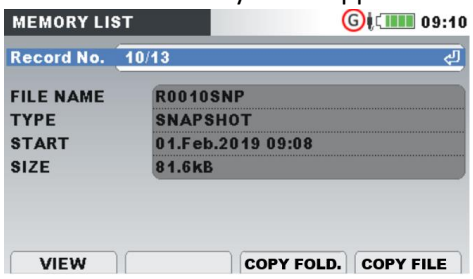	
	COPY FOLD.	Copy all files from selected folder to USB stick.	
	COPY FILE	Copy selected file to USB stick.	
◀ ▶	Browses through records (next or previous record).		
ESC	Returns to the “Folder” submenu. Returns to the “RECORDERS” submenu.		

By pressing F1 **VIEW** in CHANNELS SETUP menu METER screen will appear. Typical screen is shown on figure below.

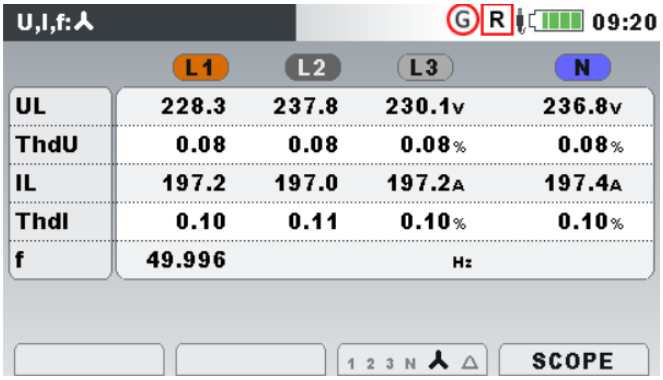

Figure 76: U,I,f meter screen in recalled snapshot record

Note: For more details regarding manipulation and data observing see previous sections of this manual.
Note: Initial WAVEFORM SNAPSHOT is automatically created at the start of GENERAL RECORDER.

3.20.3 Waveform/inrush record

This type of record is made by Waveform recorder. For details regarding manipulation and data observing see section Captured waveform 3.15.3.

3.20.4 Transients record

This type of record is made by Transient recorder. For details regarding manipulation and data observing see section 3.16.4.

3.21 Measurement Setup submenu

From the “MEASUREMENT SETUP” submenu measurement parameters can be reviewed, configured and saved.

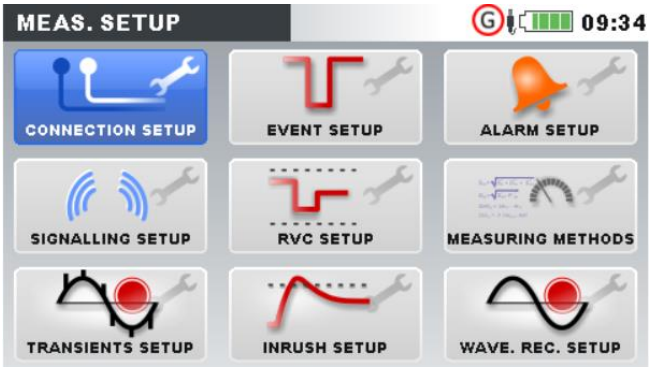

Figure 77: MEASUREMENT SETUP submenu

Table 90: Description of Measurement setup options

Connection setup	Setup measurement parameters.
Event setup	Setup event parameters.
Alarm setup	Setup alarm parameters.
Signalling setup	Setup signalling parameters.
RVC setup	Setup RVC parameters.
Measuring methods	Selection of measurement method (Modern (IEEE 1459), Classic (Vector), Classic (Arithmetic)).
Transient setup	Setup of parameters for Transient recorder.
Inrush setup	Setup of parameters for Waveform/Inrush recorder.
Wave. Rec. setup	Setup of parameters for Waveform/Inrush recorder.

Table 91: Keys in Measurement setup submenu screen

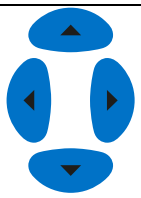	Selects option from the “MEASUREMENT SETUP” submenu.
ENTER	Enters the selected option.
ESC	Returns to the “MAIN MENU” screen.

3.21.1 Connection setup

In this menu user can setup connection parameters, such as nominal voltage, frequency, etc. After all parameters are provided, instrument will check if given parameters complies with measurements. In case of incompatibility instrument will show Connection check warning (✗) before leaving menu.

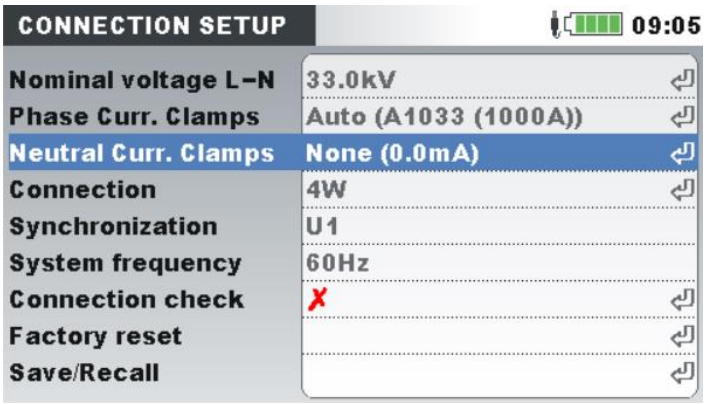

Figure 78: "CONNECTION SETUP" screen

Table 92: Description of Connection setup

Nominal voltage	Set nominal voltage according to the network voltage. If voltage is measured over potential transformer then press ENTER for setting transformer parameters: 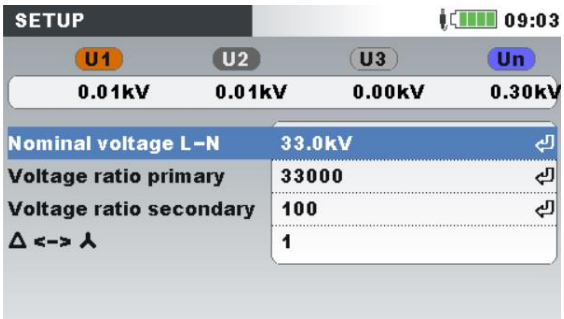 **Voltage ratio:** Potential transformer ratio **Δ ↔ ⅄:** Transformer type: Primary / Secondary / Symbol / Additional transformer ratio Delta / Star / Δ→⅄ / $1/\sqrt{3}$ Star / Delta / ⅄→Δ / $\sqrt{3}$ Star / Star / ⅄→⅄ / 1 Delta / Delta / Δ→Δ / 1 **Note:** Instrument can always measure accurately at up to 150% of selected nominal voltage.
Phase Curr. Clamps **Neutral Curr. Clamps**	Selects phase current clamps for phase current inputs. Selects neutral current clamps for neutral current input.

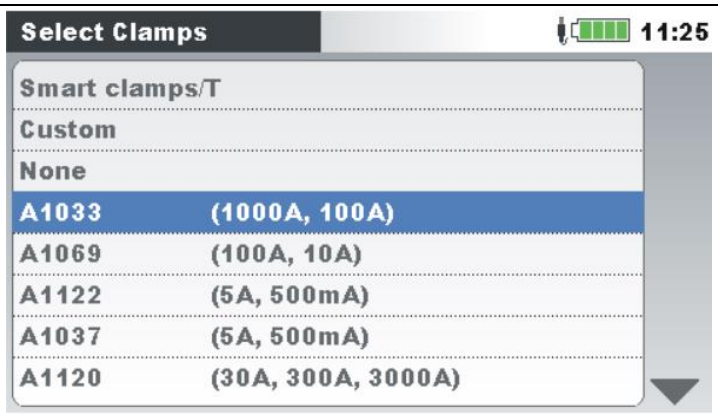

Note: For Smart clamps (A 1502, A 1227, A 1281, …) always select "Smart clamps". Check in the Metrel General Catalogue, which clamps are developed as "Smart clamps).

Note: Use "None" option for voltage measurements only.

Note: See section 4.2.3 for details regarding further clamps settings.

Connection

Method of connecting the instrument to multi-phase systems (see 4.2.1 for details).

- **1W**: 1-phase 3-wire system;

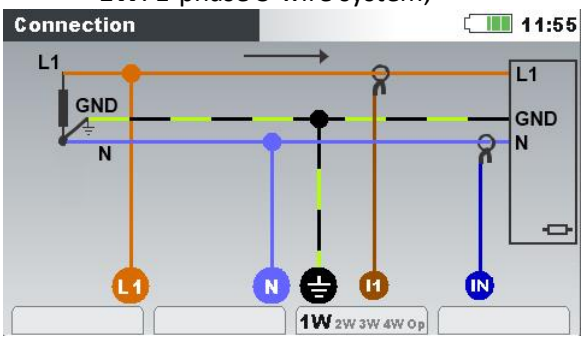

- **2W**: 2-phase 4-wire system;

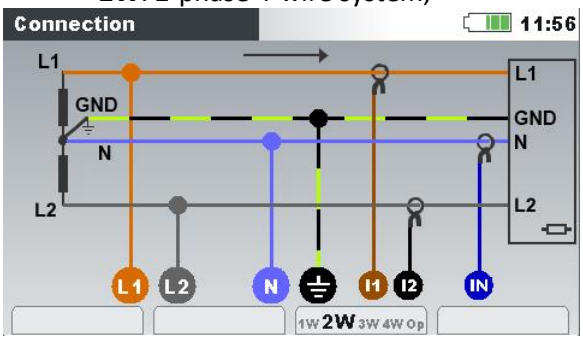

- **3W**: 3-phase 3-wire system;

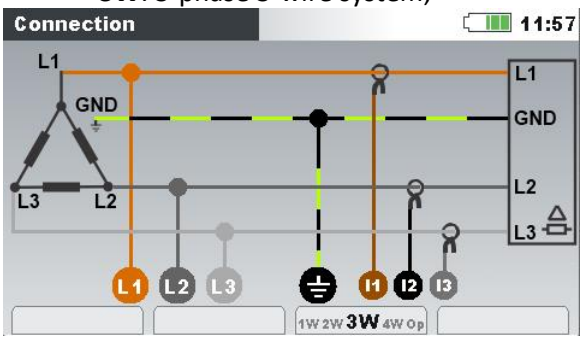

- **4W**: 3-phase 4-wire system;

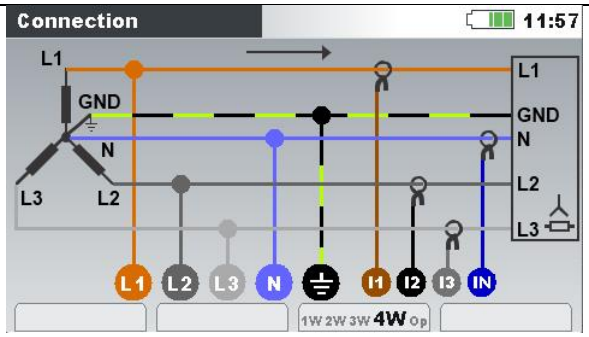

- **OpenD**: 3-phase 2 -wire (Open Delta) system.

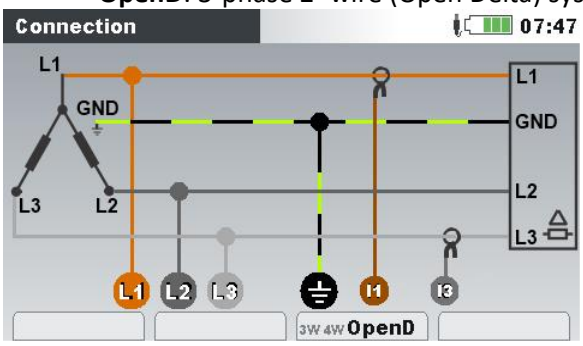

- **INV1W**: Single phase invertor connection.

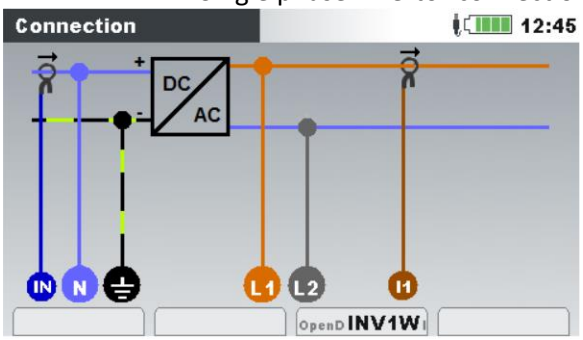

- **INV3W**: Single phase invertor connection.

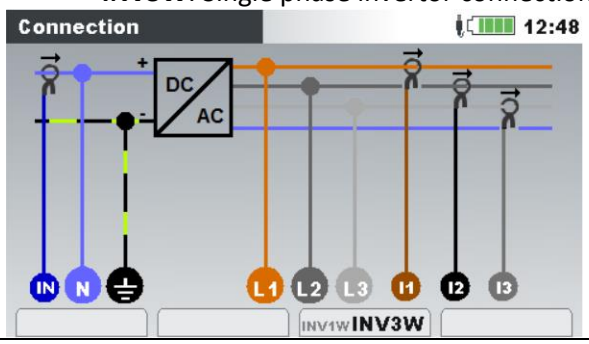

Synchronization	Synchronization channel. This channel is used for instrument synchronization to the network frequency. Also, a frequency measurement is performed on that channel. Depending on **Connection** user can select: • **1W, 2W, 4W, INV1W**: U1 or I1. • **3W, OpenD, INV3W**: U12, or I1.

System frequency	Select system frequency. According to this setting 10 or 12 cycle interval will be used for calculus (according to IEC 61000-4-30) at 50/60Hz: • 50 Hz – 10 cycle intervals • 60 Hz – 12 cycle intervals • 400 Hz – 50 cycle intervals • VFD – Variable frequency drive (5 ÷ 120 Hz) – 5 cycle intervals
Connection check	Check if measurement results comply with given limits. **Connection check** ✓ ⏎ Connection check is marked with green OK sign (✓) if instrument is connected properly and measurement comply with given measurement setup. Connection check is marked with yellow OK sign (✓), indicate that some measurements are at the edge of the measurement setup specification. This does not mean that something is necessary wrong, but require user attention to double check connection and instrument settings. Press F4 to check LIMITS. Fail sign (✗) indicate that that instrument is connected incorrectly or measurement setup does not correspond with measured value. In this case it is necessary to readjust measurement settings, and check instrument connections. By pressing ENTER key, detailed Connection check will be shown. 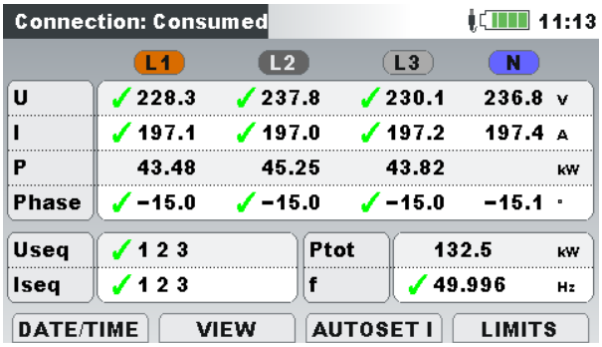 See section 4.2.4 for details, how to use this menu.

F1	**DATE/TIME**	Set actual Date & Time and Time zone
F2	**VIEW**	Set Consumed or Generated view
F3	**AUTOSET I**	Set the auto check procedure for defining the optimal range of current clamps
F4	**LIMITS**	Predefined limits for the measurement result evaluation

	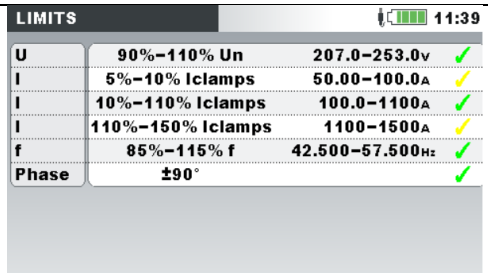
Default parameters	Set factory default parameters. These are: Nominal voltage: 230V (L-N); Voltage ratio: 1:1; Δ ↔ ⅄: 1 Phase current clamps: Smart Clamps; Neutral current clamps: Smart Clamps; Connection: 4W; Synchronization: U1 System frequency: 50 Hz. Dip voltage: 90% U_{Nom} Interrupt voltage: 5% U_{Nom} Swell voltage: 110% U_{Nom} Signalling frequency1: 316 Hz Signalling frequency2:1060 Hz Signalling record duration: 10 sec Signalling threshold: 5% of nominal voltage RVC threshold: 3% of nominal voltage RVC hysteresis: 25% Measuring method: Modern (IEEE 1459) Clear Alarm setup table Record organisation: Folder Record starting time: Rounded Transient select: GND Waveform recorder setup: Event

Table 93: Keys in Connection setup menu

	Selects Connection setup parameter to be modified.
	Changes selected parameter value.
	Enters into submenu. Confirms Factory reset.
	Depends from Connection check status. **Connection check** ✓ ⏎ For: • OK sign (✓, ✓) Returns to the “MEASUREMENT SETUP” submenu. • Fail sign (✗) enter into “CONNECTION CHECK” submenu. It is expected that user will resolve this issue before continuing with measurements.

Press ESC again in order to leave “CONNECTION CHECK” menu.

3.21.2 Event setup

In this menu user can setup voltage events and their parameters. See 5.1.12 for further details regarding measurement methods. Captured events can be observed through EVENTS TABLE screen. See 3.17 and 5.1.12 for details.

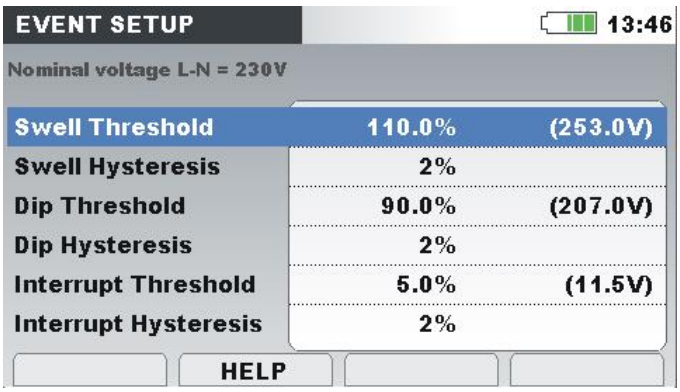

Figure 79: Event setup screen

Table 94: Description of Event setup

Nominal voltage	Indication of type (L-N or L-L) and value of nominal voltage.
Swell Threshold	Set swell threshold value in % of nominal voltage.
Swell Hysteresis	Set swell hysteresis value in % of nominal voltage.
Dip Threshold	Set dip threshold value in % of nominal voltage.
Dip Hysteresis	Set dip hysteresis value in in % of nominal voltage.
Interrupt Threshold	Set interrupt threshold value in % of nominal voltage.
Interrupt Hysteresis	Set interrupt hysteresis in % of nominal voltage.

Table 95: Keys in Event setup screen

F2 **HELP**	Shows help screens for Dip, Swell and Interrupt. See 5.1.13 for details. 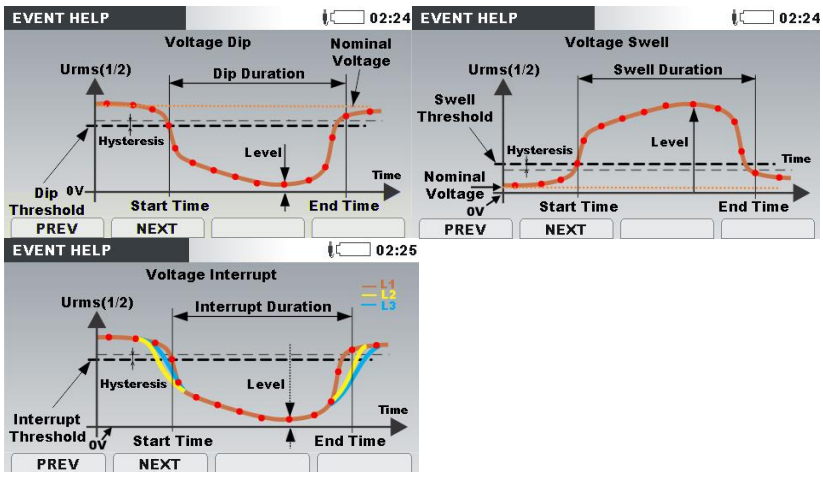 Keys in CHANNELS SETUP menu screen:

	F1	**PREV**	Previous help screen
	F2	**NEXT**	Next help screen
	◀ ▶	Move between help screens.	
	ENTER / ESC	Move back to EVENT SETUP screen	
▲ ▼	Selects Voltage events setup. parameter to be modified		
◀ ▶	Changes selected parameter value.		
ESC	Returns to the “MEASUREMENT SETUP” submenu.		

3.21.3 Alarm setup

Up to 7 different alarms, based on any measurement quantity which is measured by instrument, can be defined. See 5.1.14 for further details regarding measurement methods. Captured events can be observed through ALARMS TABLE screens. See 3.18 and 5.1.14 for details.

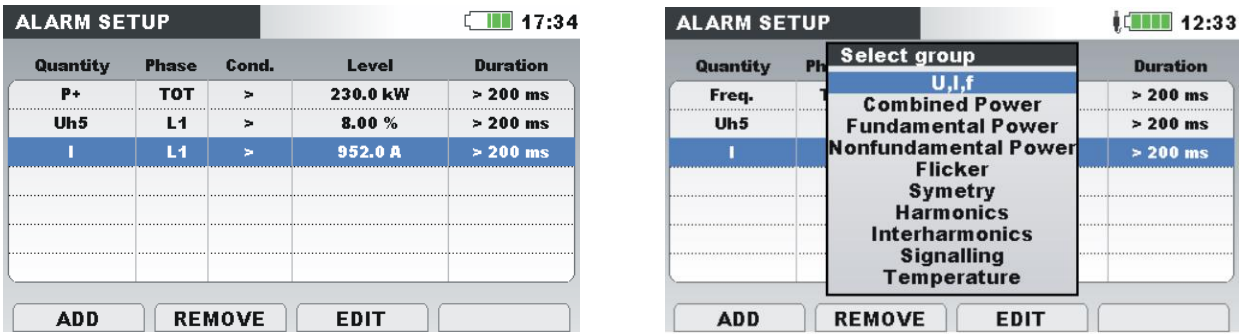

Figure 80: Alarm setup screens

Table 96: Description of Alarm setup

1st column - Quantity (P+, Uh5, I, on figure above)	Select alarm from measurement group and then measurement itself. Select group: U,I,f; Power; Flicker; Symetry; Harmonics; Interharmonics; SIGNALLING; Temperature Select quantity: Pstmin; Pst; Plt
2nd column - Phase (TOT, L1, on figure above)	Select phases for alarms capturing • L1 – alarms on phase L_1; • L2 – alarms on phase L_2; • L3 – alarms on phase L_3; • LN – alarms on phase N; • L12 – alarms on line L_{12};

	• L23 – alarms on line L_{23}; • L31 – alarm on line L_{31}; • ALL – alarms on any phase; • TOT – alarms on power totals or non-phase measurements (frequency, unbalance).
3rd column - Condition (“>” on figure above)	Select triggering method: < trigger when measured quantity is lower than threshold (FALL); > trigger when measured quantity is higher than threshold (RISE);
4th column - Level	Threshold value.
5th column - Duration	Minimal alarm duration. Triggers only if threshold is crossed for a defined period of time. **Note:** It is recommended that for flicker measurement, recorder is set to 10 min.

Table 97: Keys in Alarm setup screens

F1	**ADD**	Adds new alarm.
F2	**REMOVE**	Clears selected or all alarms: Select option Remove SELECTED Remove ALL
F3	**EDIT**	Edits selected alarm.
ENTER	Enters or exits a submenu to set an alarm.	
◀ ▶	Cursor keys. Selects parameter or changes value.	
▲ ▼	Cursor keys. Selects parameter or changes value.	
ESC	Confirms setting of an alarm. Returns to the “MEASUREMENT SETUP” submenu.	

3.21.4 Signalling setup

Mains signalling voltage, called “ripple control signal” in certain applications, is a burst of signals, often applied at a non-harmonic frequency, that remotely control industrial equipment, revenue meters, and other devices.
Two different signalling frequencies can be defined. Signals can be used as a source for the user defined alarm and can also be included in recording. See section 3.21.3 for details how to set-up alarms. See section 3.14 for instructions how to start recording.

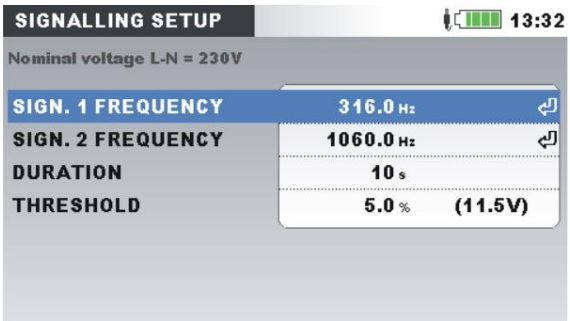

Figure 81: Signalling setup screen

Table 98: Description of Signalling setup

Nominal voltage	Indication of type (L-N or L-L) and value of nominal voltage.
SIGN. 1 FREQUENCY	1st observed signalling frequency.
SIGN. 2 FREQUENCY	2nd observed signalling frequency.
DURATION	Duration of RMS record, which will be captured after treshold value is reached.
THRESHOLD	Threshold value expressed in % of nominal voltage, which will trigger recording of signalling event.

Table 99: Keys in Signalling setup screen

ENTER	Enters or exits a submenu to set signalling frequency.
▲ ▼	Toggles between given parameters.
◀ ▶	Changes selected parameter.
ESC	Returns to the “MEASUREMENT SETUP” submenu.

3.21.5 Rapid voltage changes (RVC) setup

RVC is a quick transition in RMS voltage occurring between two steady-state conditions, and during which the RMS voltage does not exceed the dip/swell thresholds.
A voltage is in a steady-state condition if all the immediately preceding 100/120 $U_{Rms(½)}$ values remain within a set RVC threshold from the arithmetic mean of those 100/120 $U_{Rms(½)}$ (100 values for 50 Hz nominal and 120 values for 60 Hz). The RVC threshold is set by the user according to the application, as a percentage of U_{Nom}, within 1 ÷ 6 %. See section 5.1.15 for details regarding RVC measurement. See section 3.14 for instructions how to start recording.

Figure 82: RVC setup screen

Table 100: Description of RVC setup

Nominal voltage	Indication of type (L-N or L-L) and value of nominal voltage.
RVC THRESHOLD	RVC threshold value expressed in % of nominal voltage for steady state voltage detection.
RVC HYSTERESIS	RVC hysteresis value expressed in % of RVC threshold.

Table 101: Keys in RVC setup screen

▲ ▼	Toggles between given parameters.
◀ ▶	Changes selected parameter.
ESC	Returns to the “MEASUREMENT SETUP” submenu.

3.21.6 Measuring Methods setup

In this menu different measurement methods, file structure on the SD card, type of recording start time and transient selection can be selected, according to the local standards and practice. See section 5.1.5 for Modern Power measurement and 5.1.6 for Classic Vector and Arithmetic Power measurement details. Please note that instrument record all measurement (Classic and Modern), regardless of selected method.

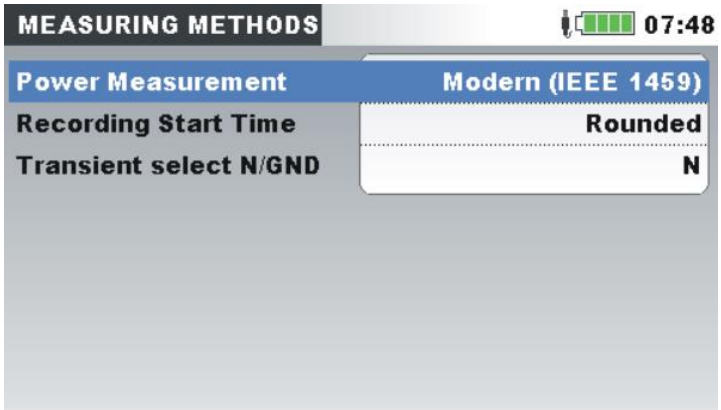

Figure 83: Measuring Methods setup screen – MI 2893

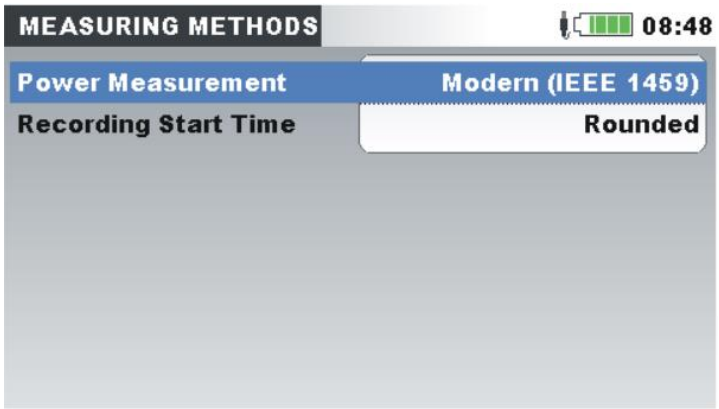

Figure 84: Measuring Methods setup screen – MI 2892/MI 2885

Table 102: Description of Measuring Methods setup

Power Measurements	**Modern (IEEE 1459)** measuring method. See section 5.1.5 for details. **Classic (Vector)** measuring method. See section 5.1.6 for details. **Classic (Arithmetic)** measuring method. See section 5.1.6 for details.
Record Start Time	***Selection Recorder Start Time:*** • Rounded – recorder start is postponed and synchronized with the clock (integer periods in one-hour period) • Immediately – recorder starts on the next minute
Transient select N/GND	Transient selection measurement between Phase - Neutral or Phase – Ground (MI 2893 only)

Table 103: Keys in Measuring Methods setup screen

▲ ▼	Toggles between given parameters.
◀ ▶	Changes selected parameter.
ESC	Returns to the "MEASUREMENT SETUP" submenu.

3.21.7 Transient setup

Note:
MI 2893 – Transient Recorder runs simultaneously with General Recorder
MI 2892/MI 2885 – Transient Recorder runs as independent recorder (could not run simultaneously with General Recorder).

In this menu parameters for transient trigger could be selected. It is possible to select trigger for:

- Phase voltage,
- Phase current,

- Neutral voltage,
- Neutral current.

Two different type of trigger could be defined:

- Selection to the voltage/current level,
- Envelope.

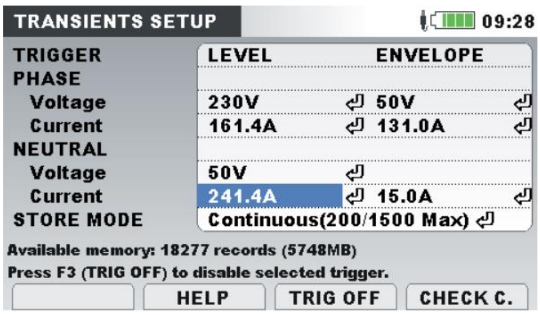

Figure 85: Transient setup screen – MI 2893

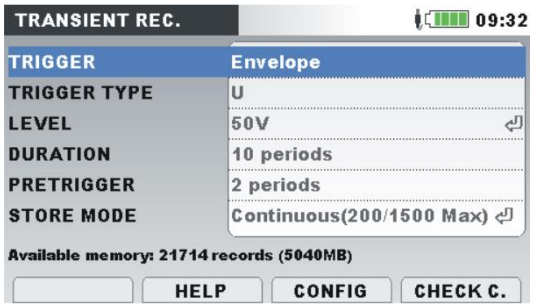

Figure 86: Transient setup screen – MI 2892/MI 2885

Note:
MI 2893 – all triggers could be activated at the same time

MI 2892/MI 2885 - only one trigger is available: Envelope: U or U_n or I or I_n; Level: U or U_n or I or I_n

Table 104: Description of Transient setup

Help	Show triggering help screens. See 5.1.20 for details. 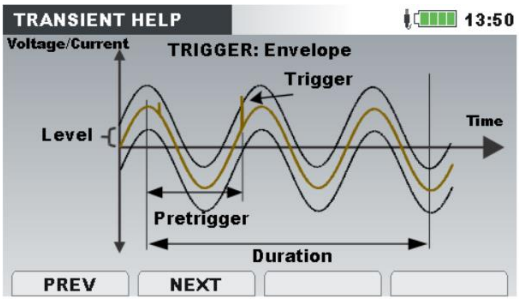
TRIG OFF	Deleting the trigger selection.
CHECK C.	Check connection settings. See 3.21.1 for details.

3.22 General Setup submenu

From the “GENERAL SETUP” submenu communication parameters, real clock time, language, lock/unlock and colour model can be reviewed, configured and saved.

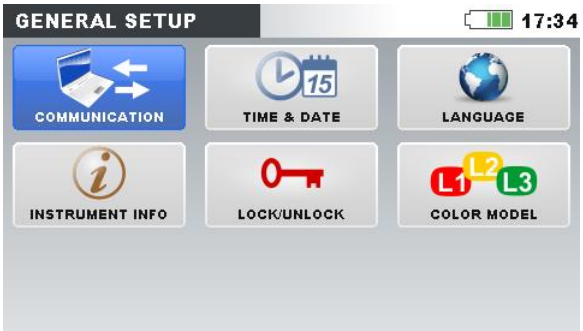

Figure 87: GENERAL SETUP submenu

Table 105: Description of General setup options

Communication	Setup communication source.
Time & Date	Set time, date and time zone.
Language	Select language.
Instrument info	Information about the instrument.
Lock/Unlock	Lock instrument to prevent unauthorized access.
Colour Model	Select colours for displaying phase measurements.

Table 106: Keys in General setup submenu

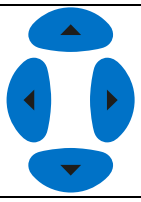	Selects option from the “GENERAL SETUP” submenu.
ENTER	Enters the selected option.
ESC	Returns to the “MAIN MENU” screen.

3.22.1 Communication

In this menu user can select instrument communication interface. There are four possibilities:

- USB communication. Instrument is connected to PC by USB communication cable
- INTERNET communication. Instrument is connected to the internet, through local area network (Ethernet LAN). PowerView access to the instrument is made over internet and Metrel GPRS Relay server. See section 4.3 for details.
- INTERNET (3G, GPRS). Instrument is connected to the internet over 3G or GPRS. This option minimises internet 3G traffic with Metrel GPRS Relay server and PowerView, in order to reduce link cost. Instrument in idle state (while not connected to the PowerView) consume about 5MB/per day. See section 4.3 for details.

- INTERNET (LAN). Instrument is connected to the internet, through local area network (Ethernet LAN). IP address, Net mask, Primary DNS, Secondary DNS and Gateway are defined manually (DHCP disabled) or automatically (DHCP enabled). Port number should be defined manually. PowerView access to the instrument is made over internet. See section 4.3 for details.

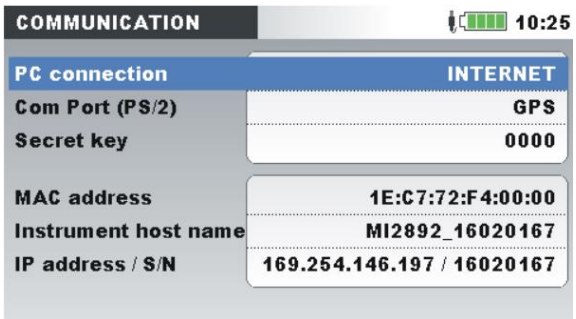

Figure 88: Communication setup screen

Table 107: Description of Communication setup options

PC connection	Select USB or INTERNET, INTERNET (3G / GPRS), INTRANET (LAN) communication port.
Com Port (PS/2)	Select GPS or MI 3108 / MI 3109 communication. GPS is used for A 1355 GPS receiver, and MI 3108 / MI 3109 for photovoltaics inverter measurements (See MI 3108/ MI 3109 User manual).
Modem used in A 1565	Select this option if A 1622 WiFi / 3G modem is used within A 1565 Waterproof case for outdoor application and recordings
DHCP	Select Enabled in order to enable automatic network parameters assignment. Select Disabled in order to enter them manually. 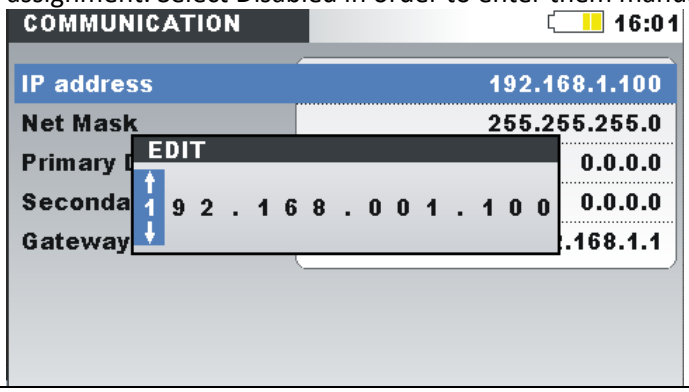
Secret key	Valid only if INTERNET communication is selected. Secret number will assure additional protection of communication link. Same number should be entered in PowerView v3.0, before connection establishment.
MAC address	Instrument Ethernet MAC address.
Instrument host name	Instrument host name.
Instrument IP address	Instrument IP address.

Note: For more information regarding configuration, how to download data, view real time measuring data on PowerView and establish Remote instrument connection with PowerView over internet and USB communication interfaces, see section 4.3 and PowerView Instruction manual.

Table 108: Keys in Communication setup

	Changes communication source: USB, INTERNET, INTERNET (3G, GPRS) Moves cursor position during entering Secret key.
	Cursor keys. Selects parameter. Changes Secret key number.
ENTER	Enters Secret key edit window.
ESC	Returns to the "GENERAL SETUP" submenu.

3.22.2 Time & Date

Time, date and time zone can be set in this menu.

3.22.3 Time & Date

Figure 89: Set date/time screen

Table 109: Description of Set date/time screen

Clock source	Show clock source: RTC – internal real time clock GPS – external GPS receiver **Note:** GPS clock source is automatically set if GPS is enabled and detected.
Time zone	Selects time zone. **Note:** MI 2893/MI 2892/MI 2885 has the ability to synchronize its system time clock with Coordinated Universal Time (UTC time) provided by externally connected GPS module. In that case only time zone (in 15 min intervals) can be adjusted. In order to use this functionality, see 4.2.6.
Current Time & Date	Show/edit current time and date (valid only if RTC is used as time source)

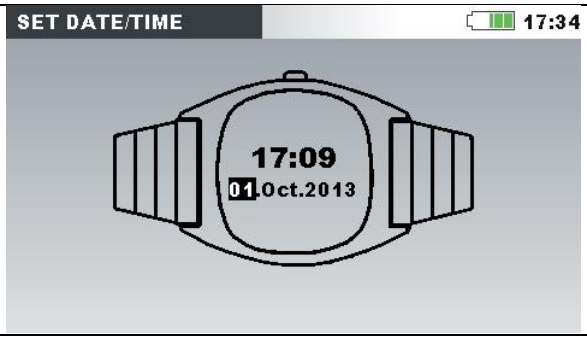

Table 110: Keys in Set date/time screen

▲ ▼	Selects parameter to be changed.
◀ ▶	Modifies parameter. Selects between the following parameters: hour, minute, second, day, month or year.
ENTER	Enters Date/time edit window.
ESC	Returns to the “GENERAL SETUP” submenu.

3.22.4 Language

Different languages can be selected in this menu.

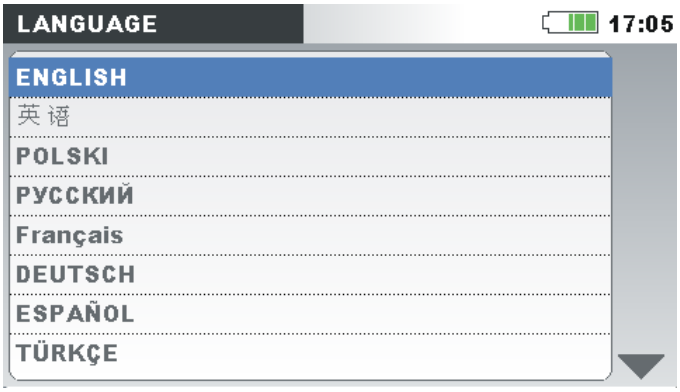

Figure 90: Language setup screen

Table 111: Keys in Language setup screen

▲ ▼	Selects language.
ENTER	Confirms the selected language.
ESC	Returns to the “GENERAL SETUP” submenu.

3.22.5 Instrument info

Basic information concerning the instrument (company, user data, serial number, firmware and hardware version, transient module firmware, hardware versiona and instrument calibration date) can be viewed in this menu.

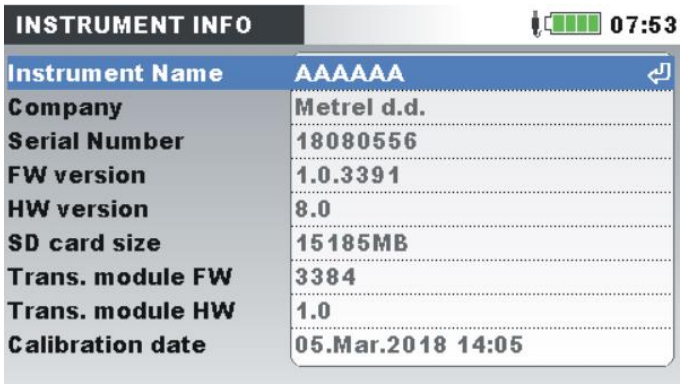

Figure 91: Instrument info screen – MI 2893

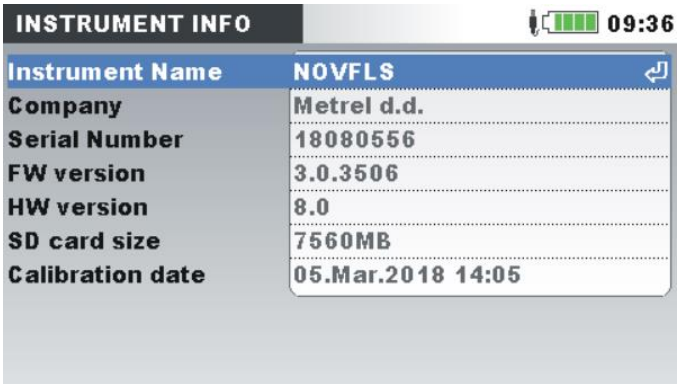

Figure 92: Instrument info screen – MI 2892/MI 2885

Table 112: Keys in Instrument info screen

ESC	Returns to the “GENERAL SETUP” submenu.

3.22.6 Lock/Unlock

MI 2893/MI 2892/MI 2885 have the ability to prevent unauthorized access to all important instrument functionality by simply locking the instrument. If instrument is left for a longer period at an unsupervised measurement spot, it is recommended to prevent unintentional stopping of record, instrument or measurement setup modifications, etc. Although instrument lock prevents unauthorized changing of instrument working mode, it does not prevent non-destructive operations as displaying current measurement values or trends.
User locks the instrument by entering secret lock code in the Lock/Unlock screen.

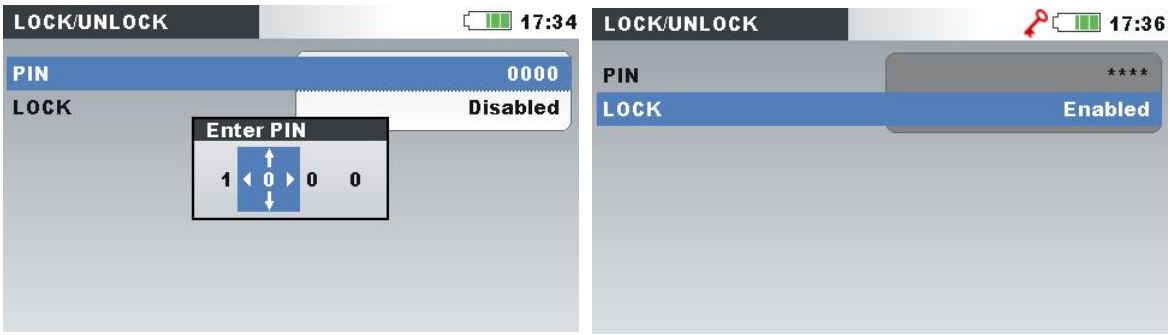

Figure 93: Lock/Unlock screen

Table 113: Description of Lock/Unlock screen

Pin	Four-digit numeric code used for Locking/Unlocking the instrument. Press ENTER key for changing the Pin code. “Enter PIN” window will appear on screen. **Note:** Pin code is hidden (****), if the instrument is locked.
Lock	The following options for locking the instrument are available: • Disabled • Enabled

Table 114: Keys in Lock/Unlock screen

▲ ▼	Selects parameter to be modified. Change value of the selected digit in Enter pin window.
◀ ▶	Selects digit in Enter pin window. Locks the instrument. Opens Enter pin window for unlocking.
ENTER	Opens Enter pin window for pin modification. Accepts new pin. Unlocks the instrument (if pin code is correct).
ESC	Returns to the “GENERAL SETUP” submenu.

Table 115: Locked instrument functionality

MEASUREMENTS	Allowed access. Waveform snapshot functionality is blocked.
RECORDERS	No access.
MEASUREMENT SETUP	No access.
GENERAL SETUP	No access except to Lock/Unlock menu.

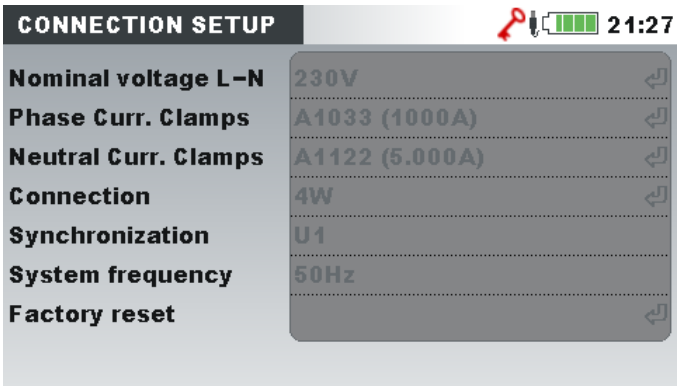

Figure 94: Locked instrument screen

Note: In case user forget unlock code, general unlock code “7350” can be used to unlock the instrument.

3.22.7 Colour model

In COLOUR MODEL menu, user can change colour representation of phase voltages and currents, according to the customer needs. There are some predefined colour schemes (EU, USA, etc.) and a custom mode where user can set up its own colour model.

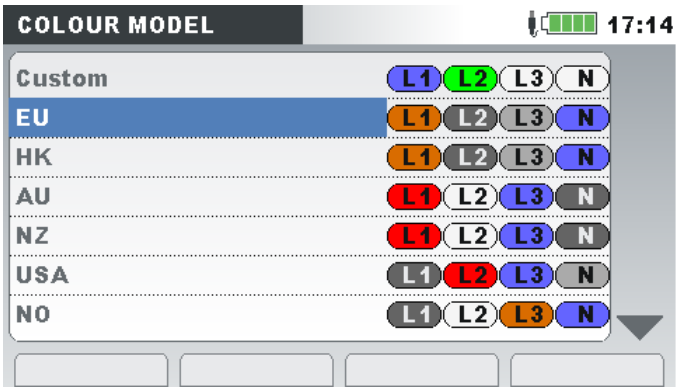

Figure 95: Colour representation of phase voltages

Table 116: Keys in Colour model screens

F1 EDIT	Opens edit colour screen (only available in custom model). 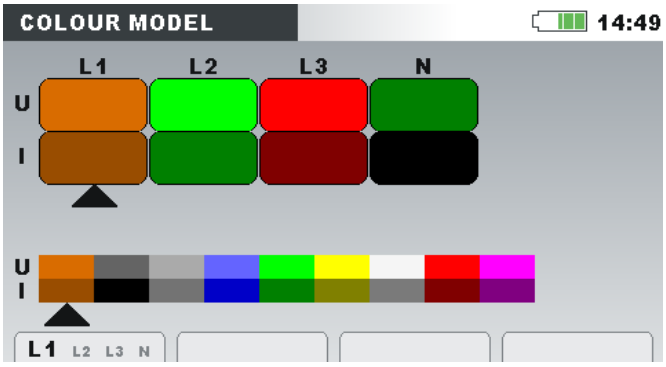

	Keys in Edit colour screen:		
	F1	**L1** L2 L3 N	Shows selected colour for phase L1.
		L1 **L2** L3 N	Shows selected colour for phase L2.
		L1 L2 **L3** N	Shows selected colour for phase L3.
		L1 L2 L3 **N**	Shows selected colour for neutral channel N.
	◀ ▶	Selects colour.	
	ENTER / ESC	Returns to the “COLOUR MODEL” screen.	
▲ ▼	Selects Colour scheme.		
ENTER	Confirms selection of Colour scheme and returns to the “GENERAL SETUP” submenu.		
ESC	Returns to the “GENERAL SETUP” submenu without modifications.		

4 Recording Practice and Instrument Connection

In following section recommended measurement and recording practice is described.

4.1 Measurement campaign

Power quality measurements are specific type of measurements, which can last many days, and mostly they are *performed* only once. Usually recording campaign is performed to:

- Statistically analyse some points in the network.
- Troubleshoot malfunctioning device or machine.

Since measurements are mostly *performed* only once, it is very important to properly set measuring equipment. Measuring with wrong settings can lead to false or useless measurement results. Therefore, instrument and user should be fully prepared before measurement begins.
In this section recommended recorder procedure is shown. We recommend to strictly follow guidelines in order to avoid common problems and measurement mistakes. Figure below shortly summarizes recommended measurement practice. Each step is then described in details.

Note: PC software PowerView v3.0 has the ability to correct (after measurement is done):

- wrong real-time settings,
- wrong current and voltage scaling factors,
- voltage unbalance.

False instrument connection (messed wiring, opposite clamp direction), can’t be fixed afterwards.

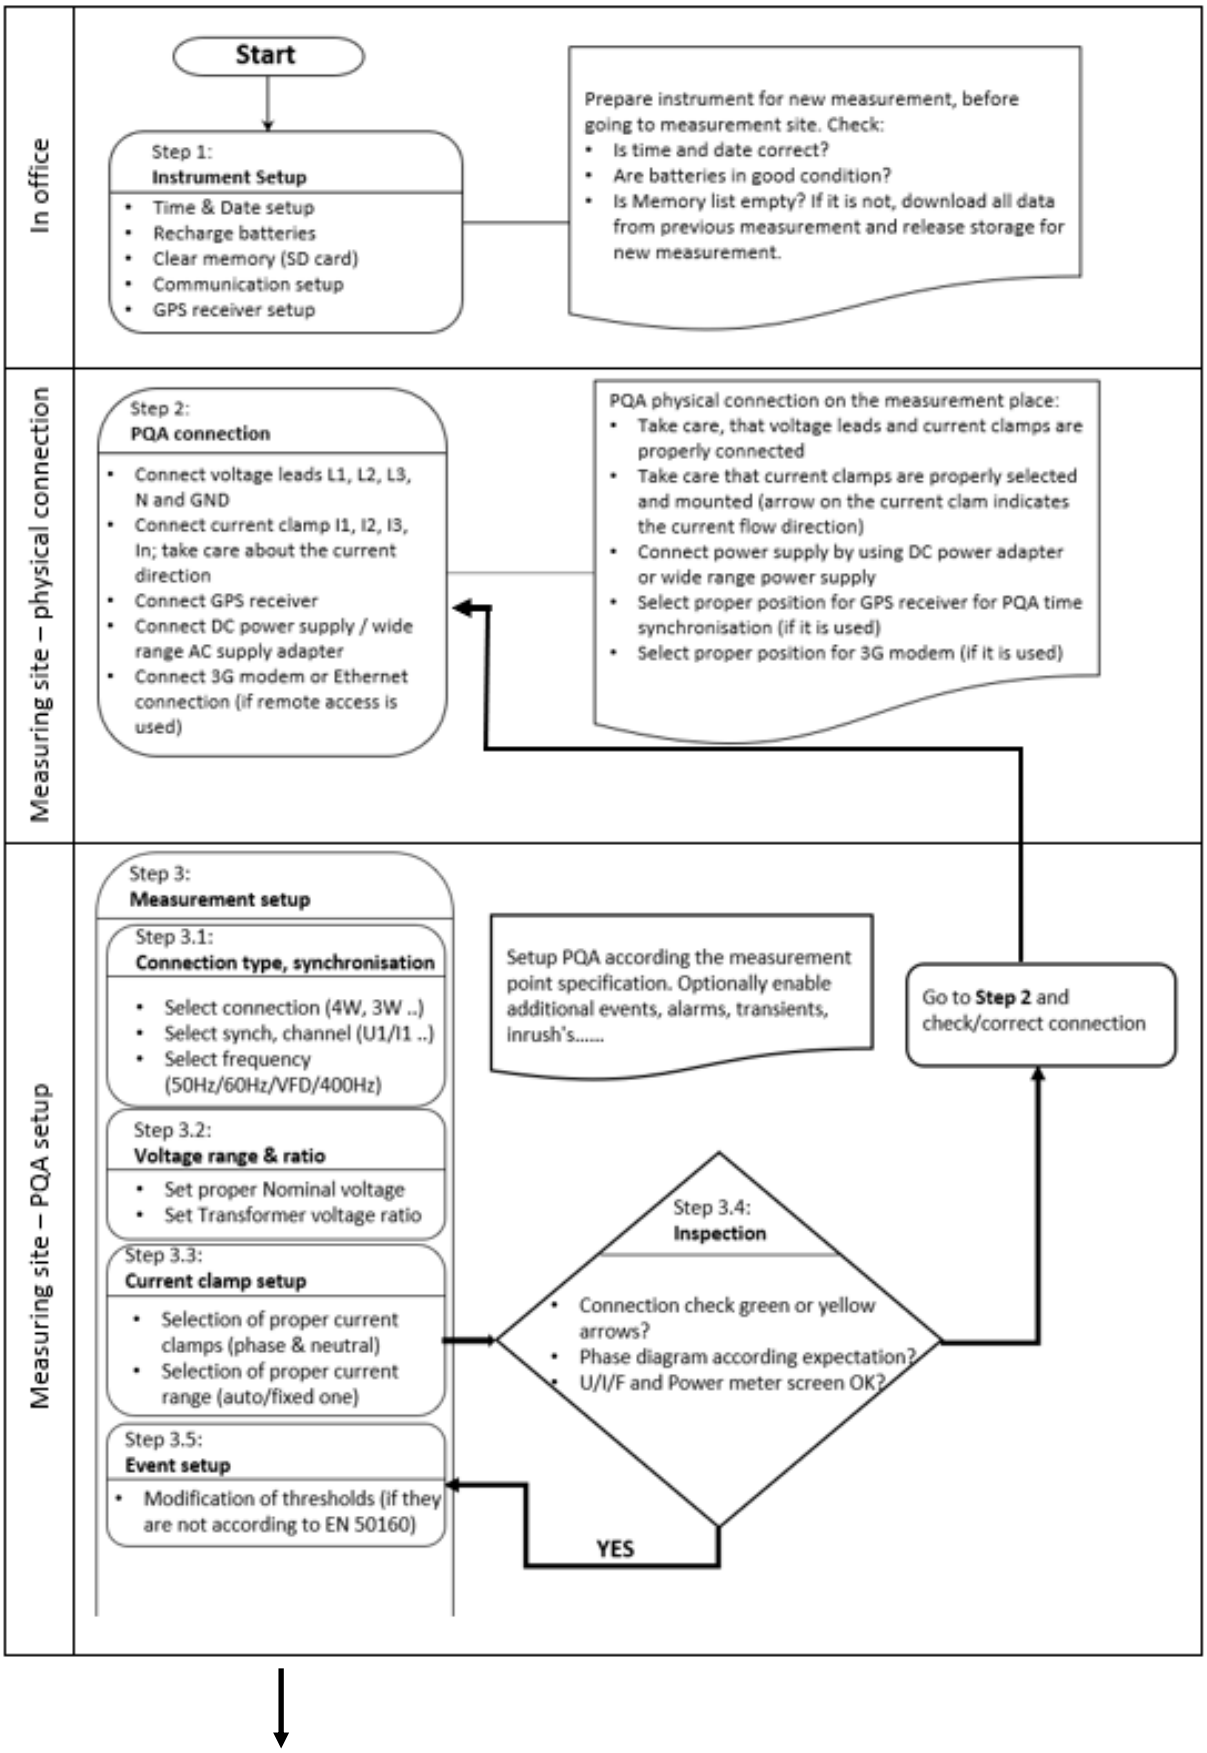
In office
Start
Step 1:
Instrument Setup
• Time & Date setup
• Recharge batteries
• Clear memory (SD card)
• Communication setup
• GPS receiver setup
Prepare instrument for new measurement, before going to measurement site. Check:
• Is time and date correct?
• Are batteries in good condition?
• Is Memory list empty? If it is not, download all data from previous measurement and release storage for new measurement.
Measuring site – physical connection
Step 2:
PQA connection
• Connect voltage leads L1, L2, L3, N and GND
• Connect current clamp I1, I2, I3, In; take care about the current direction
• Connect GPS receiver
• Connect DC power supply / wide range AC supply adapter
• Connect 3G modem or Ethernet connection (if remote access is used)
PQA physical connection on the measurement place:
• Take care, that voltage leads and current clamps are properly connected
• Take care that current clamps are properly selected and mounted (arrow on the current clam indicates the current flow direction)
• Connect power supply by using DC power adapter or wide range power supply
• Select proper position for GPS receiver for PQA time synchronisation (if it is used)
• Select proper position for 3G modem (if it is used)
Measuring site – PQA setup
Step 3:
Measurement setup
Step 3.1:
Connection type, synchronisation
• Select connection (4W, 3W ..)
• Select synch, channel (U1/I1 ..)
• Select frequency (50Hz/60Hz/VFD/400Hz)
Step 3.2:
Voltage range & ratio
• Set proper Nominal voltage
• Set Transformer voltage ratio
Step 3.3:
Current clamp setup
• Selection of proper current clamps (phase & neutral)
• Selection of proper current range (auto/fixed one)
Step 3.5:
Event setup
• Modification of thresholds (if they are not according to EN 50160)
Setup PQA according the measurement point specification. Optionally enable additional events, alarms, transients, inrush's.....
Go to Step 2 and check/correct connection
Step 3.4:
Inspection
• Connection check green or yellow arrows?
• Phase diagram according expectation?
• U/I/F and Power meter screen OK?
YES

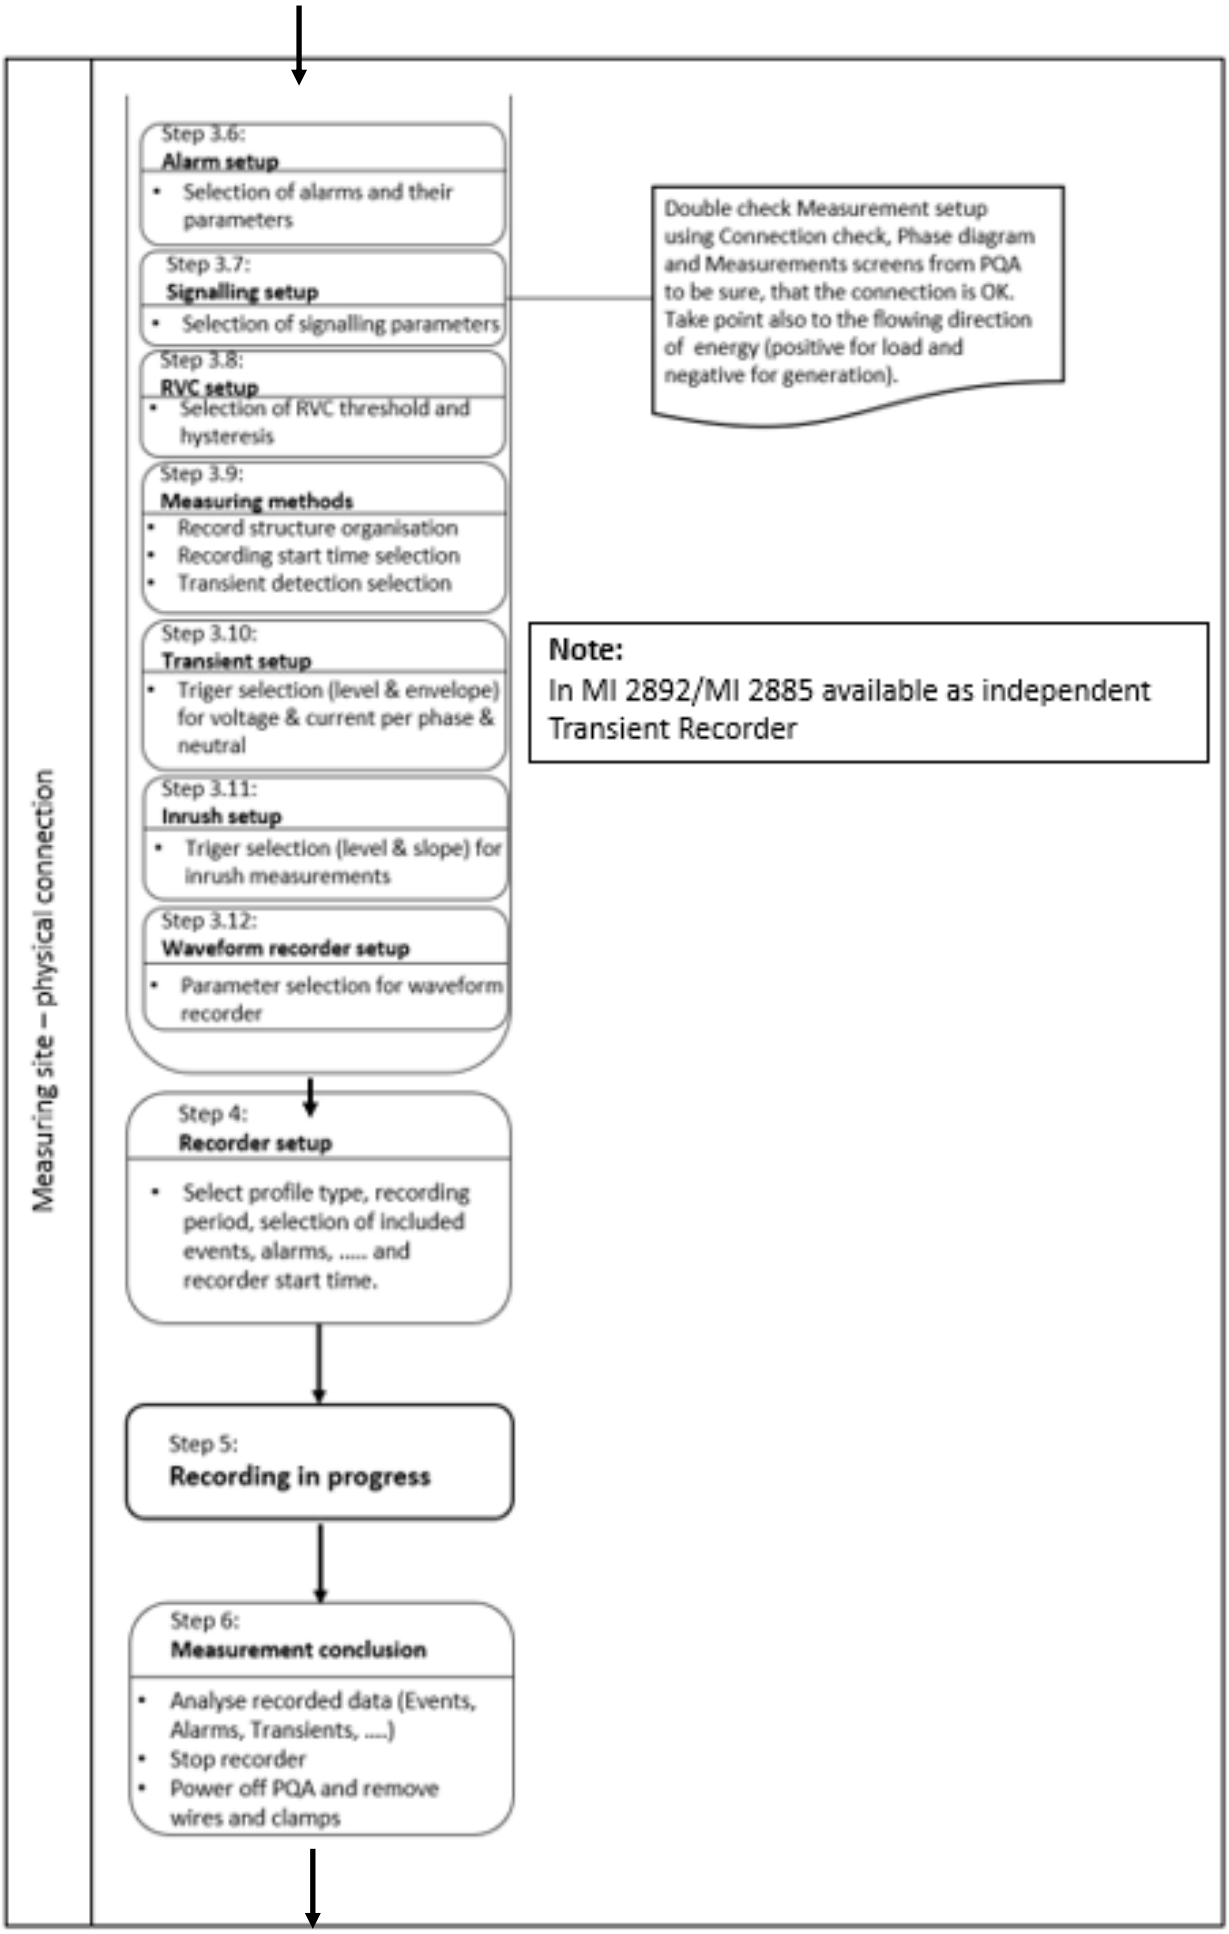
Measuring site – physical connection
Step 3.6:
Alarm setup
• Selection of alarms and their parameters
Step 3.7:
Signalling setup
• Selection of signalling parameters
Step 3.8:
RVC setup
• Selection of RVC threshold and hysteresis
Step 3.9:
Measuring methods
• Record structure organisation
• Recording start time selection
• Transient detection selection
Step 3.10:
Transient setup
• Triger selection (level & envelope) for voltage & current per phase & neutral
Step 3.11:
Inrush setup
• Triger selection (level & slope) for inrush measurements
Step 3.12:
Waveform recorder setup
• Parameter selection for waveform recorder
Double check Measurement setup using Connection check, Phase diagram and Measurements screens from PQA to be sure, that the connection is OK. Take point also to the flowing direction of energy (positive for load and negative for generation).
Note:
In MI 2892/MI 2885 available as independent Transient Recorder
Step 4:
Recorder setup
• Select profile type, recording period, selection of included events, alarms, ... and recorder start time.
Step 5:
Recording in progress
Step 6:
Measurement conclusion
• Analyse recorded data (Events, Alarms, Transients, ...)
• Stop recorder
• Power off PQA and remove wires and clamps

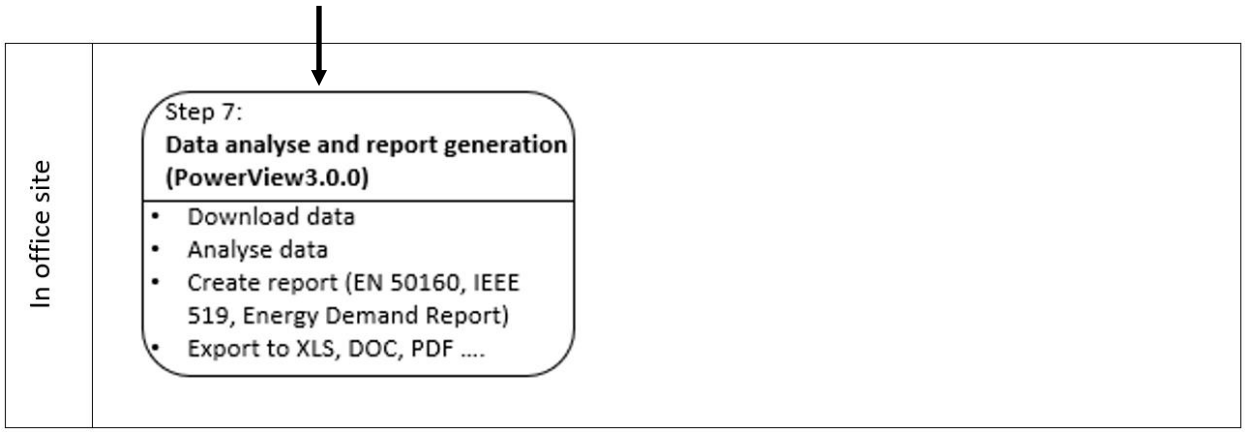

Figure 96: Recommended measurement practice

Step 1: Instrument setup
On site measurements can be very stressful, and therefore it is good practice to prepare measurement equipment in an office. Preparation of MI 2893/MI 2892/MI 2885 include following steps:

- Visually check instrument and accessories.
  Warning: Don't use visually damaged equipment!
- Always use batteries that are in good condition and fully charge them before you leave an office.
  Note: In problematic PQ environment where dips and interrupts frequently occur instrument power supply fully depends on batteries! Keep your batteries in good condition.
- Download all previous records from instrument and clear the memory. (See section 3.19 for instruction regarding memory clearing).
- Set instrument time and date. (See section 3.22.2 for instruction regarding time and date settings).

Step 2: PQA connection
Take care for the proper connection of voltage leads and current clamps (current direction). Voltage and current sequence should be correct to fulfil the requirements from the power quality standard positive sequence, load or generation measurement). In case, that GPS receiver is used for accurate time synchronisation, connect in in the proper place to enable good signal receiving.

Step 3: Measurement setup
Measurement setup adjustment is *performed* on measured site, after we find out details regarding nominal voltage, currents, type of wiring etc.

Step 3.1: Connection type, synchronisation

- Connect current clamps and voltage tips according to the "Device under measurement" (See section 4.2 for details).
- Select proper type of connection in "Connection setup" menu (See section 3.21.1 for details).
- Select synchronization channel. Synchronization to voltage is recommended, unless measurement is performed on highly distorted loads, such as PWM drives. In that case current synchronization can be more appropriate. (See section 3.21.1 for details).
- Select System frequency. System frequency is default mains system frequency. Setting this parameter is recommended if to measure signalling or flickers.

Step 3.2: Nominal voltage and ratio

- Select instrument nominal voltage according to the network nominal voltage.
  Note: For 4W and 1W measurement all voltages are specified as phase-to-neutral (L-N). For 3W and Open Delta measurements all voltages are specifies as phase-to-phase (L-L).
  Note: Instrument assures proper measurement up to 150 % of chosen nominal voltage.
- In case of indirect voltage measurement, select appropriate "Voltage ratio" parameters, according to transformer ratio. (See section 3.21.1 and 4.2.2 for details).

Step 3.3: Current clamps setup

- Using "Select Clamps" menu, select proper Phase and Neutral channel current clamps (see sections 3.21.1 for details).
- Select proper clamps parameters (measuring range: automatic or fixed one) according to the type of connection (see section 4.2.3 for details).

Step 3.4: Inspection

After setup instrument and measurement is finished, user need to re-check if everything is connected and configured properly. Following steps are recommended:

- Using PHASE DIAGRAM menu check if voltage and current phase sequence is right regarding to the system. Additionally, check if current has right direction.
- Using U, I, f menu check if voltage and current have proper values.
- Check voltage and current THD.

Note: Excessive THD can indicate that too small range was chosen!

Note: In case of AD converter overvoltage or overloading current, icon will be displayed.

- Using POWER menu check signs and indices of active, nonactive, apparrent power and power factor.

If any of these steps give you suspicious measurement results, return to Step 2 and double check measurement setup parameters.

Step 3.5: Event setup

Select threshold values for: swell, dip and interrupts (see sections 3.21.2 and 3.17 for details).
Note: You can also trigger WAVEFORM RECORDER on events. Instrument will then capture waveform and inrush for each event.

Step 3.6: Alarm setup

Use this step if you would like only to check if some quantities cross some predefined boundaries (see sections 3.18 and 3.21.3 for details).
Note: You can also trigger WAVEFORM RECORDER on alarms. Instrument will then capture waveform and inrush for each alarm.

Step 3.7: Signalling setup

Use this step only if you are interested in measuring mains signalling voltage. See section 3.21.4 for details.

Step 3.8: RVC setup

Use this step if you are interested in detection of rapid voltage changes (RVC). See section 3.21.4 for details.

Step 3.9: Measuring methods

Select parameters related to the data structure organisation on the SD card, type of recorder starts time and transient selection. See section 3.21.4 for details.

Step 3.10: Transient setup (MI 2893 only; on MI 2892/MI 2885 Transient Recorder run as independent one – not simultaneously with the General Recorder)

Select parameters for defining triggers for capturing the transients, separate for voltage and currents. See section 3.21.4 for details.

Step 3.11: Inrush setup

Select parameters for defining trigger for capturing the inrush current. See section 3.21.4 for details.

Step 3.12: Waveform recorder setup

Select parameters for defining trigger for waveform recorder. See section 3.21.4 for details.

Step 4: Recorder setup and recording

Using GENERAL RECORDER menu select type of recording and configure recording parameters such as:

- Time Interval for data aggregation (Integration Period)
- Include events, alarms, … capture if necessary. Waveforms will be automatically captured for selected options.
- Recording start time (optional)
- After setting recorder, recording can be started. (see section 3.14 for recorder details).

Note: Available memory status in Recorder setup should be checked before starting recording. Max. recording duration and max. number of records are automatically calculated according to recorder setup and memory size.
Note: Recording usually takes several days. Assure that instrument during recording session is not reachable to the unauthorized persons. If necessary, use LOCK functionality described in section 3.22.6.
Note: If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down. After electricity comes back, instrument will automatically start new recording session.

Step 5: Recording in progress

Press START button to start recording with all simultaneous registration of included network events.

Step 6: Measurement conclusion

Before leaving measurement site we need to:

- Preliminary evaluate recorded data using TREND screens.
- Stop recorder.
- Assure that we record and measure everything we needed.

Step 7: Data analyse and report generation (PowerView v3.0)

Download records using PC software PowerView v3.0 perform analysis and create reports. See PowerView v3.0 manual for details.

4.2 Connection setup

4.2.1 Connection to the LV Power Systems

This instrument can be connected to different type of networks. Proper connection should be selected to obtain the reliable results.
The actual connection scheme has to be defined in CONNECTION SETUP menu (see Figure below).

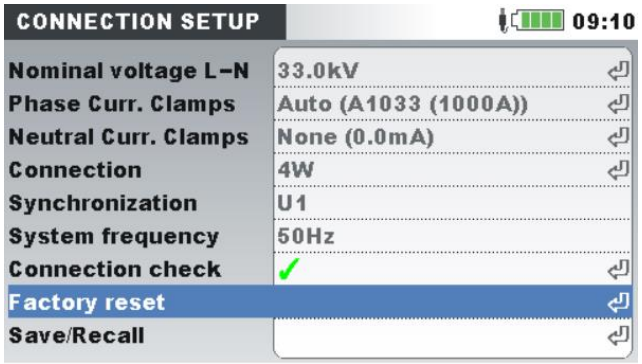

Figure 97: Connection setup menu

When connecting the instrument, it is essential that both current and voltage connections are correct. In particular the following rules have to be observed:
Clamp-on current clamp-on transformers

- The arrow marked on the clamp-on current transformer should point in the direction of current flow, from supply to load.
- If the clamp-on current transformer is connected in reverse the measured power in that phase would normally appear negative.

Phase relationships

- The clamp-on current transformer connected to current input connector I_1 has to measure the current in the phase line to which the voltage probe from L_1 is connected.

3-phase 4-wire system (4W)

In order to select this connection scheme, choose following connection on the instrument:

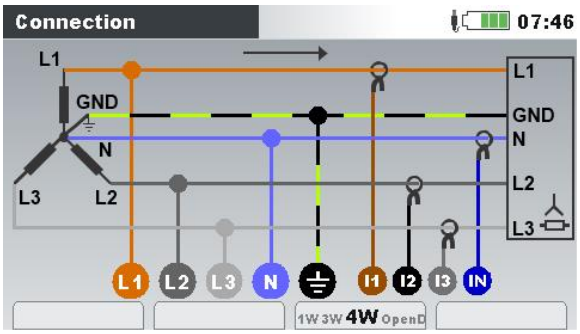

Figure 98: Choosing 3-phase 4-wire system on instrument

Instrument should be connected to the network according to figure below:

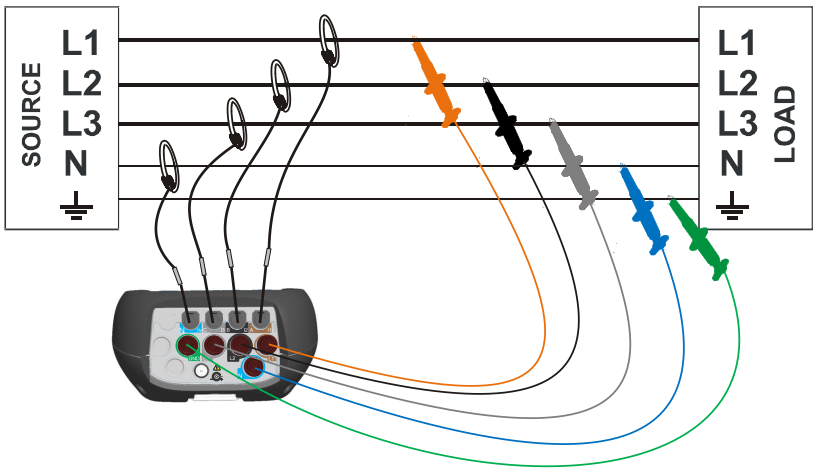

Figure 99: 3-phase 4-wire system

3-phase 3-wire system (3W)

In order to select this connection scheme, choose following connection on the instrument:

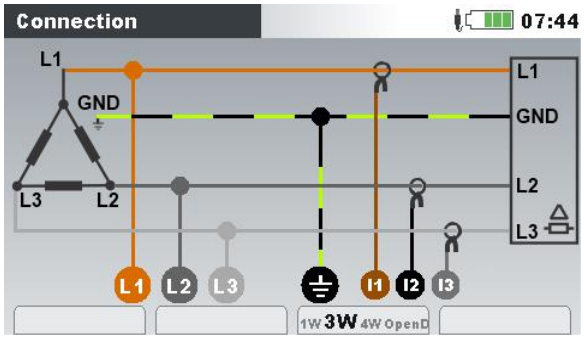

Figure 100: Choosing 3-phase 3-wire system on instrument

Instrument should be connected to the network according to figure below.

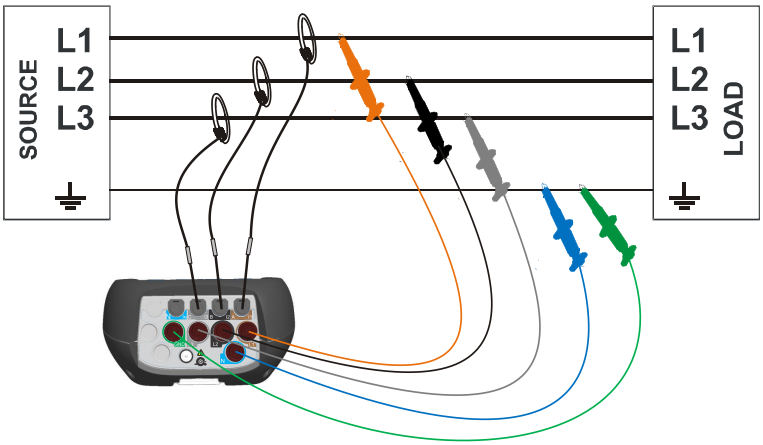

Figure 101: 3-phase 3-wire system

Open Delta (Aaron) 3-wire system (OpenD)

In order to select this connection scheme, choose following connection on the instrument:

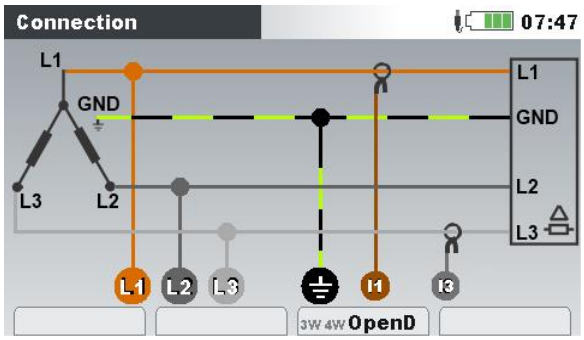

Figure 102: Choosing Open Delta (Aaron) 3-wire system on instrument

Instrument should be connected to the network according to figure below.

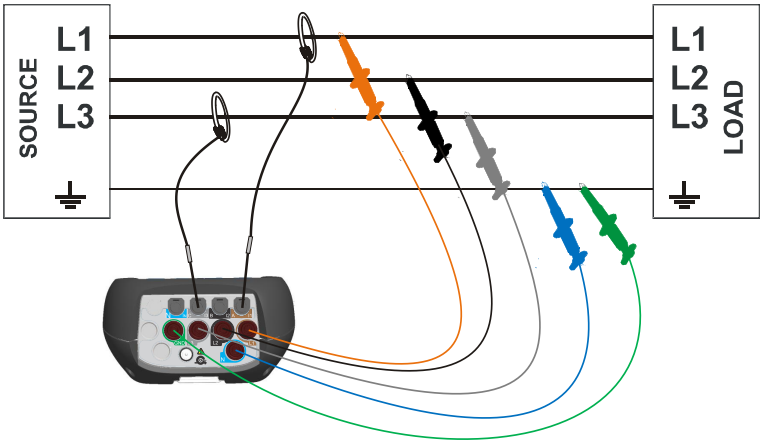

Figure 103: Open Delta (Aaron) 3-wire system

1-phase 3-wire system (1W)

In order to select this connection scheme, choose following connection on the instrument:

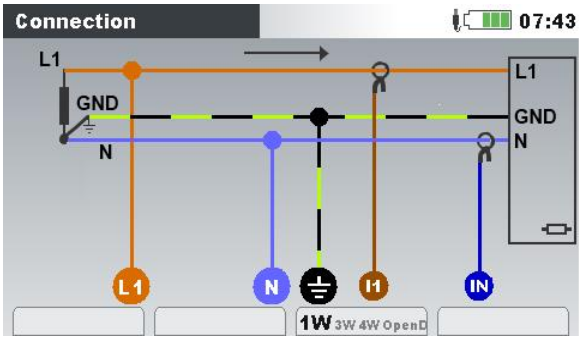

Figure 104: Choosing 1-phase 3-wire system on instrument

Instrument should be connected to the network according to figure below.

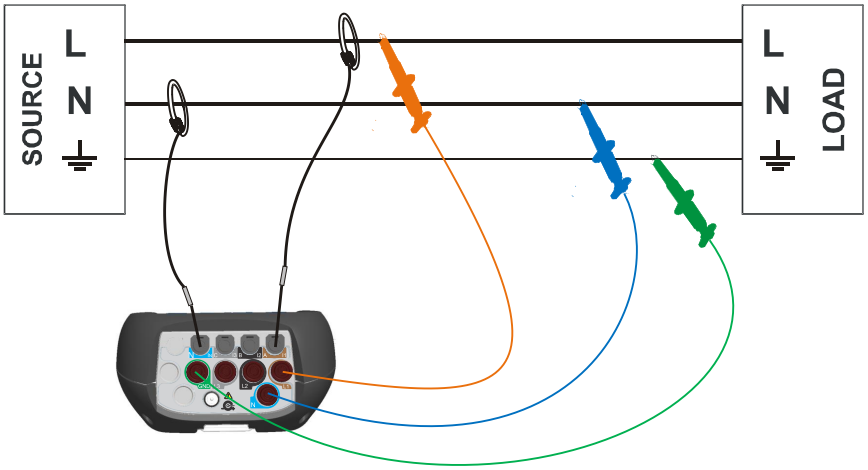

Figure 105: 1-phase 3-wire system

Note: In case of events capturing, it is recommended to connect unused voltage terminals to N voltage terminal.

2-phase 4-wire system (2W)

In order to select this connection scheme, choose following connection on the instrument:

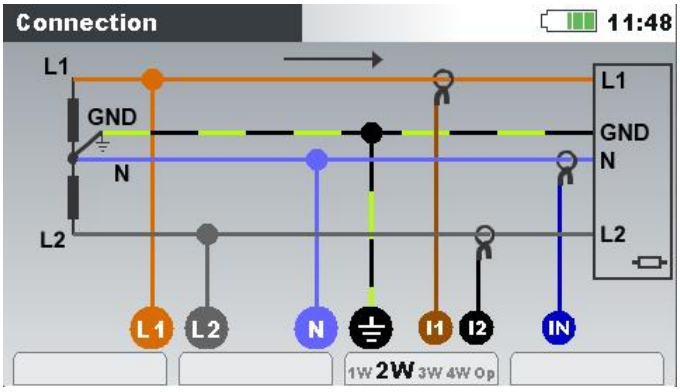

Figure 106: Choosing 2-phase 4-wire system on instrument

Instrument should be connected to the network according to figure below.

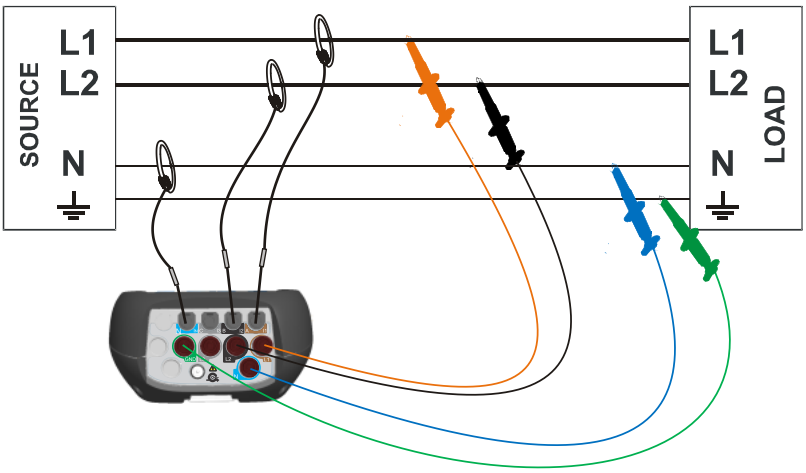

Figure 107: 2-phase 4-wire system

Note: In case of events capturing, it is recommended to connect unused voltage terminal to N voltage terminal.

Single - phase Inverter (INV1W)

In order to select this connection scheme, choose following connection on the instrument:

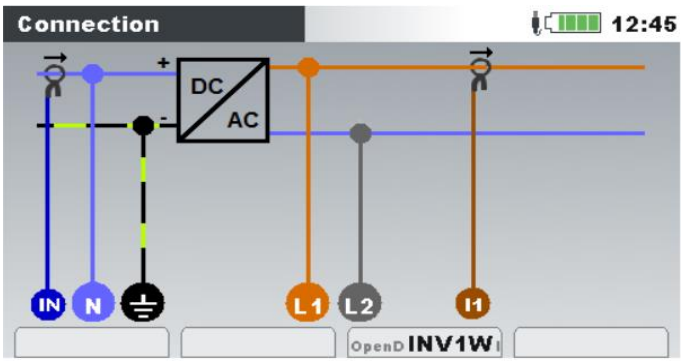

Figure 108: Choosing single- phase Inverter system on instrument

Instrument should be connected to the network according to figure below.

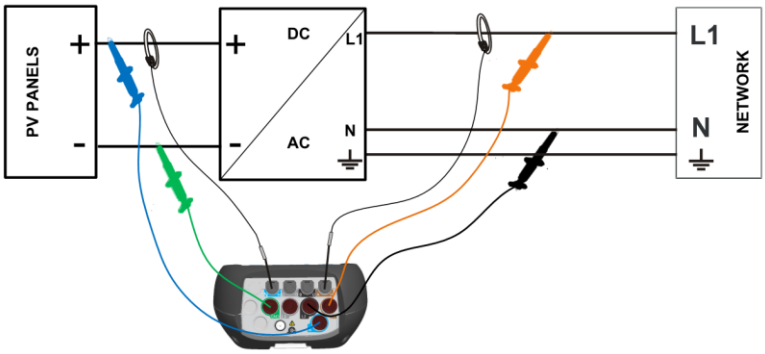

Figure 109: Single – phase inverter system

Note: *In case of events capturing, it is recommended to connect unused voltage terminal to N voltage terminal.*

Three - phase photovoltaic Inverter (INV3W)

In order to select this connection scheme, choose following connection on the instrument:

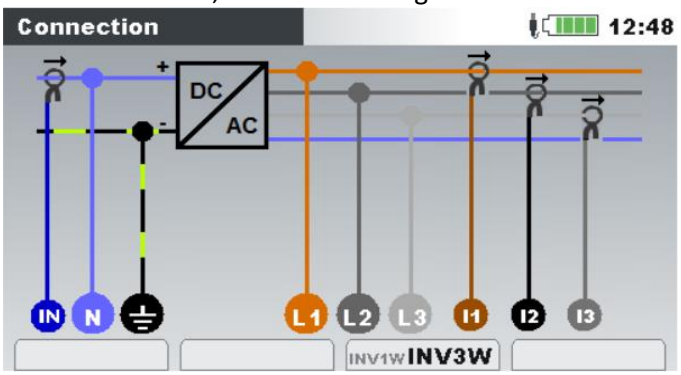

Figure 110: Choosing three- phase Inverter system on instrument

Instrument should be connected to the network according to figure below.

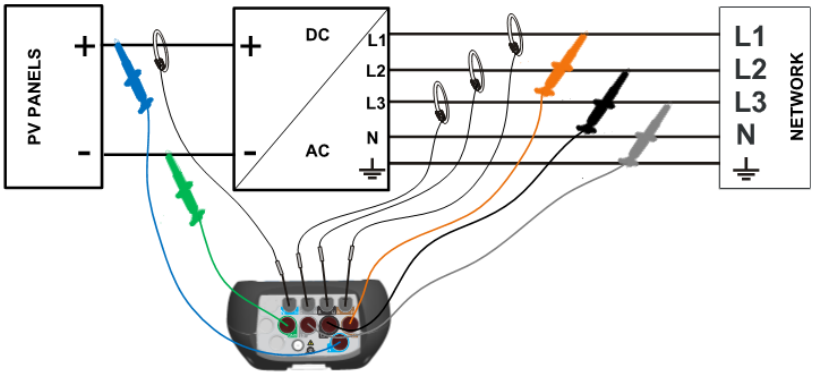

Figure 111: Three – phase inverter system

4.2.2 Connection to the MV or HV Power System

In systems where voltage is measured at the secondary side of a voltage transformer (for example: 11 kV / 110 V), the voltage transformer ratio should be entered. Afterward nominal voltage can be set to ensure correct measurement. In the next figure settings for this particular example is shown. See 3.21.1 for details.

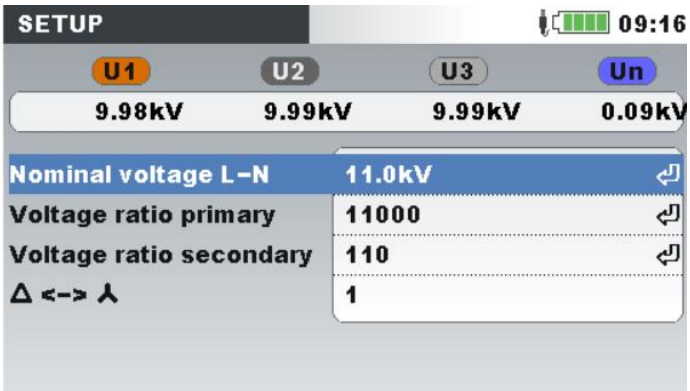

Figure 112: Voltage ratio for 11 kV / 110 transformer example

Instrument should be connected to the network according to figure below.

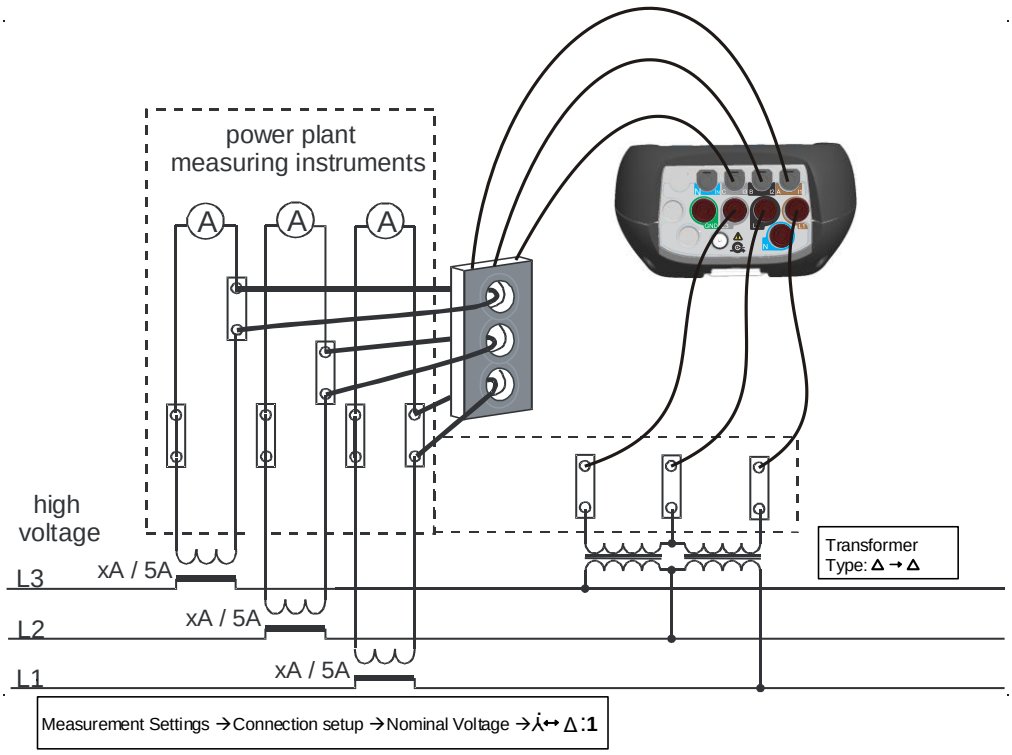

Figure 113: Connecting instrument to the existing current transformers in medium voltage system (Aaron / OpenDelta)

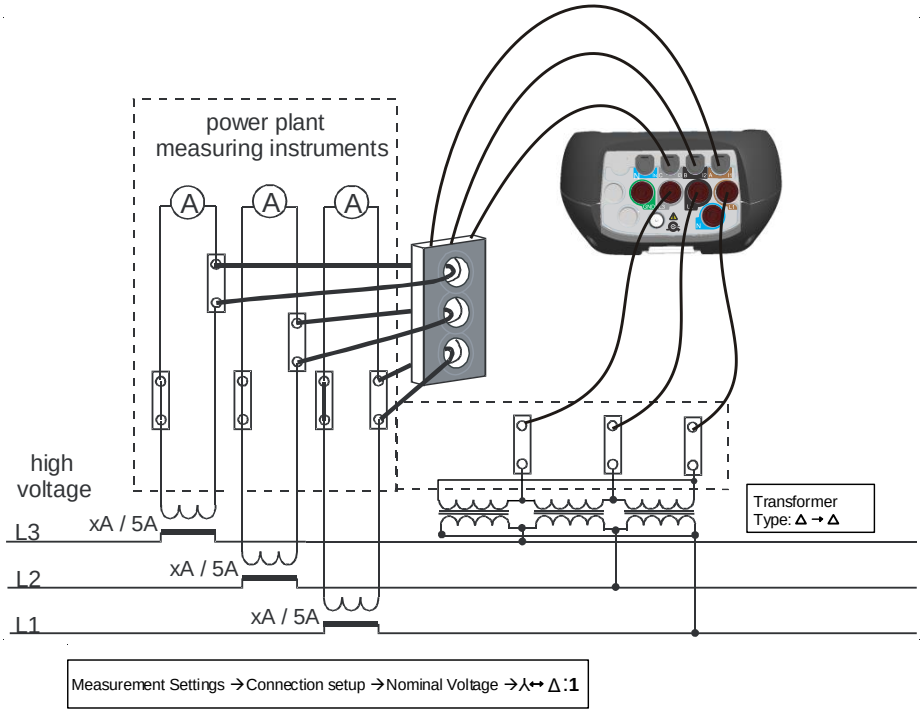

Figure 114: Connecting instrument to the existing current transformers in medium voltage system (Delta – Delta)

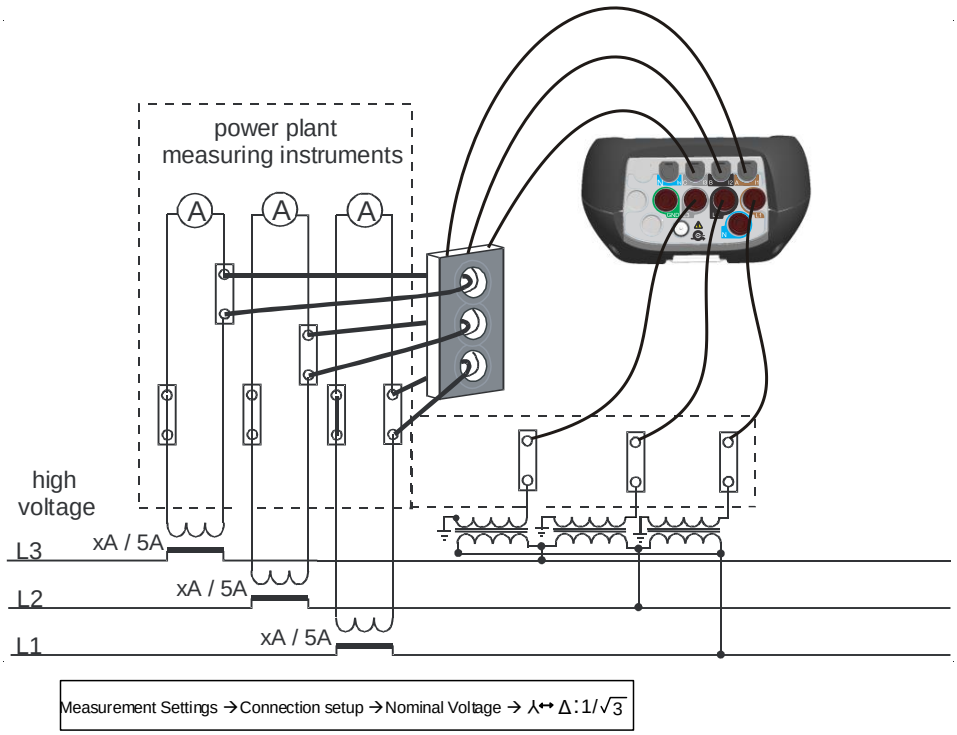

Figure 115: Connecting instrument to the existing current transformers in medium voltage system (Delta – Star)

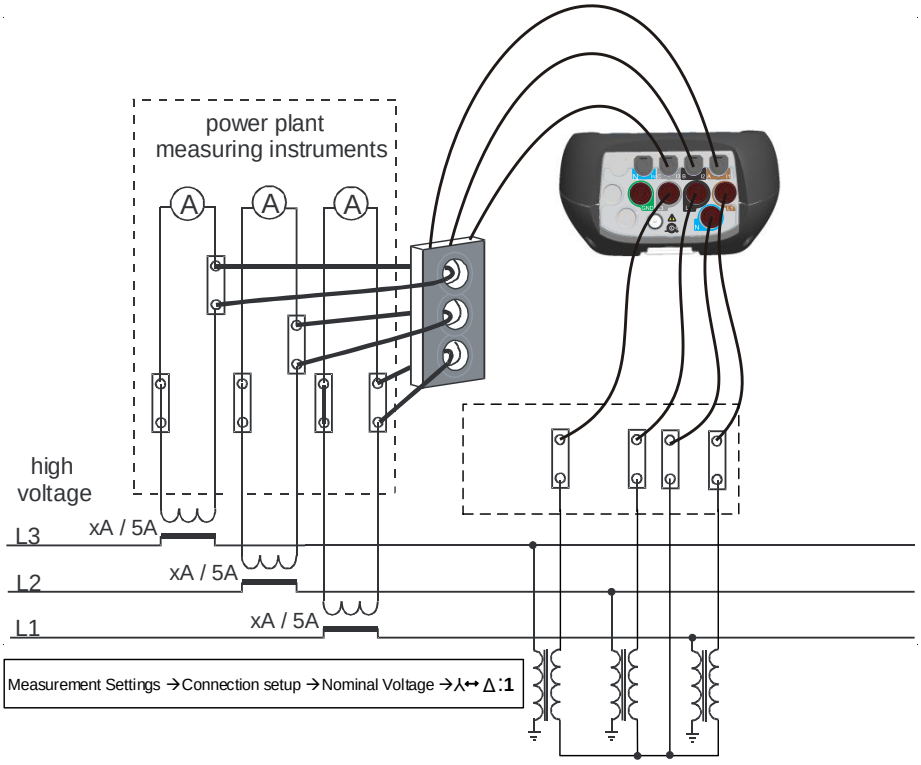

Figure 116: Connecting instrument to the existing current transformers in medium voltage system (Star – Star)

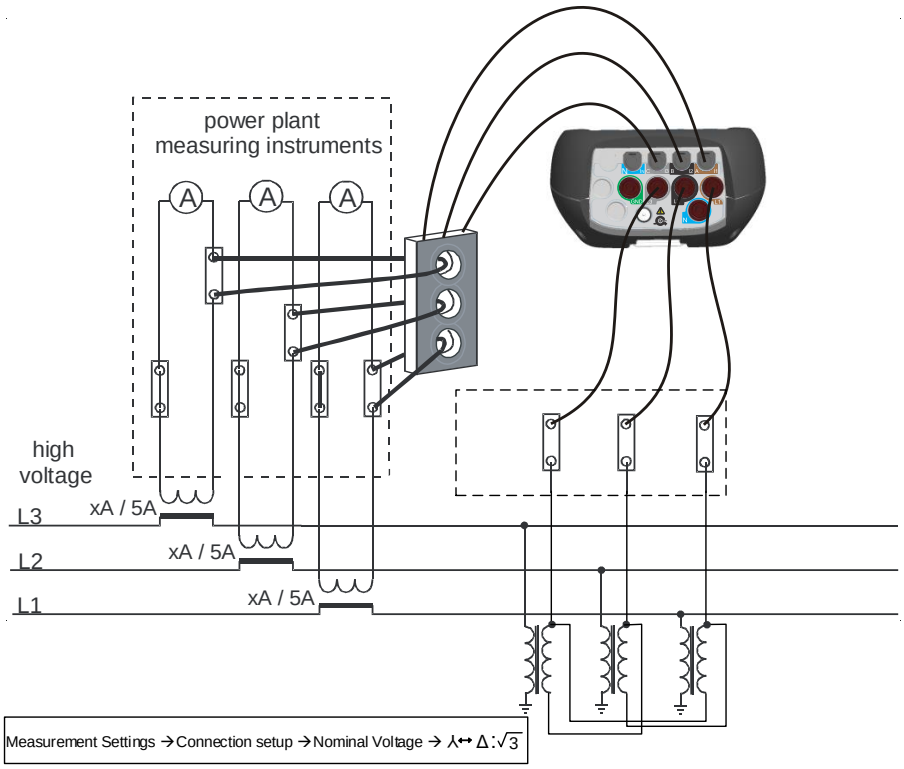

Figure 117: Connecting instrument to the existing current transformers in medium voltage system (star – delta)

4.2.3 Current clamp selection and transformation ratio setting

Clamp selection can be explained by two typical use cases: **direct current measurement** and **indirect current measurement.** In next section recommended practice for both cases is shown.

Auto range current clamp operation

Most of Metrel current clamps are developed as Smart clamps. They are automatically recognised by the instrument. Most of clamps support more different current ranges, for example 30/300/3000 A. MI 2893 could operate in so called "**Auto**" range, where instrument automatically select the most optimal current clamp range. In this case, the most accurate current measurements are guaranteed.

Note 1: In case of "auto range" selection, Inrush measurements are not reliable.
Note 2: In case of "auto range" selection, synchronisation could not be selected to current.
Note 3: Current clamps with external current range (range selection on the clamps itself) selection does not support "auto range".

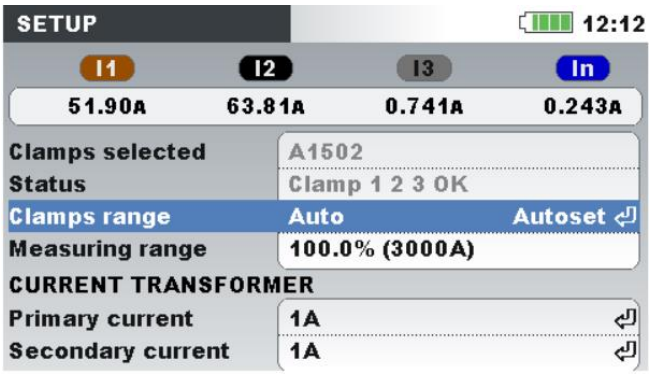

Figure 118: Smart current clamps auto range selection

Direct current measurement with clamp-on current transformer

In this type of measurement load/generator current is measured directly with one of clap-on current transformer. Current to voltage conversion is *performed* **directly** by the clamps.
Direct current measurement can be *performed* by any clamp-on current transformer. We particularly recommend Smart clamps: flex clamps A 1502, A1227 and iron clamps A1281, A 1588 for example. Also, other Metrel clamp models A1033 (1000 A), A1069 (100 A), etc. can be used. For more details about the current clamps, please check the Metrel's General catalogue.

In the case of large loads there can be few parallel feeders which can't be embraced by single clamps. In this case we can measure current only through one feeder as shown on figure below.

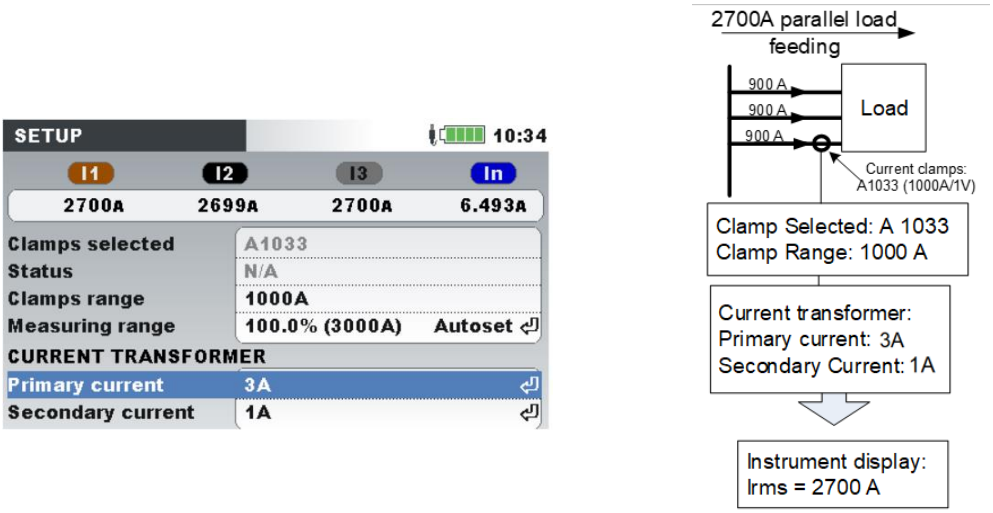

Figure 119: Parallel feeding of large load

Example: 2700 A current load is fed by 3 equal parallel cables. In order to measure current, we can embrace only one cable with clamps, and select: Current transformer, Primary current: 3 A, Secondary current: 1 A in clamp menu.

Note: During setup current range can be observed by "Measuring range: 100% (3000 A/V)" row.

Indirect current measurement

Indirect current measurement with primary current transducer is assumed if user selects 5 A current clamps: A 1588 or A 1037. Load current is in that case measured **indirectly** through additional primary current transformer.
In **example** below we have 100 A of primary current flowing through primary transformer with ratio 600 A : 5 A. Settings are shown in following figure.

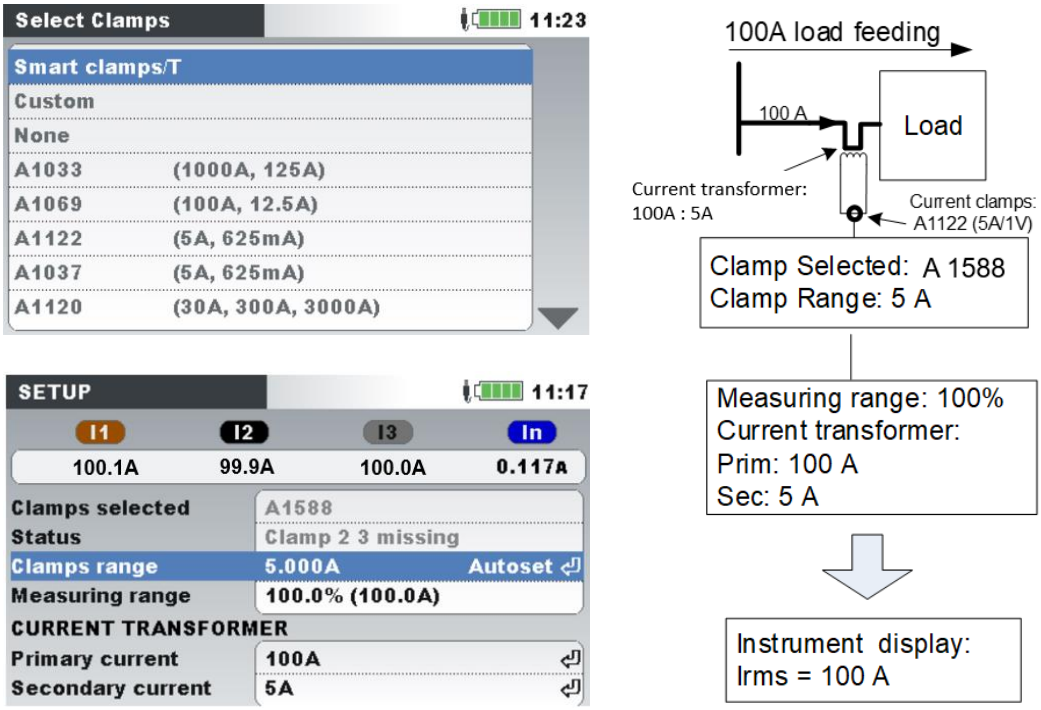

Figure 120: Current clamps selection for indirect current measurement

Over-dimensioned current transformer

Installed current transformers on the field are usually over-dimensioned for "possibility to add new loads in future". In that case current in primary transformer can be less than 10% of rated transformer current. For such cases it is recommended to select 10% current range as shown on figure below.

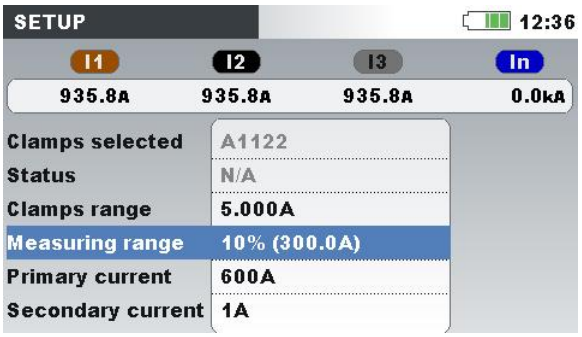

Figure 121: Selecting 10% of current clamps range

Note that if we want to perform direct current measure with 5 A clamps (secondary current measurement), primary transformer ratio should be set to 5 A : 5 A.

⚠ WARNINGS!

- **The secondary winding of a current transformer must not be open when it is on a live circuit.**
- **An open secondary circuit can result in dangerously high voltage across the terminals.**

Automatic current clamps recognition

Metrel developed Smart current clamps product family in order to simplify current clamps selection and settings. Smart clamps are multi-range switchless current clamps automatically recognized by instrument. In order to activate smart clamp recognition, the following procedure should be followed for the first time:

1. Turn on the instrument
2. Connect clamps (for example A 1227) to MI2893/MI 2892/MI 2885
3. Enter: Measurement Setup ➔ Connection setup ➔ Phase/Neutral Curr. Clamps menu
4. Select: Smart clamps/T
5. Clamps type will be automatically recognized by the instrument.
6. User should then select clamp range (Auto range or fixed one) and confirm settings.

Figure 122: Automatically recognised clamps setup

Instrument will remember clamps setting for the next time. Therefore, user only need to:

1. Plug clamps to the instrument current input terminals
2. Turn on the instrument

Instrument will recognize clamps automatically and set ranges as was settled on measurement before. If clamps were disconnected following pop up will appear on the screen (See Figure below). Use cursor keys to select Smart clamp current range.

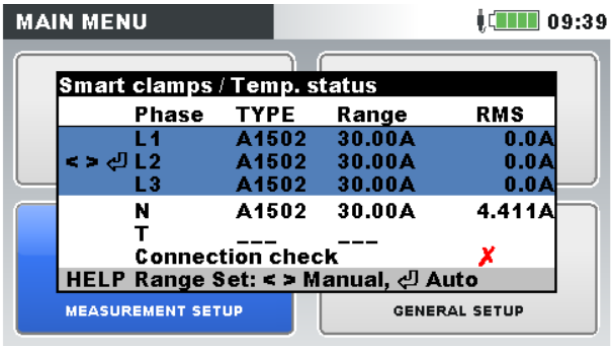

Figure 123: Automatically recognised clamps status

Table 117: Keys in Smart clamps pop up window

	Changes Clamps current range.
	Selects Phase or Neutral current clamps.

ENTER / ESC	Confirms selected range and returns to previous menu.

Clamps Status menu indicates that there is an inconsistence between current clamps defined in Clamps Setup menu and clamps present at the moment.
Note: Do not disconnect smart clamps during recording.

4.2.4 Connection check

Connection check menu in CONNECTION SETUP check if instrument measurement complies with instrument setup and connection.

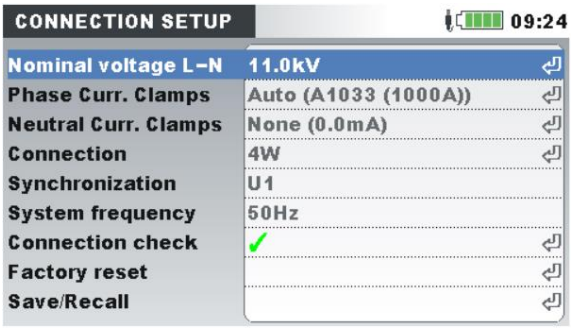

Connection check mark can be marked with OK (✓) or Fail (✗) sign and indicate overall connection status:

- Connection check is marked with green OK sign (✓) if instrument is connected properly and measured values comply with given measurement setup.
- Connection check is marked with yellow OK sign (✓), indicate that some measurements are not as expected. This does not mean that something is necessary wrong, but require user attention to double check connection and instrument settings. In this case, measurements are outside the optimal range.
- Fail sign (✗) indicate that that instrument is connected incorrectly or measurement setup does not correspond with measured value. In this case it is necessary to readjust measurement settings, and check instrument connections.

By pressing ENTER key, detailed Connection check will be shown

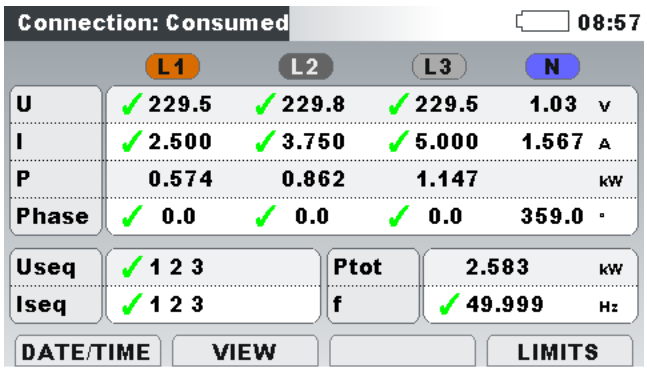

Table 118: Connection check description and screen symbols

Measure-ment	Status	Description	Action to resolve issue
U	✓	Measured voltage is within 90% ÷ 110% range. All voltage measurements (RMS, harmonics, voltage events) are valid.	
U	✗	Measured voltage is not within 90% ÷ 110% range of Nominal voltage. All voltage measurements (RMS, harmonics, voltage events) can be compromised.	Set correct Nominal voltage value and check voltage leads.
I	✓	Measured current is within 10% ÷ 110% of selected clamp measuring range. All current measurements (RMS, harmonics, voltage events) are valid.	
I	✓	Measured current is within 5% ÷ 10% or 110% ÷ 150% of selected clamp measuring range.	If higher current is expected during recorder campaign, this waning can be ignored. Otherwise it is recommended to decrease current range.
I	✗	Measured current is less than 5% or higher than 150% of clamp measuring range. Accuracy of current measurements (RMS, harmonics…) can be compromised.	Go to Current clamp settings and change Clamp Measuring Range or press **AUTOSET I** button and let instrument to choose optimal current range.
Phase	✓	Phase angle between voltage and current is less than 90^0. This indicate that measured current flow in the same direction as voltage. Power measurements are valid.	
Phase	✗	Phase angle between voltage and current is more than 90^0. This indicate that measured current has opposite flow than voltage. Power measurements are compromised.	Check clamp direction (icon is present in status bar) and see if current channel corresponds to the voltage channel (if current I_1 is measured on voltage U_1)
Useq	✓ 123	Voltage sequence is correct. Unbalance and power measurement are valid.	
Useq	✗ 321	Voltage sequence is reverse. Unbalance and power measurement are compromised.	Switch voltage leads U_2 and U_3 in-between to obtain right sequence.
Useq	✗ -	Phase angle between voltages is not $120^0 \pm 30^0$. Unbalance and power measurement are compromised.	Check voltage leads, and check if selected Connection correspond to the actual network.
Iseq	✓ 123	Current sequence is correct, phase angle between currents is less than $120^0 \pm 60^0$. Unbalance and power measurement are valid.	
Iseq	✓ 123	Current sequence is correct, but phase angle between currents is more than $120^0 \pm 60^0$.	This is valid situation if there are large inductive/capacitive load in the network. However, this can be also caused by improper

			instrument connection. Check clamp direction (icon is present in status bar) and see if current channel corresponds to the voltage channel (if current I_1 is measured on voltage U_1).
Iseq	✗321	Current sequence is reverse. Unbalance and power measurement are compromised.	Switch current clamps I_2 and I_3 in-between.
Iseq	✗-	Current phase angle between currents is not $120^0 \pm 60^0$. Unbalance and power measurement are compromised.	Check voltage leads, and check if selected Connection correspond to the actual network.

Table 119: Keys in Connection check screen

F1	**DATE/TIME**	Open Date/time setup screen (for quick real-time clock check)
F2	**VIEW**	Selects which measurement setup should be considered: Consumed or Generated.
F3	**AUTOSET I**	MI 2893 performs the most optimal clamp current range (Auto range is performed automatically)
F4	**LIMITS**	Check limits for measured parameters: 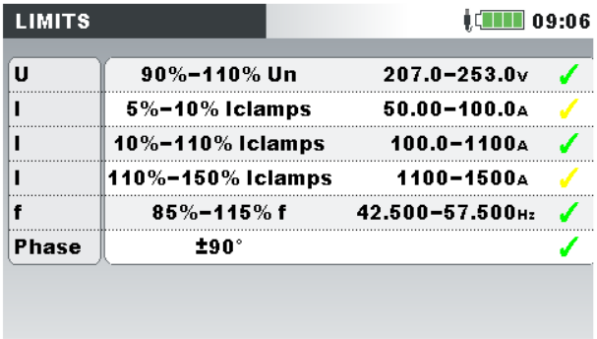
ESC	Returns to the one menu back.	

4.2.5 Temperature probe connection

Temperature measurement is performed using smart temperature probe connected to the any current input channel. In order to activate temperature probe recognition, following procedure should be followed for the first time:

1. Turn on the instrument
2. Connect temperature probe to MI 2893/MI 2892/MI 2885 neutral current input terminal
3. Enter: Measurement setup ➔ Connection setup ➔ Phase/Neutral curr. clamps
4. Select: Smart clamps/T
5. Temperature probe should be now automatically recognized by the instrument

Instrument will remember settings for the next time. Therefore, user only needs to plug temperature probe to the instrument.

4.2.6 GPS time synchronization device connection

MI 2893/MI 2892/MI 2885 have the ability to synchronize its system time clock with Coordinated Universal Time (UTC time) provided by externally connected GPS module (optional accessory - A 1355). In order to be able to use this particular functionality, GPS unit should be attached to the instrument and placed outside. Once this is done, GPS module will try to establish connection and get satellite time clock. MI 2893/MI 2892/MI 2885 distinguishes two different states regarding GPS module functionality.

Table 120: GPS functionality

	GPS module detected, position not valid or no satellite GPS signal reception.
	GPS module detected, satellite GPS signal reception, date and time valid and synchronized, synchronization pulses active

Once an initial position fix is obtained, instrument will set time and date to GPS + Time zone - user selected in Set Date/Time menu (*see figure below*).

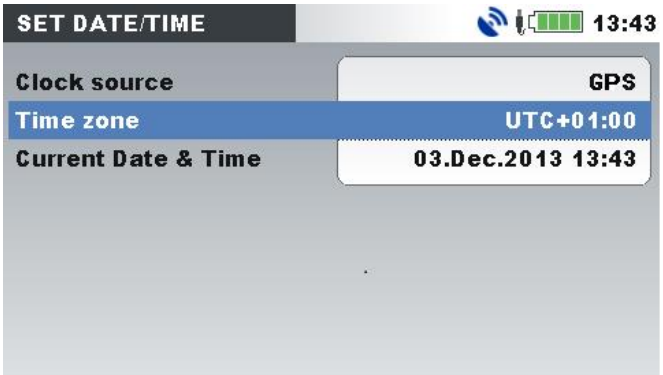

Figure 124: Set time zone screen

Table 121: Keys in Set time zone screen

	Changes Time zone.
ESC	Confirms selected Time zone and returns to “GENERAL SETUP” menu.

When the time zone is set, MI 2893/MI 2892/MI 2885 will synchronize its system time clock and internal RTC clock with the received UTC time. GPS module also provides the instrument with extremely accurate synchronization pulses every second (PPS – Pulse Per Second) for synchronization purposes in case of lost satellite reception.

Note: GPS synchronization should be done before starting measurements.

For detailed information please check user manual of A 1355 GPS Receiver.

4.2.1 Printing support

MI 2893/MI 2892/MI 2885 support direct printing to Seiko DPU 414 printer. User can print any screen under MEASUREMENTS menu. In order to print, connect instrument with the printer according to the figure below and press and hold ESC key for 5 seconds. Characteristic “beep” signal will indicate that printing is started.

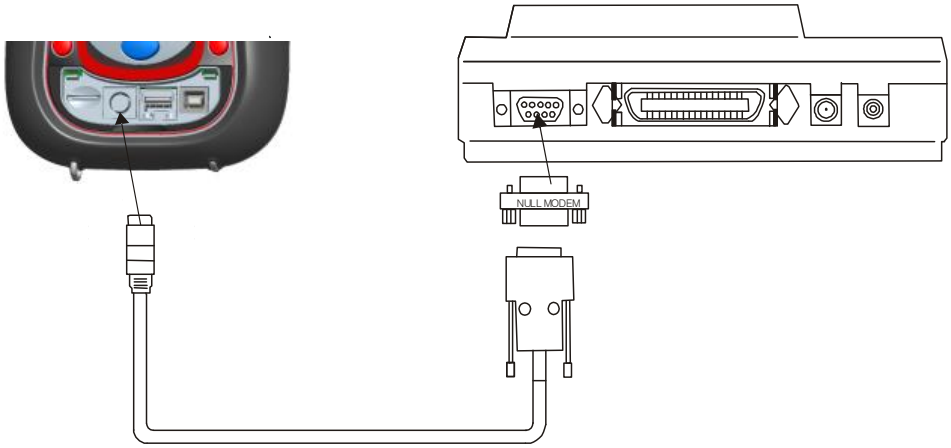

Figure 125: *Connecting printer DPU 414 with instrument*

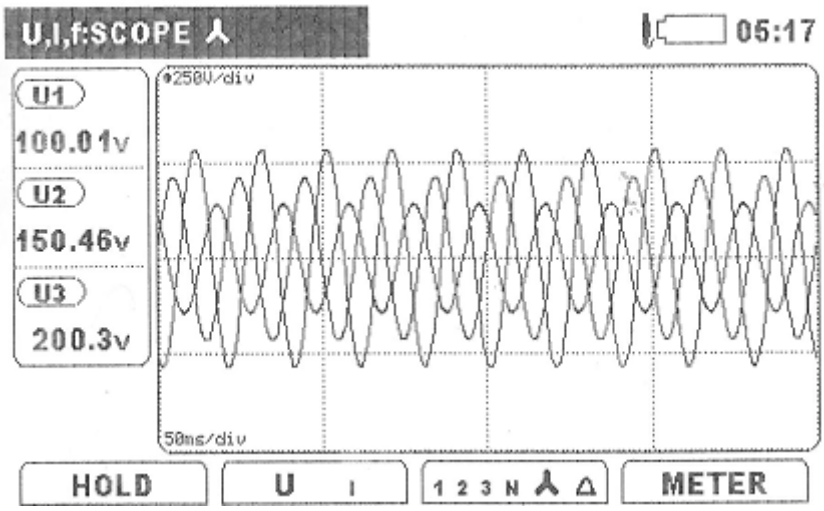

Figure 126: *SCOPE screen print*

Instructions for printer setup

Printer is configured to work with instrument directly. However, if non-original printer device is used, printer should be properly configured before use, according to the following procedure:

1. Fit paper into printer.
2. Turn off printer.
3. Hold “On Line” key and turn on printer.
   Printer will print settings of dip switches.
4. Press “On Line” key to continue.
5. Press “Feed” key in order to set **Dip SW-1, SW No. 1** (OFF) according to the table below.
6. Press “On line” key in order to set **Dip SW-1, SW No. 2** (ON) according to the table below.
7. Continue procedure according to the table below.
8. After Dip **SW-1, SW No. 8** is set, press Continue – “On line” key.

9. Continue procedure according to the table below: Dip **SW-2** and Dip **SW-3.**
10. After **Dip SW-3 No. 8** is set, press Write – "Feed" key for saving new configuration into memory.
11. Turn Off/On printer.

Table 122: DPU 414 Dip switches settings are shown on table below:

SW No.	Dip SW-1		Dip SW-2:		Dip SW-3	
1.	OFF	Input = Serial	ON	Printing Colums = 40	ON	Data Length = 8 bits
2.	ON	Printing Speed = High	ON	User Font Back-up = ON	ON	Parity setting = No
3.	ON	Auto Loading = ON	ON	Character Sel. = Normal	ON	Parity condition = Odd
4.	OFF	Auto LF = OFF	ON	Zero = Normal	OFF	Busy Control = XON/XOFF
5.	OFF	Setting Cmd. = Disable	ON	International	OFF	Baud Rate Select = 19200 bps
6.	OFF	Printing Density = 100%	ON	Character Set U.S.A.	ON	
7.	ON		ON		ON	
8.	ON		OFF		OFF	

Note: Use "On Line" key as "OFF" and "Feed" key as "ON".

4.3 Remote instrument connection (over Internet / Internet(3G/GPRS) / Intranet (LAN))

4.3.1 Communication principle

MI 2893/MI 2892/MI 2885 instrument use Ethernet port for connection to PowerView through internet. As companies frequently use firewalls to limit internet traffic options, whole communication is routed through dedicated "Metrel Route Server". In this way instrument and PowerView can avoid firewalls and router restrictions. Communication is established in four steps:

1. User selects INTERNET or INTERNET (3G/GPRS) or INTRANET (LAN) connection under COMMUNICATION menu, and checks if connection to Metrel server can be established (Status bar icon should appear within 2 minutes).
   Note: Outgoing ports 80, 443, 7781 ÷ 8888 to the gprs.metrel.si server should be opened on remote firewall where instrument is placed!
2. User enters instrument serial number on PowerView and connects to the instrument over Metrel server.

Note: In case of using accessory A 1622 3G Wi-Fi modem for internet connection, please check A 1622 instruction manual in order to properly set up modem, before using it.

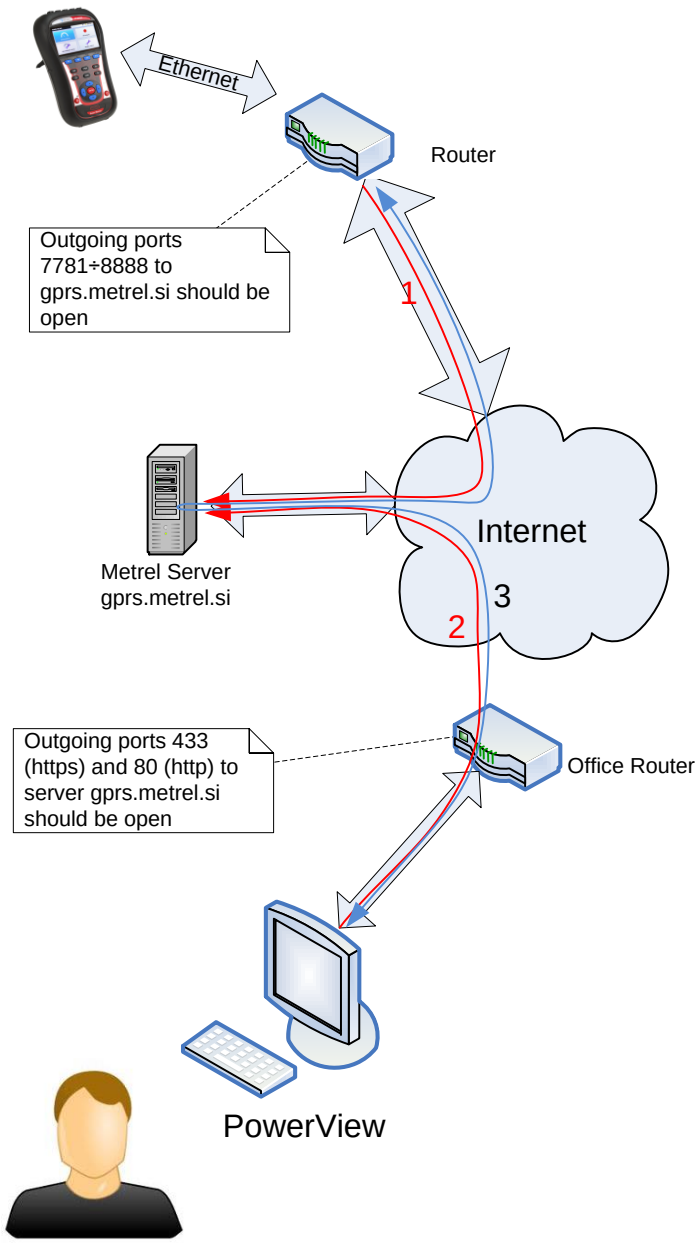

Figure 127: *Schematic view on the remote measurements*

4.3.2 Instrument setup on remote measurement site

Installation procedure on remote site starts by connecting MI 2893/MI 2892/MI 2885 instrument to the grid or measurement point. As measurement campaign can last for days or weeks it is necessary to assure reliable power supply to the instrument. Additionally, fully charged instrument batteries can provide power to the instrument during interrupts and blackouts for more than 5 hours. After instrument installation, connection parameters should be set.
In order to establish remote connection with instrument through PC software PowerView v3.0, instrument communication parameters should be configured. Figure below shows COMMUNICATION menu in GENERAL SETUP.

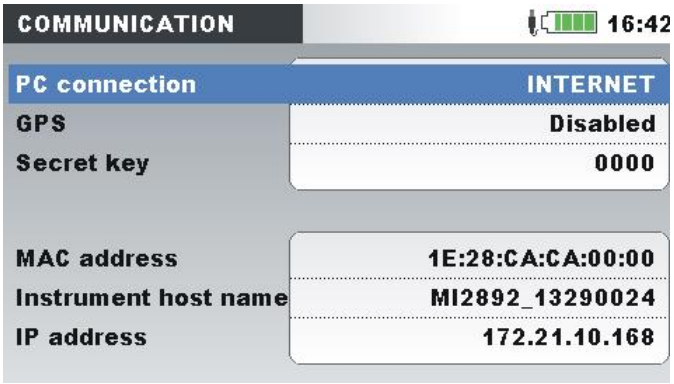

Figure 128: Internet connection setup screen

Following parameters should be entered in order to establish Internet communication:

Table 123: Internet setup parameters

PC connection	**Internet**	Select internet connection in order to communicate with PowerView over internet connection.
Secret key	**0000**	Enter number code (4-digits). User need to store this number, as will be later asked by PowerView v3.0, during connection procedure

After entering parameters user should connect Ethernet cable. Instrument will receive IP address from DHCP Server. It can take up to 2 minutes in order to get new IP number. Once instrument IP address is obtained, it will try to connect to Metrel server, over which communication with PowerView is assured. Once everything is connected, icon will appear on the Status bar.
Connection status can be also observed on instrument Status bar, as shown on table below.

Table 124: Internet status bar icons

	Internet connection is not available. Instrument is trying to obtain IP address and then connect to Metrel server.
	Instrument is connected to the internet and Metrel server, and ready for communication. **Note: Outgoing ports 80, 443, 7781 ÷ 8888 to the gprs.metrel.si server should be opened on remote firewall!**
	Communication in progress. Instrument is connected to the PowerView instance.

4.3.3 PowerView setup for instrument remote access

In order to access remotely to the instrument, PC software PowerView v3.0 should be configured properly (See PowerView v3.0 manual for instructions how to install to your PC). PowerView v3.0 communicates over 80 and 443 ports, on similar way as your internet browser.
Note: Outgoing ports 80, 443 to the gprs.metrel.si server should be opened on local firewall!

PowerView settings

Press on Remote 

in toolbar in order to open remote connection settings, as shown on figure below.

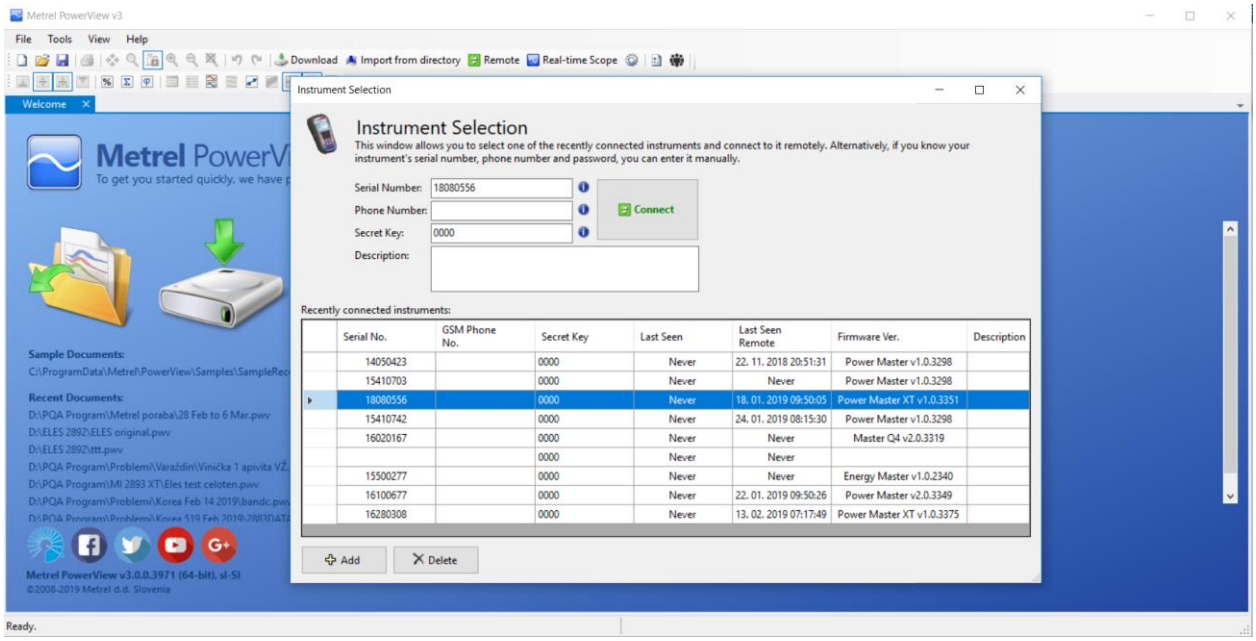

Figure 129: *PowerView v3.0 remote connection settings form*

User needs to fill following data into form:

Table 125: Instrument selection form parameters

Serial Number:	**Required**	Enter Power Quality Analyser serial number
Phone Number:	**Not Required**	Leave this field empty
Secret Key:	**Required**	Enter number code which was entered in instrument Communication settings menu as: **Secret Key**.
Description:	**Optional**	Enter instrument description

By pressing 

button, user can add another instrument configuration. 

button is used to remove selected instrument configuration from the list. Connection procedure will begin, by pressing on

button.

4.3.4 Remote connection

Establishing connection

After entering PowerView v3.0 remote settings and pressing on **Connect** button, Remote Connection window will appear (shown below).

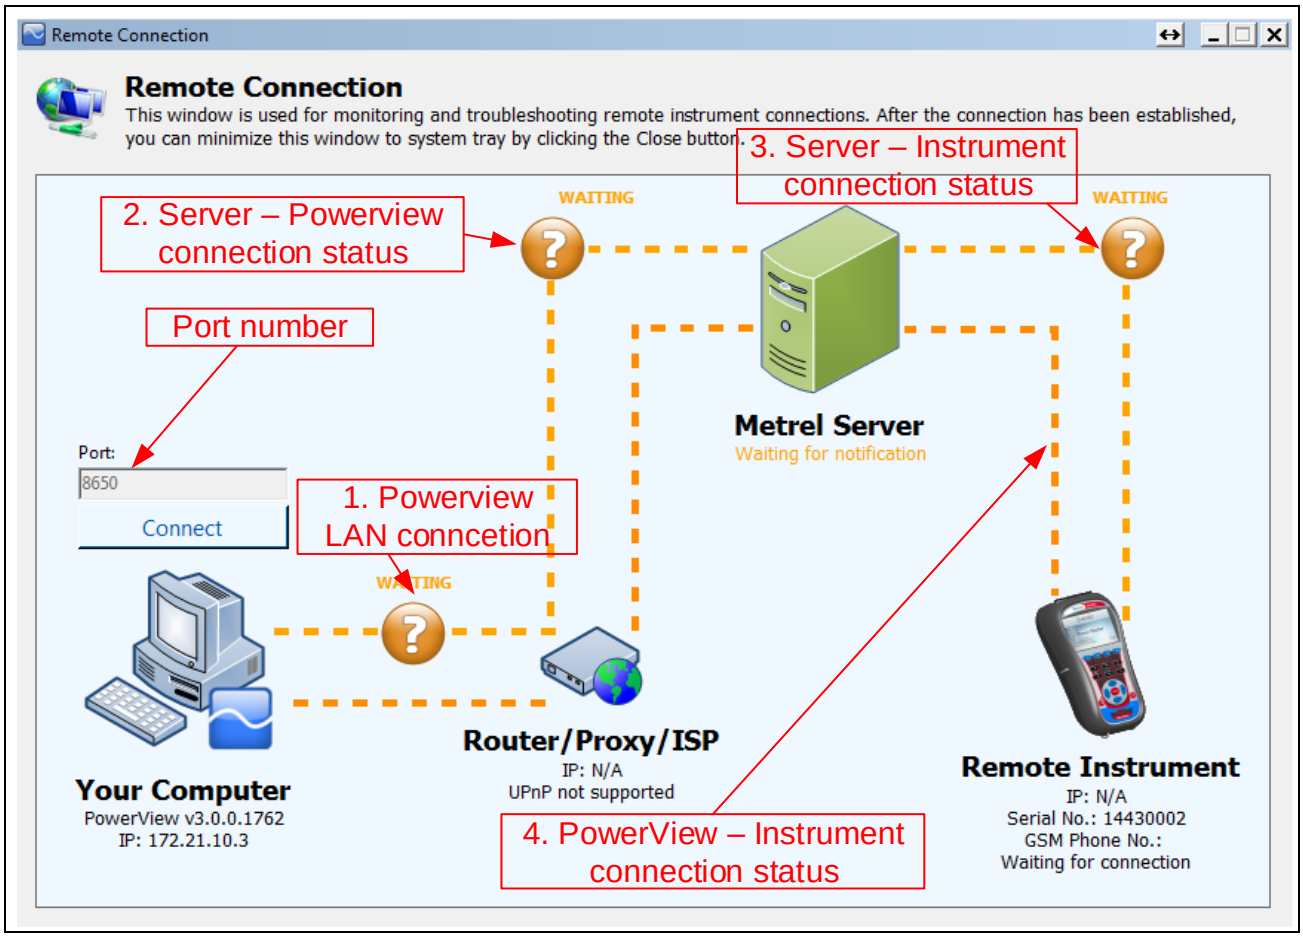

Figure 130: *PowerView v3.0 remote connection monitor*

This window is used for monitoring and troubleshooting remote instrument connection. Remote connection can be divided into 4 steps.

Step 1: PowerView v3.0 connection to Local Area Network (LAN)
After entering "Remote Connection" PowerView v3.0 will try to establish internet connection automatically. In order to establish connection, PowerView v3.0 requires http connection to the internet. If connection was successful, a green icon and "CONNECTED" status will appear between "Your Computer" and "Router/Proxy/ISP" icons, as shown on figure below. In case of ERROR, please ask your network administrator to provide PowerView v3.0 http access to the internet.

Step 2: PowerView v3.0 connection to Metrel Server
After establishing internet connection in Step 1, PowerView v3.0 will contact Metrel Server. If connection was successful, a green icon and "CONNECTED" status will appear between "Metrel Server" and "Router/Proxy/ISP" icons, as shown on figure below. In case of ERROR, please ask your network administrator for help. Note, that outgoing communication to gprs.metrel.si over 80 and 443 ports should be enabled.

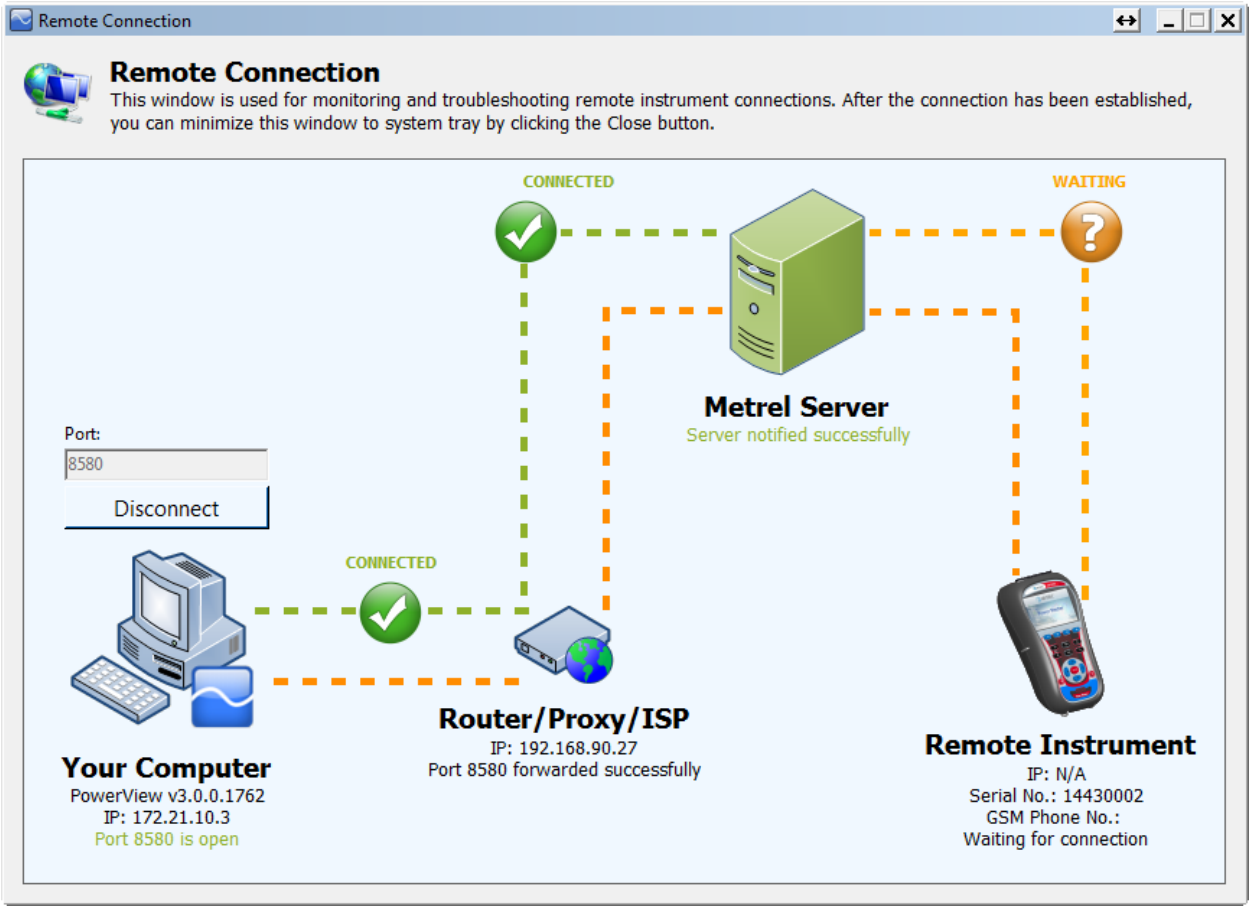

Figure 131: PowerView connection to LAN and Metrel Server established (Steps 1 & 2)

Note: Step 1 and Step 2 are automatically executed, after entering Remote Connection.

Step 3: Remote Instrument connection to Metrel Server
After the PowerView v3.0 successful connects to the Metrel Server, server will check if your instrument is waiting for your connection. If that is a case, instrument will establish connection with Metrel server. The green icon and "CONNECTED" status will appear between "Metrel Server" and "Remote Instrument" icon, as shown on figure below.

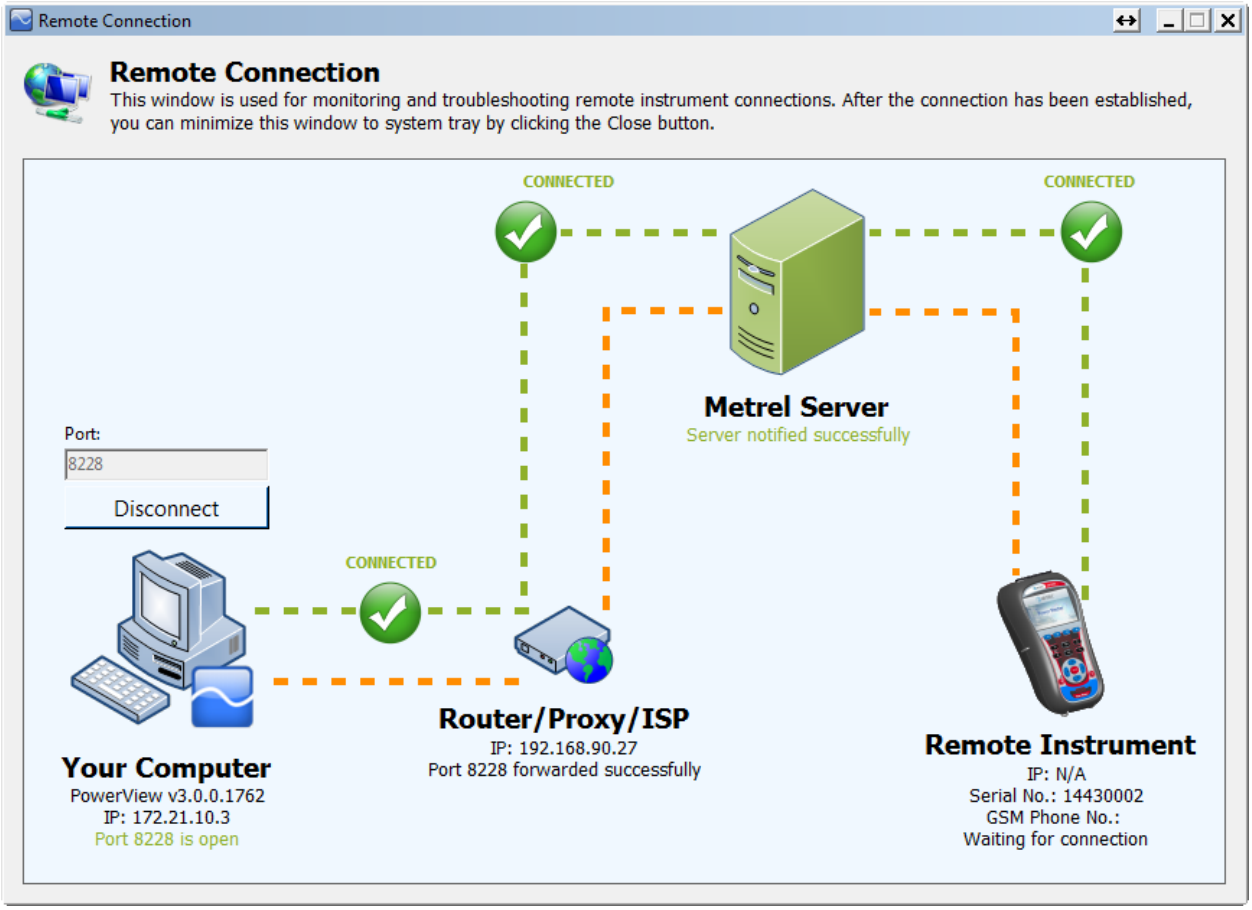

Figure 132: Remote instrument connection to Metrel Server established (Step 3)

Step 4: Remote Instrument connection to PowerView v3.0

After first three steps were successfully finished, MI 2893/MI 2892/MI 2885 instrument will automatically connect to the PowerView v3.0 via VPN connection, made through Metrel server and establish connection.

If Remote Instrument connection to PowerView v3.0 was successful, a green icon and “CONNECTED” status will appear between “Router/Proxy/ISP” and “Remote Instrument” icon, as shown on figure below. This window can now be closed as it is not needed any more. and it should be proceeded to remote instrument access described in following sections.

In case if connection drops status “ERROR” or “WAITING” will appear in PowerView remote connection window. Connection will be automatically restored and started operation will continue.

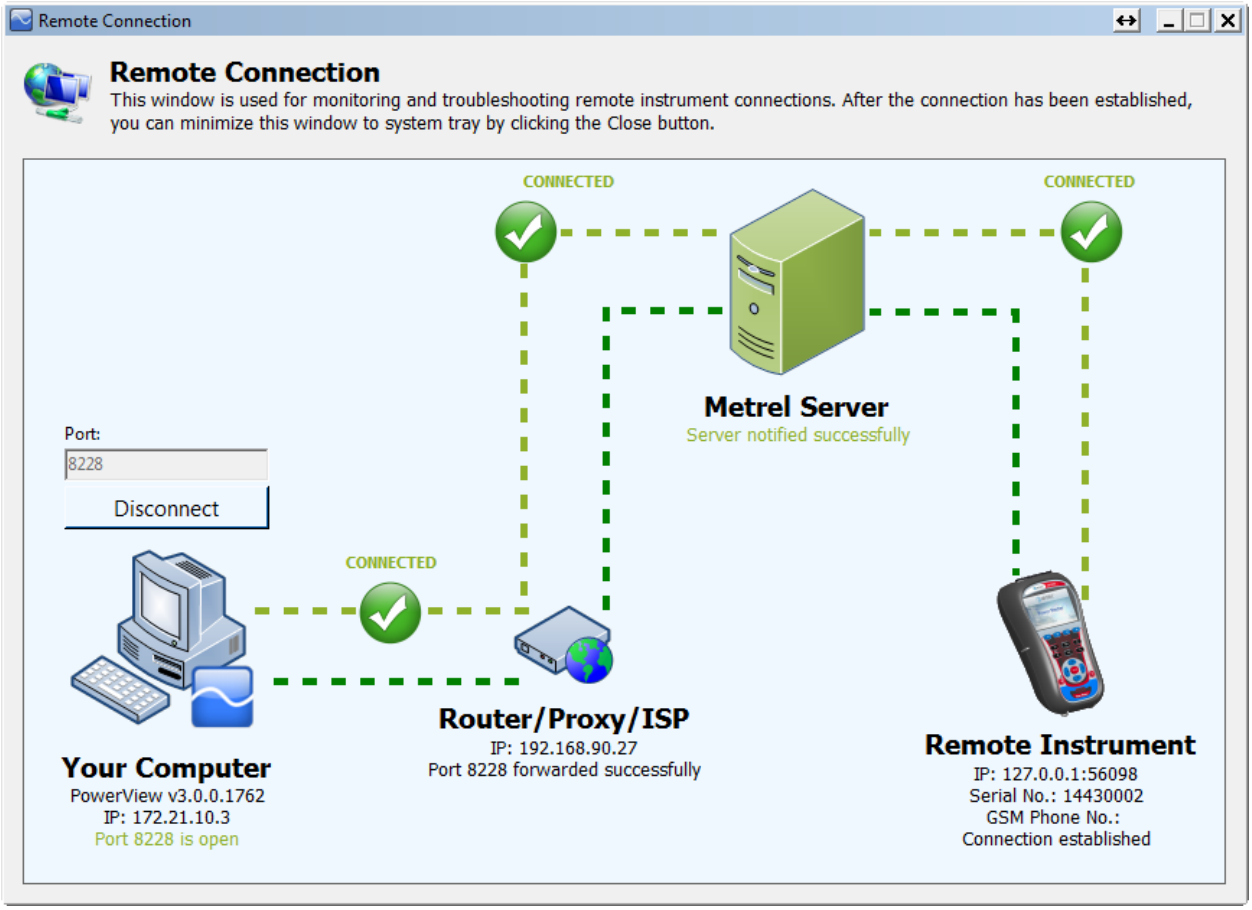

Figure 133: *Remote instrument connection to PowerView v3.0 established (Step 4)*

While the data is refreshed, the Remote button is displayed in green, to indicate that the connection is active, as shown below. If it is displayed in orange colour, it means that the communication was broken and it should be reinitialized by user.

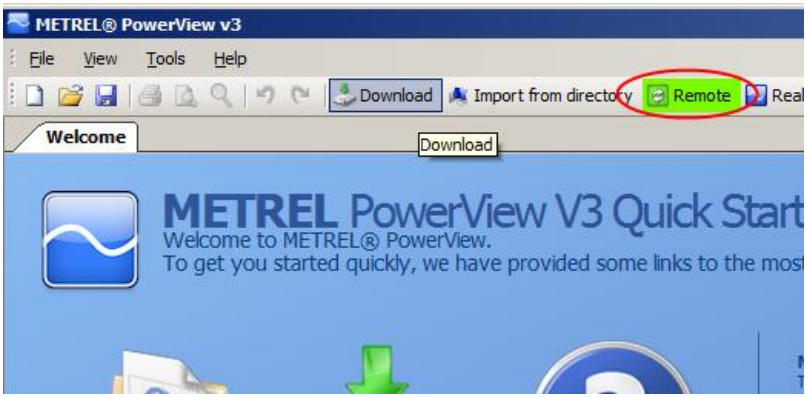

Figure 134: *Active connection indication*

Remote connection screen can also be accessed through Windows tray bar, by clicking on icon. This is particularly useful to reconnect instrument and PowerView v3.0, after network failure.

Figure 135: *Remote connection icon*

Downloading data

If remote connection settings are correct and "Remote Instrument" is connected to PowerView v3.0, download data is possible. Open the download window by pressing F5, or by clicking on the Download button in the toolbar, or by selecting Download from Tools menu.
Download window will be displayed, and PowerView v3.0 will immediately try to connect to the instrument and detect the instrument model and firmware version.

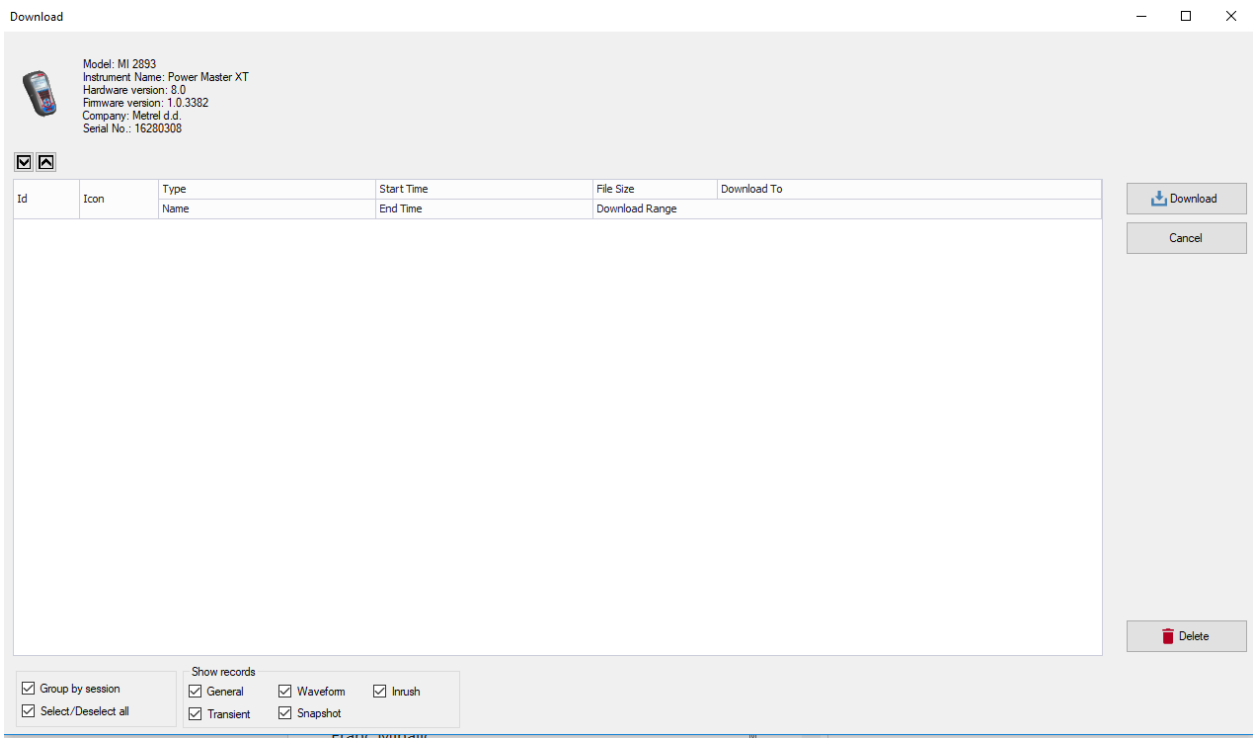

Figure 136: *Detection of the instrument type*

After a moment, instrument type should be detected, or an error message will be received, with the appropriate explanation. If connection can't be established, please check your connection settings.

When the instrument model is detected, PowerView v3.0 will download a list of records from the instrument. Any of the records from the list can be selected by simply clicking on them. Additional, "Select/Deselect all" tick box is available to select or deselect all records on displayed page. Selected records entries will have a green background.

Before downloading, a destination site node for each record can be defined. Each entry in a list contains a drop-down list of sites in all currently open documents in PowerView v3.0. If no document is opened, all records will be downloaded to a new site and saved into a new file.

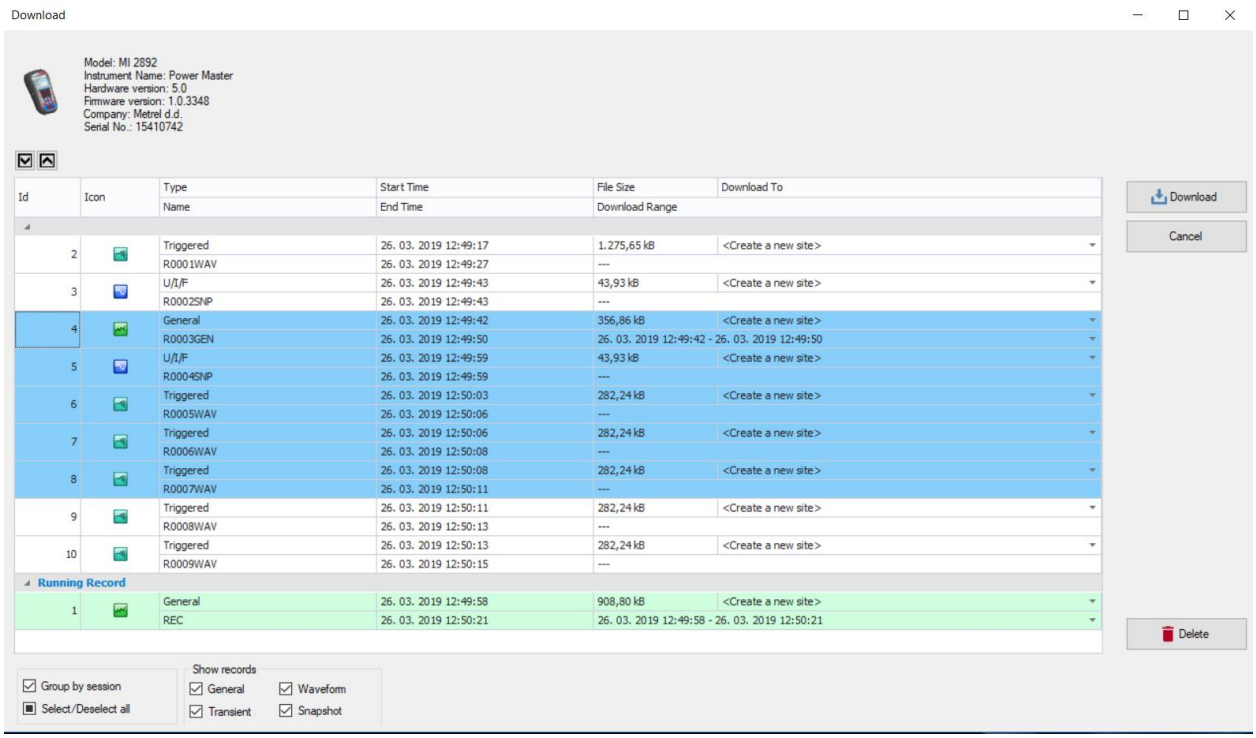

Figure 137: *Selecting records from a list for download*

Figure above show example were six records are select. To start download, click on the “Download” button.

Immediately after download, a new document window will be shown in PowerView v3.0, with the selected records placed inside a new site node. A backup PowerView v3.0 file is always created at this point, compressed into a *.zip file and saved inside your *MyDocuments/Metrel/PowerView/PQData* folder. This backup copy is made every time a file is created or opened, to make sure that you can recover all your downloaded data in case of accidental delete or change. However, note that records that were not selected in the Download window are not downloaded and therefore not saved to disk, so check that all relevant records are downloaded before deleting them from the instrument.

Real time scope

If remote connection settings are correct and remote instrument is connected to PowerView v3.0, click the Real-Time Scope button to open the Real time scope window. A new document window will be opened, as shown on the picture below.

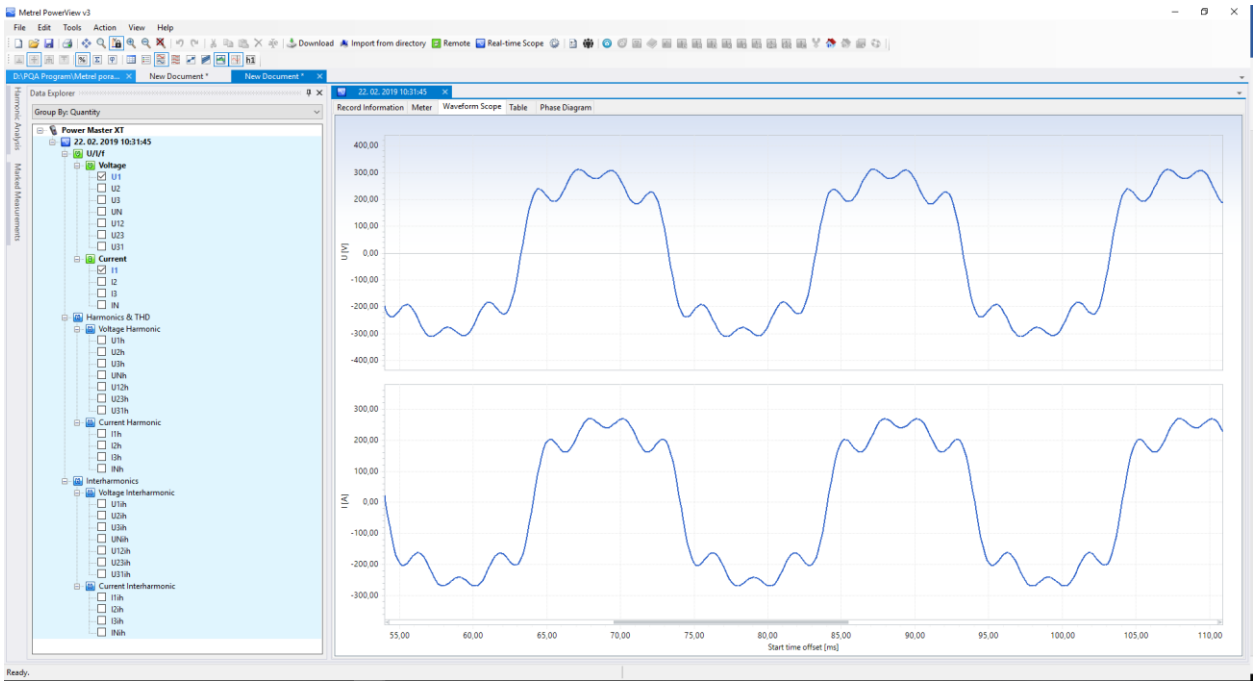

Figure 138: *Real time scope window in remote connection, with several channels selected*

The figure above shows an online window, with several channels selected. While online view is active, data are automatically updated. Updating speed will depend on your connection speed, and each new update is initiated as soon as the previous one has been downloaded, to ensure fastest possible refresh rate. While Real time scope is active, Real-Time Scope button is displayed in green, to indicate that the connection is active.

Depending on your connection speed, it may take a few seconds until the instrument is detected and first online scope is downloaded. All tree nodes will be completely expanded when the first record is shown, to enable easier channel selection. You may also notice that the downloaded record node will not be located within a site node, like in other records, but rather placed in a special instrument node. However, this record can be moved to any other node, or saved.
To close the online view, click the Real-Time Scope button again, or close the online window.

Remote instrument configuration

Instrument configuration tool helps you to change instrument settings, manage recording settings, start or stop recordings and manage instrument memory remotely. In order to begin, select “Remote instrument configuration” in PowerView v3.0 “Tools” menu. A form shown on figure below should pop up on the screen.
Note: Remote connection procedure described in 4.3 should be performed successfully before starting remote instrument configuration.

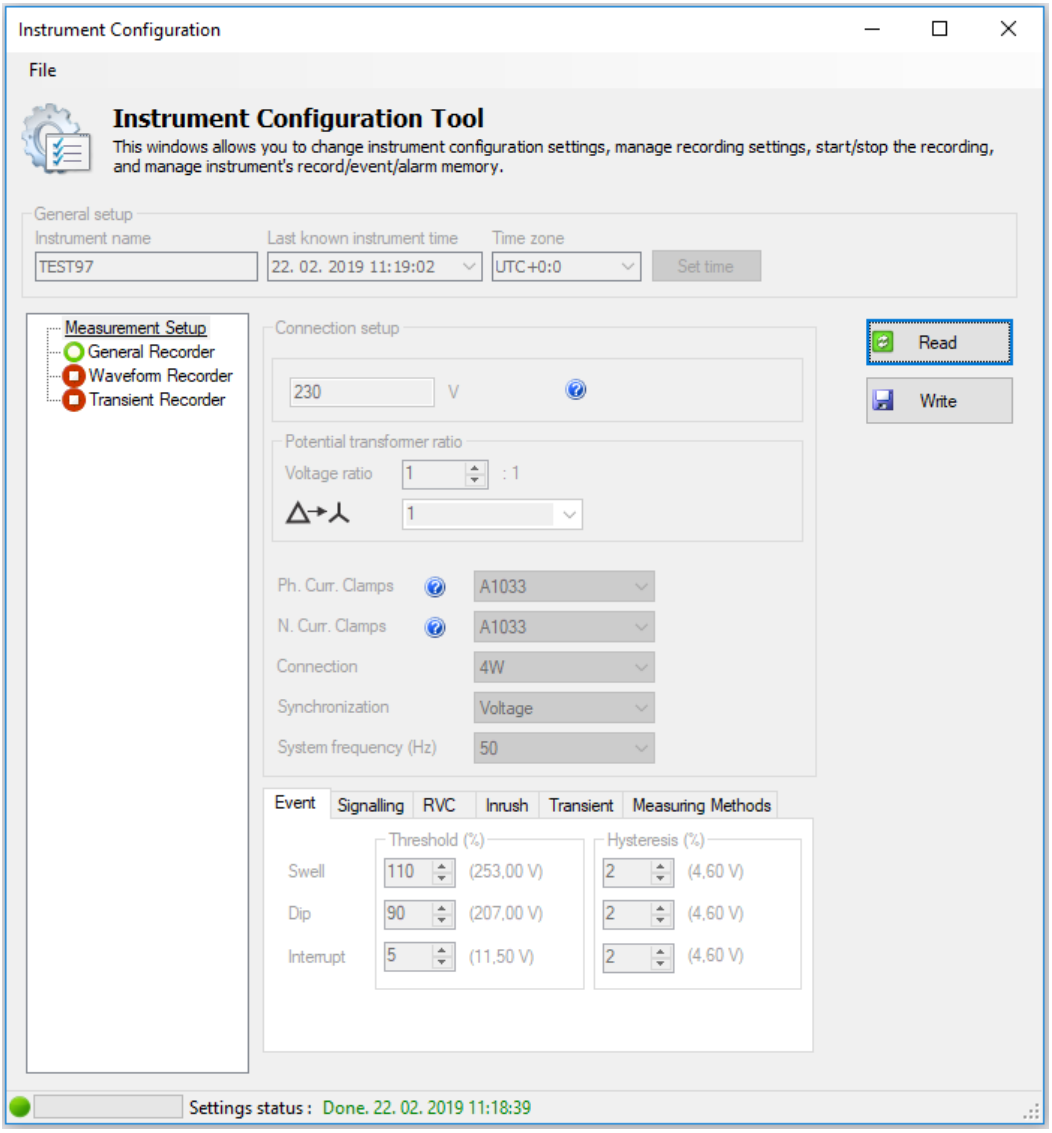

Figure 139: *Remote Instrument Configuration form*

Please click on the “Read” button in order to receive current instrument settings. After retrieving data from the remote instrument, form should be filled with data, as shown on figure below. Changed parameters, will be sent back to the instrument by clicking on the “Write” button.
In order to remotely control instrument recorders, please click on the “Recorder” node as shown on figure below. User can select any of the instrument recorders and configure accompanying parameters. For description of particular recorder settings, see appropriate section in this manual. Changed parameters, will be sent back to the instrument by clicking on the “Write” button.

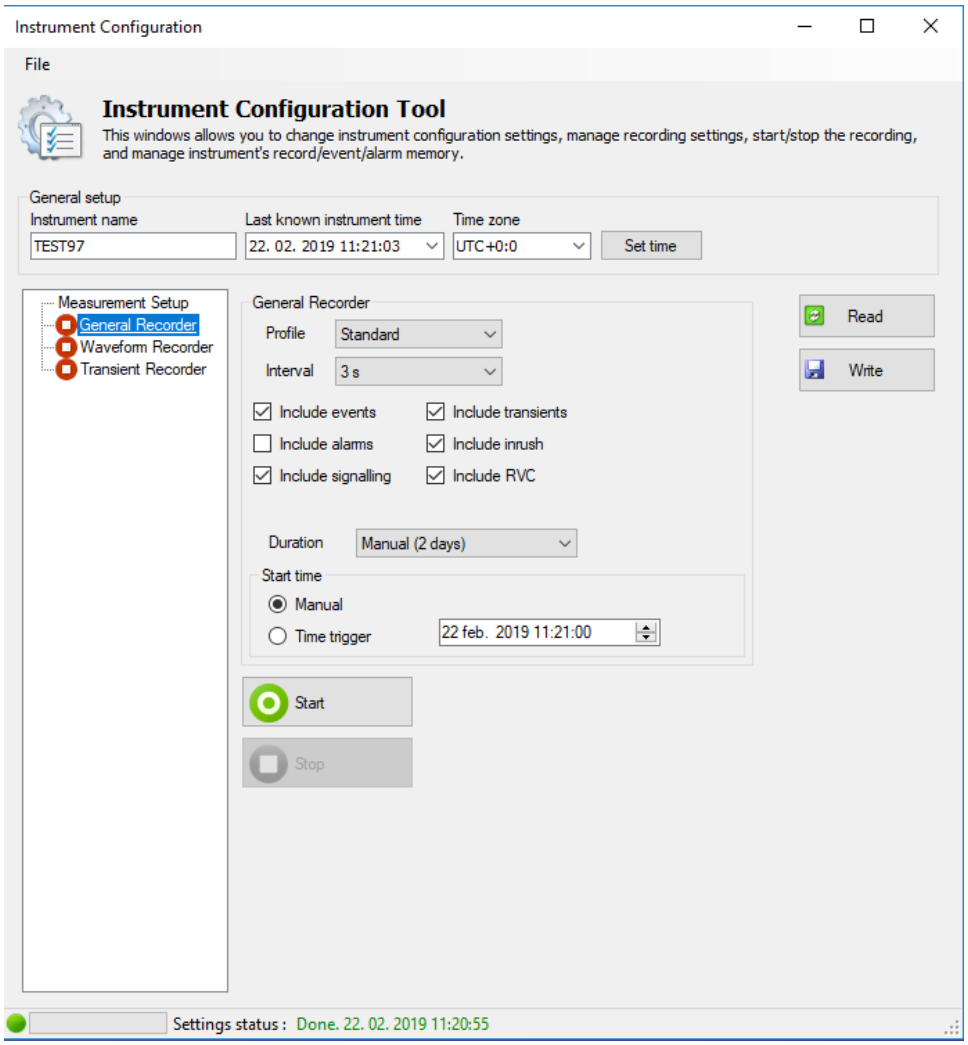

Figure 140: *Remote Recorder configuration*

By clicking on “Start” button, instrument will start selected recorder in the same manner as would user start recorder directly on instrument. Green icon indicates that Recorder is active, while red icon indicates that recorder is stopped.
Additionally, PowerView v3.0 will disable changing parameters during recording. Trigger button in waveform or transient recorder will trigger recorder in similar way as TRIGGER button on instrument, when pressed. Recording can be terminated by pressing on “Stop” button, or will automatically finish, after conditions are met, for example after given period of time or after event capturing. By pressing on “Read” button, user can receive instrument status in any moment.

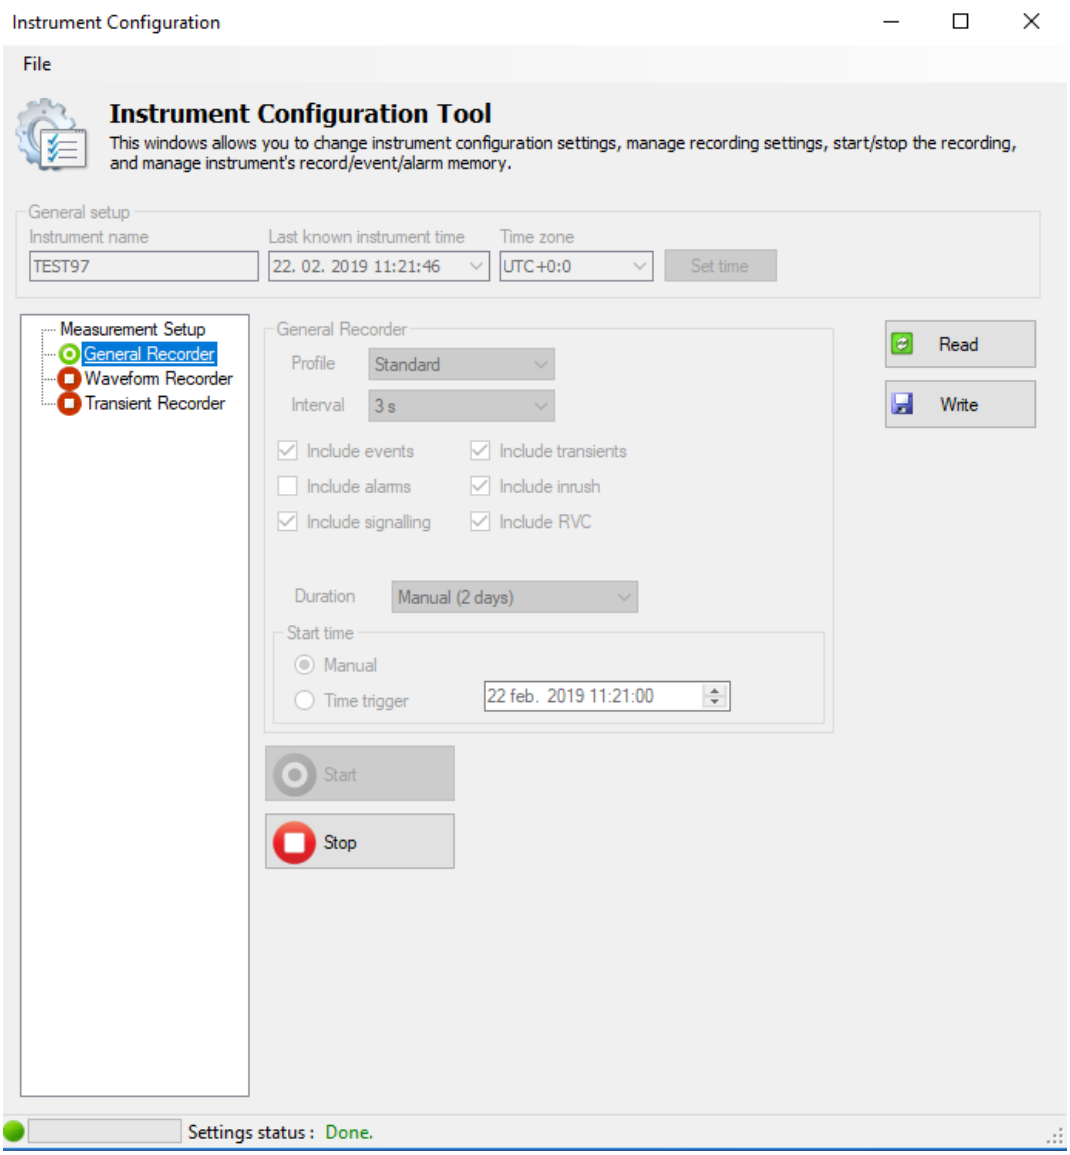

Figure 141: *Recording in progress*

4.4 Number of measured parameters and connection type relationship

Parameters which MI 2893/MI 2892/MI 2885 displays and measures, mainly depends on network type, defined in CONNECTION SETUP menu – Connection type. In example if user choose single phase connection system, only measurements relate to single phase system will be present. Table below shows dependencies between measurement parameters and type of network.

Table 126: Quantities measured by instrument

		Connection type																							
Menu		1W		2W					3W				OpenD				4W							
		L1	N	L1	L2	N	L12	Tot	L12	L23	L31	Tot	L12	L23	L31	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Voltage	RMS	•	•	•	•	•	•		•	•	•		•	•	•		•	•	•	•	•	•	•	
	THD	•	•	•	•	•			•	•	•		•	•	•		•	•	•	•				
	Crest Factor	•	•	•	•	•	•		•	•	•		•	•	•		•	•	•	•	•	•	•	
	Frequency	•		•					•				•				•							
	Harmonics (0÷50)	•	•	•	•	•			•	•	•		•	•	•		•	•	•	•				
	Interharm. (0÷50)	•	•	•	•	•			•	•	•		•	•	•		•	•	•	•				
	Unbalance							•				•				•								•
	Flicker	•		•	•				•	•	•		•	•	•		•	•	•					
	Signalling	•		•	•				•	•	•		•	•	•		•	•	•					
	Events	•		•	•				•	•	•		•	•	•		•	•	•					
		L1	N	L1	L2	N	L12	Tot	L1	L2	L3	Tot	L1	L2	L3	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Current	RMS	•	•	•	•				•	•	•		•	•	•		•	•	•					
	THD	•	•	•	•				•	•	•		•	•	•		•	•	•					
	Harmonics (0÷50)	•	•	•	•				•	•	•		•	•	•		•	•	•					
	Interharm. (0÷50)	•	•	•	•				•	•	•		•	•	•		•	•	•					
	Unbalance							•				•				•								•
Consumed Pwr.	Combined	•		•	•			•				•				•	•	•	•					•
	Fundamental	•		•	•			•				•				•	•	•	•					•
	Nonfundament.	•		•	•			•				•				•	•	•	•					•
	Energy	•		•	•			•				•				•	•	•	•					•
	Power factors	•		•	•			•				•				•	•	•	•					•
Generated Pwr.	Combined	•		•	•			•				•				•	•	•	•					•
	Fundamental	•		•	•			•				•				•	•	•	•					•
	Nonfundament.	•		•	•			•				•				•	•	•	•					•
	Energy	•		•	•			•				•				•	•	•	•					•
	Power Factors	•		•	•			•				•				•	•	•	•					•

		Connection type						
Menu		INV - 1W		INV – 3W				
		L1	INV	L12	L23	L31	Tot	INV
Voltage	RMS	•	•	•	•	•		•
	AC		•					•
	DC		•					•
	THD	•		•	•	•		
	Crest Factor	•		•	•	•		
	Frequency	•		•				
	Harmonics (0÷50)	•		•	•	•		
	Interharm. (0÷50)	•		•	•	•		
	Unbalance						•	
	Flicker	•		•	•	•		
	Signalling	•		•	•	•		
	Events	•		•	•	•		
		L1	N	L12	L23	L31	Tot	N
Current	RMS	•	•	•	•	•		•
	AC		•					•
	DC		•					•
	THD	•		•	•	•		
	Harmonics (0÷50)	•		•	•	•		
	Interharm. (0÷50)	•		•	•	•		
	Unbalance						•	
Consumed Pwr.	Combined	•	•				•	•
	AC		•					•
	DC		•					•
	Fundamental	•					•	
	Nonfundament.	•					•	
	Energy	•					•	
	Power factors	•					•	
Generated Pwr.	Combined	•	•				•	•
	AC		•					•
	DC		•					•
	Fundamental	•					•	
	Nonfundament.	•					•	
	Energy	•					•	
	Power Factors	•					•	

Note: Frequency measurement depends on synchronization (reference) channel, which can be voltage or current.

In the similar manner recording quantities are related to connection type too. Recording Signals in GENERAL RECORDER menu are chosen according to the Connection type, and record PROFILE in according to the next table.

Table 127: Quantities recorded by instrument (Standard Profile)

		Connection type																						
Menu		1W		2W					3W				OpenD				4W							
		L1	N	L1	L2	N	L12	Tot	L12	L23	L31	Tot	L12	L23	L31	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Voltage	RMS	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	
	THD	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕	↑ ↕				
	Crest Factor	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	
	Frequency	↑ ↕ ↓		↑ ↕ ↓					↑ ↕ ↓				↑ ↕ ↓				↑ ↕ ↓							
	Harmonics (0÷50)	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕	↑ ↕				
	Interharm. (0÷50)	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕	↑ ↕				
	Unbalance							↑ ↕ ↓				↑ ↕ ↓				↑ ↕ ↓								↑ ↕ ↓
	Flicker	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓				↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓					
	Signalling	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓				↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓					
	Events	•		•	•				•	•	•		•	•	•		•	•	•					
		L1	N	L1	L2	N	L12	Tot	L12	L1	L2	L3	Tot	L2	L3	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Current	RMS	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕			↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕		↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕		↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕				
	THD	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕			↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕				
	Harmonics (0÷50)	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕			↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕				
	Interharm. (0÷50)	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕			↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕				
	Unbalance							↑ ↕ ↓ ↕				↑ ↕ ↓ ↕				↑ ↕ ↓ ↕								↑ ↕ ↓ ↕
		L1	N	L1	L2	N	L12	Tot	L12	L1	L2	L3	Tot	L2	L3	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Power	Combined	↑ ↕ ↓ ↕		↑ ↕ ↓ ↕	↑ ↕ ↓ ↕			↑ ↕ ↓ ↕				↑ ↕ ↓ ↕				↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕					↑ ↕ ↓ ↕
	Fundamental	↑ ↕ ↓ ↕		↑ ↕ ↓ ↕	↑ ↕ ↓ ↕			↑ ↕ ↓ ↕				↑ ↕ ↓ ↕				↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕					↑ ↕ ↓ ↕
	Nonfundament.	↑ ↕		↑ ↕	↑ ↕			↑ ↕				↑ ↕				↑ ↕	↑ ↕	↑ ↕	↑ ↕					↑ ↕

		↓ ±		↓ ±	↓ ±			↓ ±				↓ ±				↓ ±	↓ ±	↓ ±	↓ ±					↓ ±
	Active Energy	±						±				±				±	±	±	±					±
	Reactive Ener.	±						±				±				±	±	±	±					±
	Power factors	↑ ± ↓ ±						↑ ± ↓ ±				↑ ± ↓ ±				↑ ± ↓ ±	↑ ± ↓ ±	↑ ± ↓ ±	↑ ± ↓ ±					↑ ± ↓ ±

		Connection type						
Menu		**INV-1W**		**INV-3W**				
		L1	**N**	**L12**	**L23**	**L31**	**Tot**	**N**
Voltage	**RMS**	↑ ± ↓	↑ ± ↓	↑ ± ↓	↑ ± ↓	↑ ± ↓	↑ ± ↓	↑ ± ↓
	AC		↑ ± ↓					↑ ± ↓
	DC		↑ ± ↓					↑ ± ↓
	THD	↑ ±		↑ ±	↑ ±	↑ ±		
	Crest Factor	↑ ± ↓		↑ ± ↓	↑ ± ↓	↑ ± ↓		
	Frequency	↑ ± ↓		↑ ± ↓				
	Harmonics (0÷50)	↑ ±		↑ ±	↑ ±	↑ ±		
	Interharm. (0÷50)	↑ ±		↑ ±	↑ ±	↑ ±		
	Unbalance						↑ ± ↓	
	Flicker	↑ ± ↓		↑ ± ↓	↑ ± ↓	↑ ± ↓		
	Signalling	↑ ± ↓		↑ ± ↓	↑ ± ↓	↑ ± ↓		
	Events	•		•	•	•		
		L1	**N**	**L12**	**L23**	**L31**	**Tot**	**N**
Current	**RMS**	↑ ± ↓ ±	↑ ↓ ±	↑ ± ↓ ±	↑ ± ↓ ±	↑ ± ↓ ±		↑ ↓ ±
	AC		↑ ↓ ±					↑ ↓ ±
	DC		↑ ↓ ±					↑ ↓ ±
	THD	↑ ± ↓		↑ ± ↓	↑ ± ↓	↑ ± ↓		
	Harmonics (0÷50)	↑ ± ↓		↑ ± ↓	↑ ± ↓	↑ ± ↓		
	Interharm. (0÷50)	↑ ± ↓		↑ ± ↓	↑ ± ↓	↑ ± ↓		
	Unbalance						↑ ±	

		L1	N	L12	L23	L31	Tot	N
Power	Combined							
	AC							
	DC							
	Fundamental							
	Nonfundament.							
	Active Energy							
	Reactive Ener.							
	Power factors							

Legend:

- - Quantity included.

- Maximal value for each interval is recorded.
- RMS or arithmetic average for each interval is recorded (see 5.1.15 for details).
- Minimal value for each interval is recorded.
- Active RMS or arithmetic average (AvgON) for each interval is recorded (see 5.1.15 for details).

Table 128: Quantities recorded by instrument (Limited Profile)

		Connection type																						
Menu		1W		2W					3W				OpenD				4W							
		L1	N	L1	L2	N	L12	Tot	L12	L23	L31	Tot	L12	L23	L31	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Voltage	RMS	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	
	THD	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕		↑ ↕	↑ ↕	↑ ↕	↑ ↕				
	Crest Factor	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	
	Frequency	↑ ⊞ ↓		↑ ⊞ ↓					↑ ⊞ ↓				↑ ⊞ ↓				↑ ⊞ ↓							
	Harmonics (0÷25)	↕	↕	↕	↕		↕		↕	↕	↕		↕	↕	↕		↕	↕	↕	↕	↕	↕	↕	
	Interharm. (0÷25)	↕	↕	↕	↕	↕	↕		↕	↕	↕		↕	↕	↕		↕	↕	↕	↕	↕	↕	↕	
	Unbalance							↑ ↕ ↓				↑ ↕ ↓				↑ ↕ ↓								↑ ↕ ↓
	Flicker	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓				↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓					
	Signalling	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓				↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓					
	Events	•		•	•				•	•	•		•	•	•		•	•	•					
		L1	N	L1	L2	N	L12	Tot	L12	L1	L2	L3	Tot	L2	L3	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Current	RMS	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕			↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕		↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕		↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕				
	THD	↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕			↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕		↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕		↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕	↑ ⊞ ↕				
	Harmonics (0÷25)	↕	↕	↕	↕	↕			↕	↕	↕		↕	↕	↕		↕	↕	↕	↕				
	Interharm. (0÷25)	↕	↕	↕	↕	↕			↕	↕	↕		⊞	↕	↕		↕	↕	↕	⊞				
	Unbalance							↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕								↑ ⊞ ↓ ↕
		L1	N	L1	L2	N	L12	Tot	L12	L1	L2	L3	Tot	L2	L3	Tot	L1	L2	L3	N	L12	L23	L31	Tot
Power	Combined	↑ ⊞ ↓ ↕		↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕			↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕					↑ ⊞ ↓ ↕
	Fundamental	↑ ⊞ ↓ ↕		↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕			↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕					↑ ⊞ ↓ ↕
	Nonfundament.	↑ ⊞ ↓ ↕		↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕			↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕					↑ ⊞ ↓ ↕
	Active Energy	↕						↕				↕				↕	↕	↕	↕					↕
	Reactive Ener.	↕						↕				↕				↕	↕	↕	↕					↕
	Power factors	↑ ⊞ ↓ ↕						↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕				↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕	↑ ⊞ ↓ ↕					↑ ⊞ ↓ ↕

		Connection type						
Menu		**INV-1W**		**INV-3W**				
		L1	**N**	**L12**	**L23**	**L31**	**Tot**	**N**
Voltage	**RMS**	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓
	AC		↑ ↕ ↓					↑ ↕ ↓
	DC		↑ ↕ ↓					↑ ↕ ↓
	THD	↑ ↕		↑ ↕	↑ ↕	↑ ↕		
	Crest Factor	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		
	Frequency	↑ ↕ ↓		↑ ↕ ↓				
	Harmonics $_{(0\div50)}$	↕		↕	↕	↕		
	Interharm. $_{(0\div50)}$	↕		↕	↕	↕		
	Unbalance						↑ ↕ ↓	
	Flicker	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		
	Signalling	↑ ↕ ↓		↑ ↕ ↓	↑ ↕ ↓	↑ ↕ ↓		
	Events	•		•	•	•		
		L1	**N**	**L12**	**L23**	**L31**	**Tot**	**N**
Current	**RMS**	↑ ↕ ↓ ↕	↑ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕		↑ ↓ ↕
	AC		↑ ↓ ↕					↑ ↓ ↕
	DC		↑ ↓ ↕					↑ ↓ ↕
	THD	↑ ↕ ↕		↑ ↕ ↕	↑ ↕ ↕	↑ ↕ ↕		
	Harmonics $_{(0\div50)}$	↕		↕	↕	↕		
	Interharm. $_{(0\div50)}$	↕		↕	↕	↕ ↕		
	Unbalance						↑ ↕ ↓ ↕	
		L1	**N**	**L12**	**L23**	**L31**	**Tot**	**N**
Power	**Combined**	↑ ↕ ↓ ↕	↑ ↕ ↓ ↕				↑ ↕ ↓ ↕	↑ ↕ ↓ ↕
	AC		↑ ↕ ↓ ↕					↑ ↕ ↓ ↕

	DC							
	Fundamental							
	Nonfundament.							
	Active Energy							
	Reactive Ener.							
	Power factors							

Legend:

- - Quantity included.

- Maximal value for each interval is recorded.
- RMS or arithmetic average for each interval is recorded (see 5.1.15 for details).
- Minimal value for each interval is recorded.
- Active RMS or arithmetic average (AvgON) for each interval is recorded (see 5.1.15 for details).

5 Theory and internal operation

This section contains basic theory of measuring functions and technical information of the internal operation of the MI 2893/MI 2892/MI 2885 instrument, including descriptions of measuring methods and logging principles.

5.1 Measurement methods

5.1.1 Measurement aggregation over time intervals

Standard compliance: IEC 61000-4-30 Class A (Section 4.4)

The basic measurement time interval for:

- Voltage
- Current
- Power
- Harmonics
- Inter-harmonics
- Signalling
- Unbalance

is a 10/12-cycle time interval. The 10/12-cycle measurement is resynchronized on each Interval tick according to the IEC 61000-4-30 Class A. Measurement methods are based on the digital sampling of the input signals, synchronised to the fundamental frequency. Each input (4 voltages and 4 currents) is simultaneously sampled.

5.1.2 Voltage measurement (magnitude of supply voltage)

Standard compliance: IEC 61000-4-30 Class A (Section 5.2)

All voltage measurements represent RMS values of the voltage magnitude over a 10/12-cycle time interval. Every interval is contiguous, and not overlapping with adjacent intervals.

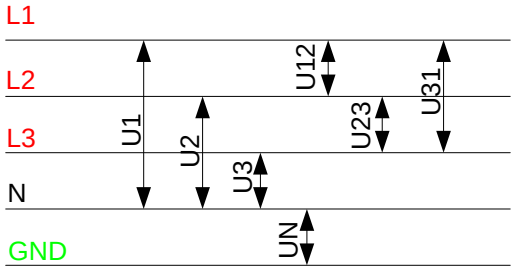

Figure 142: Phase and Phase-to-phase (line) voltage

Voltage values are measured according to the following equation:

Phase voltage: $$U_p = \sqrt{\frac{1}{M}\sum_{j=1}^{M} u_{pj}^{2}}$$ *[V], p: 1,2,3,N* (1)

Line voltage: $$Upg = \sqrt{\frac{1}{M}\sum_{j=1}^{M} (u_{pj} - u_{gj})^2}$$ [V], *pg.: 12,23,31* (2)

Phase voltage crest factor: $$CF_{Up} = \frac{U_{pPk}}{U_p}$$ *, p: 1,2,3,N* (3)

Line voltage crest factor: $$CF_{Upg} = \frac{U_{pgPk}}{U_{pg}}$$ *, pg: 12, 23, 31* (4)

The instrument has internally 3 voltage measurement ranges, which are automatically selected regarding to the nominal voltage.

5.1.3 Current measurement (magnitude of supply current)

Standard compliance: Class A (Section 5.13)

All current measurements represent RMS values of the samples of current magnitude over a 10/12-cycle time interval. Each 10/12-cycle interval is contiguous and non-overlapping.
Current values are measured according to the following equation:

Phase current: $$I_p = \sqrt{\frac{1}{M}\sum_{j=1}^{M} I_{pj}^{2}}$$ [A]**,** *p: 1,2,3,N* (5)

Phase current crest factor: $$Ip_{cr} = \frac{Ip_{\max}}{Ip}$$ *, p: 1,2,3, N* (6)

The instrument has internally two current ranges: 10% and 100% range of nominal transducer current. Additionally, Smart current clamps models offer few measuring ranges, automatic clamp detection and automatic range selection.

5.1.4 Frequency measurement

Standard compliance: IEC 61000-4-30 Class A (Section 5.1)

During RECORDING with aggregation time Interval: ≥10 sec frequency reading is obtained every 10 s. The fundamental frequency output is the ratio of the number of integral cycles counted during the 10 s time clock interval, divided by the cumulative duration of the integer cycles. Harmonics and interharmonics are attenuated with digital filter in order to minimize the effects of multiple zero crossings.
The measurement time intervals are non-overlapping. Individual cycles that overlap the 10 s time clock are discarded. Each 10 s interval begin on an absolute 10 s time clock, with uncertainty as specified in section 6.2.20.

For RECORDING with aggregation time Interval: <10 sec and on-line measurements, frequency reading is obtained from 10/12 cycles frequency. The frequency is ratio of 10/12 cycles, divided by the duration of the integer cycles.

Frequency measurement is *performed* on chosen Synchronization channel, in CONNECTION SETUP menu.

5.1.5 Modern Power measurement

Standard compliance: IEEE 1459-2010

See section 3.21.6 how to select Modern Power measurement method. Please note that instrument record all measurement (Classic and Modern), regardless of selected method. Data presentation could be changed on the instrument LCD or inside the PowerView3.0.
Instrument fully complies with power measurement defined in the latest IEEE 1459 standard. The old definitions for active, reactive, and apparent powers are valid as long as the current and voltage waveforms remained nearly sinusoidal. This is not the case today, where we have various power electronics equipment, such as Adjustable Speed Drives, Controlled Rectifiers, Cyclo-converters, Electronically Ballasted Lamps. Those represent major nonlinear and parametric loads proliferating among industrial and commercial customers. New Power theory splits power to fundamental and nonfundamental components, as shown on figure below.

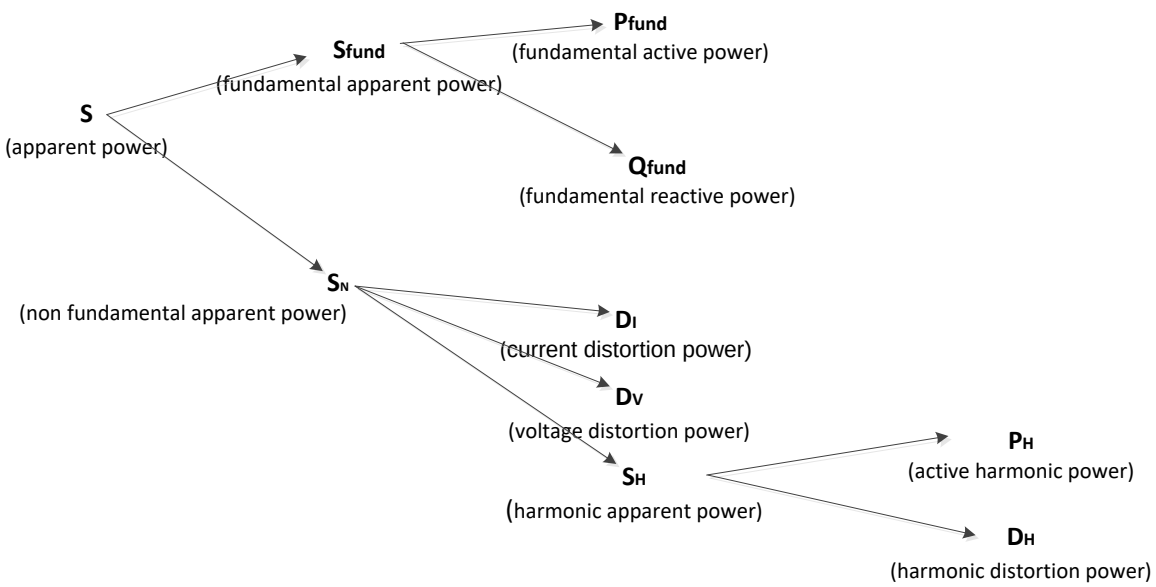

Figure 143: IEEE 1459 phase power measurement organisation (phase)

In table below summary of all power measurement is shown.

Table 129: Summary and grouping of the phase power quantities

Quantity	Combined powers	Fundamental powers	Nonfundamental Powers
Apparent (VA)	S	S_{fund}	S_N, S_H
Active (W)	P	P_{fund}	P_H
Nonactive/reactive (var)	N	Q_{fund}	D_I, D_V, D_H
Line utilization	$PF_{ind/cap}$	$DPF_{ind/cap}$	-
Harmonic pollution (%)	-	-	S_N/S_{fund}

Power measurement for three phase systems are slightly different as shown on figure below.

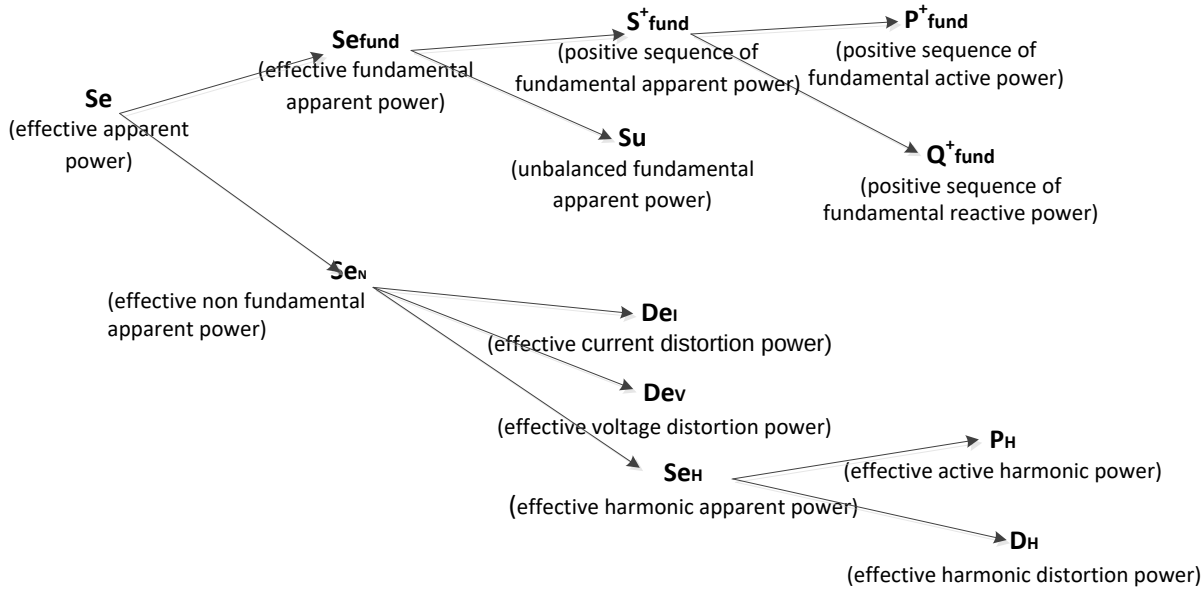

Figure 144: IEEE 1459 phase power measurement organisation (totals)

Table 130: Power summary and grouping of the total power quantities

Quantity	Combined powers	Fundamental powers	Nonfundamental Powers
Apparent (VA)	Se	Se_{fund}, S^+, Su	Se_N, Se_H
Active (W)	P	P^+_{tot}	P_H
Nonactive/reactive (var)	N	Q^+_{tot}	De_I, De_V, De_H
Line utilization	$PF_{ind/cap}$	$DPF^+_{tot\ ind/cap}$	-
Harmonic pollution (%)	-	-	Se_N/S_{fund}

Combined phase power measurements

Standard compliance: IEEE STD 1459-2010

All combined (fundamental + nonfundamental) active power measurements represent RMS values of the samples of instantaneous power over a 10/12-cycle time interval. Each 10/12-cycle interval is contiguous and non-overlapping.

Combined phase active power:

$$P_p = \frac{1}{N}\sum_{j=1}^{N} p_{p\,j} = \frac{1}{N}\sum_{j=1}^{N} U_{p\,j} * I_{p\,j} \quad \text{[W]}, \textit{ p: 1,2,3} \tag{7}$$

Combined apparent and nonactive power, and power factor are calculated according to the following equations:

Combined phase apparent power:

$$S_p = U_p * I_p \quad \text{[VA]}, \textit{ p: 1,2,3} \tag{8}$$

Combined phase nonactive power:

$$N_p = Sign(Q_p) \cdot \sqrt{S_p^2 - P_p^2} \quad \text{[var]}, \textit{ p: 1,2,3} \tag{9}$$

Phase power factor: $PF_p = \frac{P_p}{S_p}$, *p: 1,2,3* (10)

Total combined power measurements

Standard compliance: IEEE STD 1459-2010

Total combined (fundamental + nonfundamental) active, nonactive and apparent power and total power factor are calculated according to the following equation:

Total active power: $P_{tot} = P1 + P2 + P3$ [W], (11)

Total nonactive power: $N_{tot} = N1 + N2 + N3$ [var], (12)

Total apparent power (effective):

$$Se_{tot} = 3 \cdot Ue \cdot Ie \quad \text{[VA]}, \tag{13}$$

Total power factor (effective): $PFe_{tot} = \frac{P_{tot}}{Se_{tot}}$. (14)

In this formula U_e and I_e are calculated differently for three phase four wire (4W) and three phase three wire (3W) systems.

Effective voltage Ue and current Ie in 4W systems:

$$Ie = \sqrt{\frac{I_1^2 + I_2^2 + I_3^2 + I_N^2}{3}} \quad Ue = \sqrt{\frac{3 \cdot (U_1^2 + U_2^2 + U_3^2) + U_{12}^2 + U_{23}^2 + U_{31}^2}{18}} \tag{15}$$

Effective voltage U_e and current I_e in 3W systems:

$$Ie = \sqrt{\frac{I_1^2 + I_2^2 + I_3^2}{3}} \quad Ue = \sqrt{\frac{U_{12}^2 + U_{23}^2 + U_{31}^2}{9}} \tag{16}$$

Fundamental phase power measurements

Standard compliance: IEEE STD 1459-2010

All fundamental power measurements are calculated from fundamental voltages and currents obtained from harmonic analysis (see section 5.1.8 for details).

Fundamental phase active power:

$$P_{fundP} = U_{fundP} \cdot I_{fundP} \cdot \cos\varphi_{U_p - I_p} \quad \text{[W]}, \; p\text{: 1,2,3} \qquad (17)$$

Fundamental apparent and reactive power and power factor are calculated according to the following equations:

Fundamental phase apparent power:

$$S_{fundP} = U_{fundP} \cdot I_{fundP} \qquad \text{[VA]}, \; p\text{: 1,2,3} \qquad (18)$$

Fundamental phase reactive power:

$$Q_{fundP} = U_{fundP} \cdot I_{fundP} \cdot \sin\varphi_{U_p - I_p} \quad \text{[var]}, \; p\text{: 1,2,3} \qquad (19)$$

Phase displacement power factor:

$$DPF_p = \cos\varphi_p = \frac{P_p}{S_p} \; , \; p\text{: 1,2,3} \qquad (20)$$

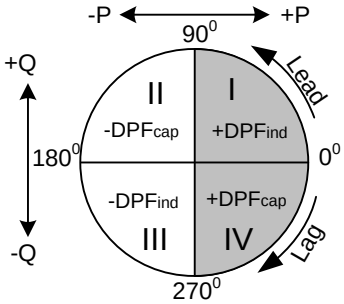

Positive sequence (total) fundamental power measurements

Standard compliance: IEEE STD 1459-2010

According to the IEEE STD 1459, positive sequence power (P^+, Q^+, S^+) are recognised as very important intrinsic power measurements. They are calculated according to the following equation:

Positive sequence active power:

$$P_{tot}^{+} = 3 \cdot U^{+} \cdot I^{+} \cos\varphi^{+} \quad \text{[W]}, \qquad (21)$$

Positive sequence reactive power:

$$Q_{tot}^{+} = 3 \cdot U^{+} \cdot I^{+} \sin\varphi^{+} \quad \text{[var]}, \qquad (22)$$

Positive sequence apparent power:

$$S_{tot}^{+} = 3 \cdot U^{+} \cdot I^{+} \quad \text{[VA]}, \qquad (23)$$

Positive sequence power factor:

$$DPF_{tot}^{+} = \frac{P_{tot}^{+}}{S_{tot}^{+}} \, . \qquad (24)$$

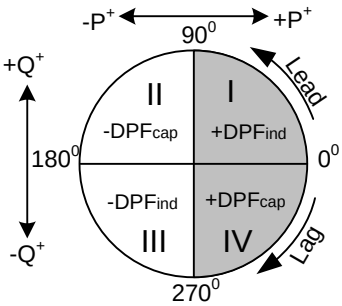

U^+, U^-, U^0 and φ^+ are obtained from unbalance calculus. See section 5.1.11 for details.

Nonfundamental phase power measurements

Standard compliance: IEEE STD 1459-2010

Nonfundamental power measurements are measured according to following equations:

Phase nonfundamental apparent power: (25)

$$S_{Np} = \sqrt{D_{Ip}^2 + D_{Vp}^2 + S_{Hp}^2}$$ [VA], *p: 1,2,3*

Phase current distortion power

$$D_{Ip} = S_{fundP} \cdot THD_{Ip}$$ [VA], *p: 1,2,3* (26)

Phase voltage distortion power:

$$D_{Vp} = S_{fundP} \cdot THD_{Up}$$ [var], *p: 1,2,3* (27)

Phase harmonic apparent power

$$S_{Hp} = S_{fundP} \cdot THD_{Up} \cdot THD_{Ip}$$ [var], *p: 1,2,3* (28)

Phase active harmonic power:

$$P_{Hp} = P_p - P_{fundP}$$ [W], *p: 1,2,3* (29)

Phase harmonic distortion power

$$D_{Hp} = \sqrt{S_{Hp}^2 - P_{Hp}^2}$$ [var], *p: 1,2,3* (30)

Total nonfundamental power measurements

Standard compliance: IEEE STD 1459-2010

Total nonfundamental power quantities are calculated according to the following equations:

Total nonfundamental effective apparent power: (31)

$$SeN_{tot} = \sqrt{DeI_{tot}^2 + DeV_{tot}^2 + SeH_{tot}^2}$$ [VA]

Total effective current distortion power:

$$DeI_{tot} = 3 \cdot Ue_{fund} \cdot IeH$$ [var]

where: (32)

$$IeH = \sqrt{Ie^2 - Ie_{fund}^2}$$

Total effective voltage distortion power:

$$DeV_{tot} = 3 \cdot Ue_H \cdot Ie_{fund}$$ [var]

where: (33)

$$UeH = \sqrt{Ue^2 - Ue_{fund}^2}$$

Total effective apparent power:

$$SeH_{tot} = Ue_H \cdot Ie_H$$ [VA] (34)

Total effective harmonic power:

$$PH_{tot} = PH_1 + PH_2 + PH_3$$ [W]

where: (35)

$$PH_1 = P_1 - P_{fund1},\ PH_2 = P_2 - P_{fund2},\ PH_3 = P_3 - P_{fund3}$$

Total effective distortion power

$$DeH = \sqrt{SeH^2 - PH^2} \text{ [var]} \tag{36}$$

Harmonic pollution

$$HP = \frac{SeN_{tot}}{Se_{fundtot}} \cdot 100 \text{ [\%]} \tag{37}$$

where:

$$Se_{fundtot} = 3 \cdot Ue_{fund} \cdot Ie_{fund}$$

Load unbalance

$$LU = \frac{Su_{fund}}{S^{+}_{tot}} \tag{38}$$

5.1.6 Classic Vector and Arithmetic Power measurement

Standard compliance: IEC 61557-12

See section 3.21.6 how to select Modern Power measurement method. Please note that instrument record all measurement (Classic and Modern), regardless of selected method.
Instrument fully complies with classic Vector and Arithmetic power measurement defined in the latest IEC 61557-12 standard (Annex A) and IEEE 1459 (Section 3.2.2.5 and 3.2.2.6). There is large number of measurement equipment installed on various points on network where this measurement algorithms are used for measurement and recording. In order to compare past measurement with current, use one of classic Power measurement. The measurements for active, reactive, and apparent powers have physical meaning as long as the current and voltage waveforms remained nearly sinusoidal. On figure below, graphical interpretation of Vector and Arithmetic power measurements are shown.

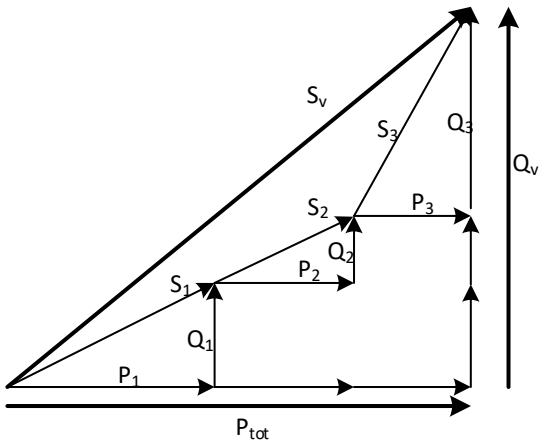

Figure 145: Vector representation of total power calculus

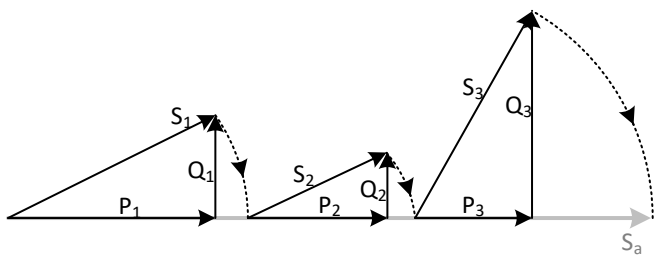

Figure 146: Arithmetic representation of total power calculus

In table below summary of all power measurement is shown.

Table 131: Summary and grouping of the phase power quantities

Quantity	Combined powers	Fundamental powers
Apparent (VA)	S	S_{fund}
Active (W)	P	P_{fund}
Nonactive/reactive (var)	N	Q_{fund}
Line utilization	$PF_{ind/cap}$	$DPF_{ind/cap}$

Table 132: Power summary and grouping of the total power quantities

Quantity	Combined powers	Fundamental powers
Apparent (VA)	Sv	Sv_{fund}
Active (W)	P	P_{tot}
Nonactive/reactive (var)	N	Q_{tot}
Line utilization	$PFv_{ind/cap}$	$DPFv_{ind/cap}$

Combined phase power measurements

All Classic combined phase power measurements are identical with Modern combined phase power measurement. See 5.1.5 section Combined phase power measurements for details.

Total Vector combined power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.6

Total Vector combined (fundamental + nonfundamental) active, nonactive and apparent power and total power factor are calculated according to the following equation:

Total active power: $P_{tot} = P_1 + P_2 + P_3$ [W], (39)

Total nonactive power (vector): $N_{tot} = N_1 + N_2 + N_3$ [var], (40)

Total apparent power (vector): $Sv_{tot} = \sqrt{P_{tot}^{\ 2} + N_{tot}^{\ 2}}$ [VA], (41)

Total power factor (effective): $PFv_{tot} = \dfrac{P_{tot}}{Sv_{tot}}$. (42)

Total Arithmetic combined power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.5

Total Arithmetic combined (fundamental + nonfundamental) active, nonactive and apparent power and total power factor are calculated according to the following equation:

Total active power: $P_{tot} = P_1 + P_2 + P_3$ [W], (43)

Total apparent power (arithmetic): $Sa_{tot} = S_1 + S_2 + S_3$ [VA], (44)

Total nonactive power (arithmetic): $Na_{tot} = \sqrt{Sa_{tot}^{\ 2} - P_{tot}^{\ 2}}$ [var], (45)

Total power factor (arithmetic): $PFa_{tot} = \frac{P_{tot}}{Sa_{tot}}$. (46)

Fundamental phase power measurements

Standard compliance: IEEE STD 1459-2010

All Classic fundamental phase power measurements are identical with Modern fundamental phase power measurement. See 5.1.5 section Fundamental phase power measurements for details.

Total Vector fundamental power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.6

Total Vector fundamental active, reactive and apparent power and total displacement vector power factor are calculated according to the following equation:

Total fundamental active power: $P_{fundtot} = P_{fund1} + P_{fund2} + P_{fund3}$ [W], (47)

Total fundamental reactive power (vector): $Q_{fundtot} = Q_{fund1} + Q_{fund2} + Q_{fund3}$ [var], (48)

Total fundamental apparent power (vector): $Sv_{fundtot} = \sqrt{P_{fundtot}{}^2 + Q_{fundtot}{}^2}$ [VA], (49)

Total displacement power factor (vector): $DPFv_{tot} = \frac{P_{fundtot}}{Sv_{fundtot}}$. (50)

All fundamental power measurements are calculated from fundamental voltages and currents obtained from harmonic analysis (see section 5.1.8 for details).

Total Arithmetic fundamental power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.5

Total Arithmetic fundamental active, reactive and apparent power and total displacement arithmetic power factor are calculated according to the following equation:

Total fundamental active power: $P_{fundtot} = P_{fund1} + P_{fund2} + P_{fund3}$ [W], (51)

Total apparent power (arithmetic): $Sa_{fundtot} = S_{fund1} + S_{fund2} + S_{3fund}$ [VA], (52)

Total nonactive power (arithmetic): $Qa_{fundtot} = \sqrt{Sa_{fundtot}{}^2 - P_{fundtot}{}^2}$ [var], (53)

Total power factor (arithmetic): $DPFa_{tot} = \frac{P_{fundtot}}{Sa_{fundtot}}$. (54)

All fundamental power measurements are calculated from fundamental voltages and currents obtained from harmonic analysis (see section 5.1.8 for details).

5.1.7 Energy

Standard compliance: IEC 62053-21 Class 1S, IEC 62053-23 Class 2 ... MI 2893/MI 2892
Standard compliance: IEC 62053-21 Class 1, IEC 62053-23 Class 2 ... MI 2885

Energy measurement is divided in two sections: ACTIVE energy based on active power measurement and REACTIVE energy, based on fundamental reactive power measurement. Each of them has two energy counters for consumed and generated energy.
Calculations are shown below:

Active energy:

Consumed: $Ep_p^+ = \sum_{i=1}^{m} P_p^+(i)T(i)$ [kWh], *p: 1,2,3, tot*

Generated: $Ep_p^- = \sum_{i=1}^{m} P_p^-(i)T(i)$ [kWh], *p: 1,2,3, tot* (55)

Reactive energy:

Consumed: $Eq_p^+ = \sum_{i=1}^{m} Q_{Iind}^+(i)T(i) + \sum_{i=1}^{m} Q_{pCap}^+(i)T(i)$ [kvarh], *p: 1,2,3, tot*

Generated: $Eq_p^- = \sum_{i=1}^{m} Q_{pCap}^-(i)T(i) + \sum_{i=1}^{m} Q_{pInd}^-(i)T(i)$ [kvarh], *p: 1,2,3, tot* (56)

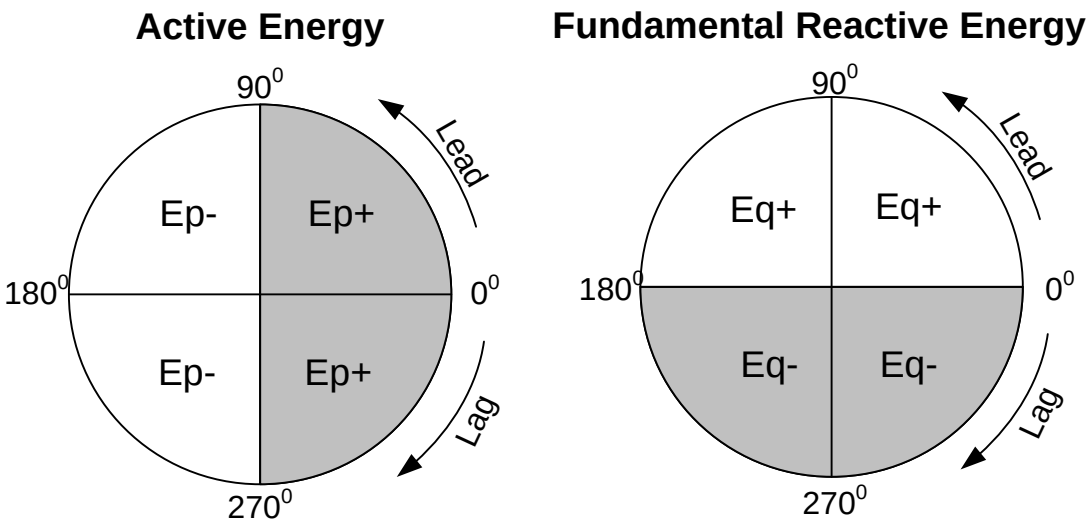

Figure 147: Energy counters and quadrant relationship

Instrument has 3 different counters sets:

1. Total counters are used for measuring energy over a complete recording. When recorder starts it sums the energy to existent state of the counters.
2. Last integration period counter measures energy during recording over last completed interval. It is calculated at end of each interval.

3. Current integration period counter measures energy during recording over current time interval.

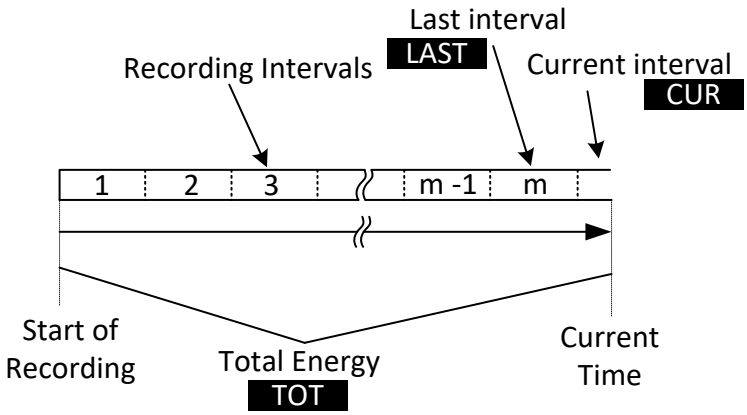

Figure 148: Instrument energy counters

5.1.8 Harmonics and interharmonics

Standard compliance: IEC 61000-4-30 Class A (Section 5.7)
IEC 61000-4-7 Class I

Calculation called fast Fourier transformation (FFT) is used to translate AD converted input signal to sinusoidal components. The following equation describes relation between input signal and its frequency presentation.

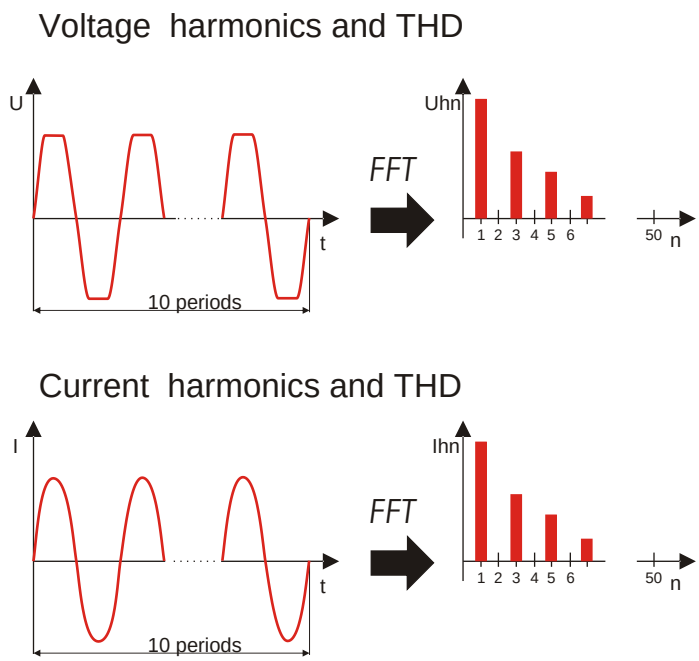

Figure 149: Current and voltage harmonics

$$u(t) = c_0 + \sum_{k=1}^{1024} c_k \sin\left(\frac{k}{10} \cdot 2\pi\, f_1 t + \varphi_k\right) \qquad (57)$$

f_1 – frequency of signal fundamental (in example: 50 Hz)
c_0 – DC component
k – ordinal number (order of the spectral line) related to the frequency basis $f_{C1} = \frac{1}{T_N}$
T_N – is the width (or duration) of the time window ($T_N = N*T_1$; $T_1 = 1/f_1$). Time window is that time span of a time function over which the Fourier transformation is performed.
c_k – is the amplitude of the component with frequency $f_{Ck} = \frac{k}{10} f_1$
φ_k – is the phase of the component c_k
$U_{c,k}$ – is the RMS voltage value of component c_k
$I_{c,k}$ – is the RMS current value of component c_k

Phase voltage and current harmonics are calculated as RMS value of harmonic subgroup *(sg)*: square root of the sum of the squares of the RMS value of a harmonic and the two spectral components immediately adjacent to it.

n^{th} voltage harmonic: $$U_p h_n = \sqrt{\sum_{k=-1}^{1} U_{C,(10\cdot n)+k}^2} \quad p: 1,2,3 \qquad (58)$$

n^{th} current harmonic: $$I_p h_n = \sqrt{\sum_{k=-1}^{1} I_{C,(10\cdot n+k)}^2} \quad p: 1,2,3 \qquad (59)$$

Total harmonic distortion is calculated as ratio of the RMS value of the harmonic subgroups to the RMS value of the subgroup associated with the fundamental:

Total voltage harmonic distortion: $$THD_{U\,p} = \sqrt{\sum_{n=2}^{40} \left(\frac{U_p h_n}{U_p h_1} \right)^2} \quad , p: 1,2,3 \qquad (60)$$

Total current harmonic distortion: $$THD_{Ip} = \sqrt{\sum_{n=2}^{40} \left(\frac{I_p h_n}{I_p h_1} \right)^2} \quad , p: 1,2,3 \qquad (61)$$

Spectral component between two harmonic subgroups are used for interharmonics assessment. Voltage and current interharmonic subgroup of n-th order is calculated using RSS (root sum square) principle:

n^{th} voltage interharmonic: $$U_p ih_n = \sqrt{\sum_{k=2}^{8} U_{C,(10\cdot n)+k}^2} \quad p: 1,2,3 \qquad (62)$$

n^{th} current interharmonic: $$I_p ih_n = \sqrt{\sum_{k=2}^{8} I_{C,(10\cdot n+k)}^2} \quad p: 1,2,3 \qquad (63)$$

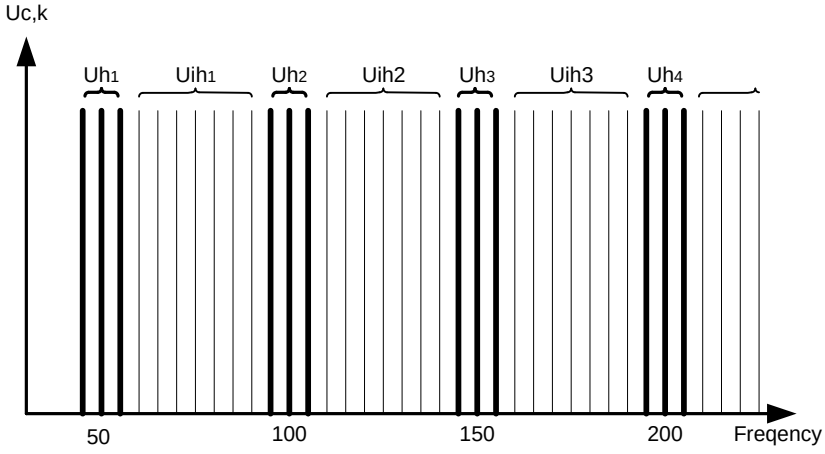

Figure 150: Illustration of harmonics / interharmonics subgroup for 50 Hz supply

The K factor is a factor that is developed to indicate the amount of harmonics that the load generates. The K rating is extremely useful when designing electric systems and sizing components. It is calculated as:

$$\text{K - factor: } K_p = \frac{\sum_{n=1}^{50} (I_p h_n \cdot n)^2}{\sum_{n=1}^{50} I_p h_n^{\,2}}, \; p: 1,2,3 \qquad (64)$$

5.1.9 Signalling

Standard compliance: IEC 61000-4-30 Class A (Section 5.10)

Signalling voltage is calculated on a FFT spectrum of a 10/12-cycle interval. Value of mains signalling voltage is measured as:

- RMS value of a single frequency bin if signalling frequency is equal to spectral bin frequency, or
- RSS value of four neighbouring frequency bins if signalling frequency differs from the power system bin frequency (for example, a ripple control signal with frequency value of 218 Hz in a 50 Hz power system is measured based on the RMS values of 210, 215, 220 and 225 Hz bins).

Mains signalling value calculated every 10/12 cycle interval are used in alarm and recording procedures. However, for EN50160 recording, results are aggregated additionally on 3 s intervals. Those values are used for confronting with limits defined in standard.

5.1.10Flicker

Standard compliance: IEC 61000-4-30 Class A (Section 5.3)
IEC 61000-4-15 Class F1

Flicker is a visual sensation caused by unsteadiness of a light. The level of the sensation depends on the frequency and magnitude of the lighting change and on the observer. Change of a lighting flux can be correlated to a voltage envelope on figure below.

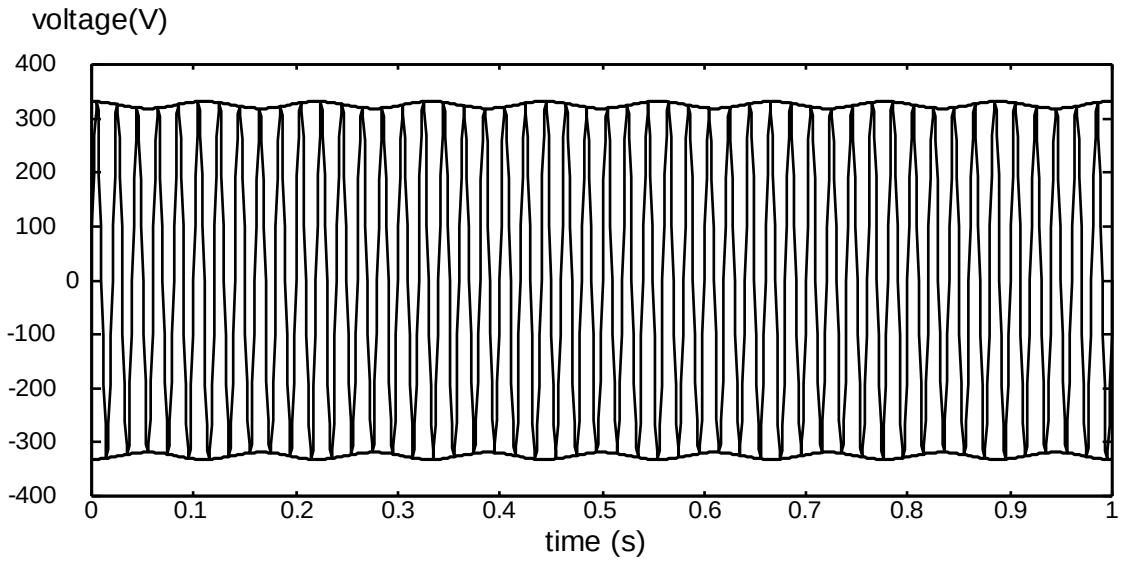

Figure 151: Voltage fluctuation

Flickers are measured in accordance with standard IEC 61000-4-15. Standard defines the transform function based on a 230 V / 60 W and 120 V / 60 W lamp-eye-brain chain response. That function is a base for flicker meter implementation and is presented on figure below.

P_{st1min} – is a short flicker estimation based on 1-minute interval. It is calculated to give quick preview of 10 minutes short term flicker.

P_{st} – 10 minutes, short term flicker is calculated according to IEC 61000-4-15

P_{lt} – 2 hours, long term flicker is calculated according to the following equation:

$$P_{ltp} = \sqrt[3]{\frac{\sum_{i=1}^{N} Pst_i^3}{N}} \quad p: 1,2,3 \tag{65}$$

5.1.11 Voltage and current unbalance

Standard compliance: IEC 61000-4-30 Class A (Section 5.7)

The supply voltage unbalance is evaluated using the method of symmetrical components. In addition to the positive sequence component U^+, under unbalanced conditions there also exists negative sequence component U^- and zero sequence component U_0. These quantities are calculated according to the following equations:

$$\begin{aligned} \vec{U}^+ &= \frac{1}{3}(\vec{U}_1 + a\vec{U}_2 + a^2\vec{U}_3) \\ \vec{U}_0 &= \frac{1}{3}(\vec{U}_1 + \vec{U}_2 + \vec{U}_3), \\ \vec{U}^- &= \frac{1}{3}(\vec{U}_1 + a^2\vec{U}_2 + a\vec{U}_3), \end{aligned} \tag{66}$$

where $a = \frac{1}{2} + \frac{1}{2} j\sqrt{3} = 1e^{j120^0}$.

For unbalance calculus, instrument use the fundamental component of the voltage input signals (U_1, U_2, U_3), measured over a 10/12-cycle time interval.
The negative sequence ratio u^-, expressed as a percentage, is evaluated by:

$$u^-(\%) = \frac{U^-}{U^+} \times 100 \tag{67}$$

The zero-sequence ratio u^0, expressed as a percentage, is evaluated by:

$$u^0(\%) = \frac{U^0}{U^+} \times 100 \tag{68}$$

Note: In 3W systems zero sequence components U_0 and I_0 are by definition zero.

The supply current unbalance is evaluated in same fashion.

5.1.12Under-deviation and over-deviation

Voltage Under-deviation *(U_{Under}) and Over-deviation* (U_{Over}) *measurement method: Standard compliance: IEC 61000-4-30 Class A (Section 5.12)*

Basic measurement for the Under-deviation and Over-deviation is RMS voltage magnitude measured over a 10/12-cycle time interval. Each RMS voltage *magnitude (i)* obtained through recording campaign is compared to nominal voltage U_{Nom} from which we express two vectors according to the formulas below:

$$U_{Under,i} = \begin{cases} U_{RMS(10/12),i} & \text{if } U_{RMS(10/12)} \le U_{Nom} \\ U_{Nom} & \text{if } U_{RMS(10/12)} > U_{Nom} \end{cases} \tag{69}$$

$$U_{Over,i} = \begin{cases} U_{RMS(10/12),i} & \text{if } U_{RMS(10/12)} \ge U_{Nom} \\ U_{Nom} & \text{if } U_{RMS(10/12)} < U_{Nom} \end{cases} \tag{70}$$

Aggregation is performed on the end of recording interval as:

$$U_{Under} = \frac{U_{Nom} - \sqrt{\frac{\sum_{i=1}^{n} U_{Under,i}^2}{n}}}{U_{Nom}} [\%] \tag{71}$$

$$U_{Over} = \frac{U_{Nom} - \sqrt{\frac{\sum_{i=1}^{n} U_{Over,i}^2}{n}}}{U_{Nom}} [\%] \tag{72}$$

Under-deviation and over-deviation parameters may be useful when it is important to avoid, for example, having sustained under-voltages being cancelled in data by sustained over-voltages.
Note: Under-deviation and Over-deviation parameters are always positive values.

5.1.13Voltage events

Measurement method

Standard compliance: IEC 61000-4-30 Class A (Section 5.4)

The basic measurement for event is $U_{Rms(1/2)}$. $U_{Rms(1/2)}$ is value of the RMS voltage measured over 1 cycle, commencing at a fundamental zero crossing and refreshed each half-cycle.

The cycle duration for $U_{Rms(1/2)}$ depends on the frequency, which is determined by the last 10/12-cycle frequency measurement. The $U_{Rms(1/2)}$ value includes, by definition, harmonics, interharmonics, mains signalling voltage, etc.

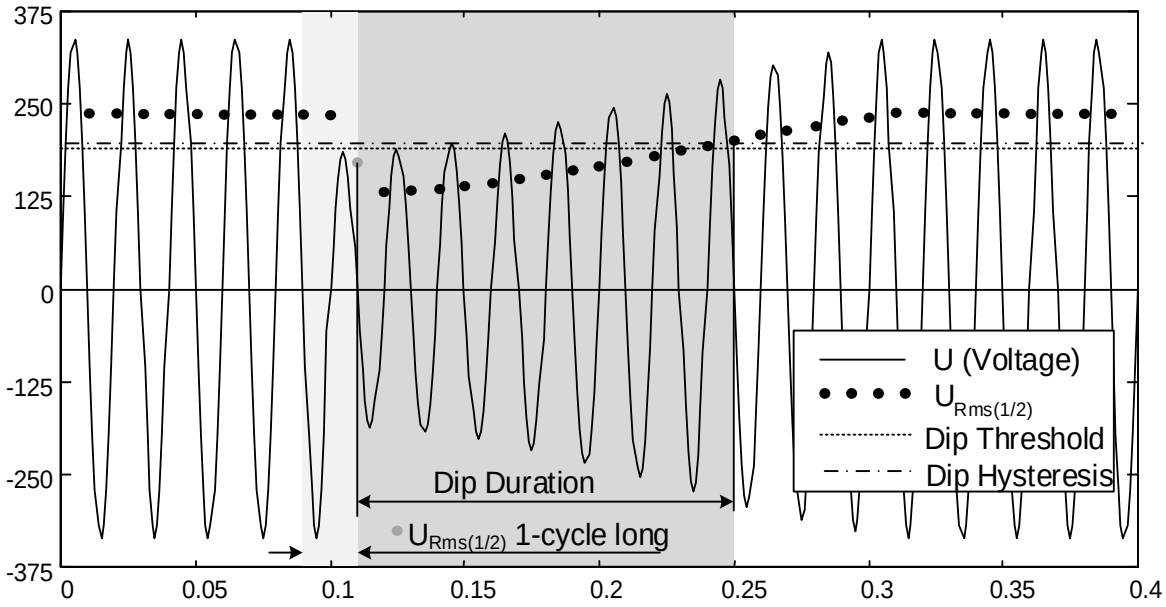

Figure 152:$U_{Rms(1/2)}$ 1-cycle measurement

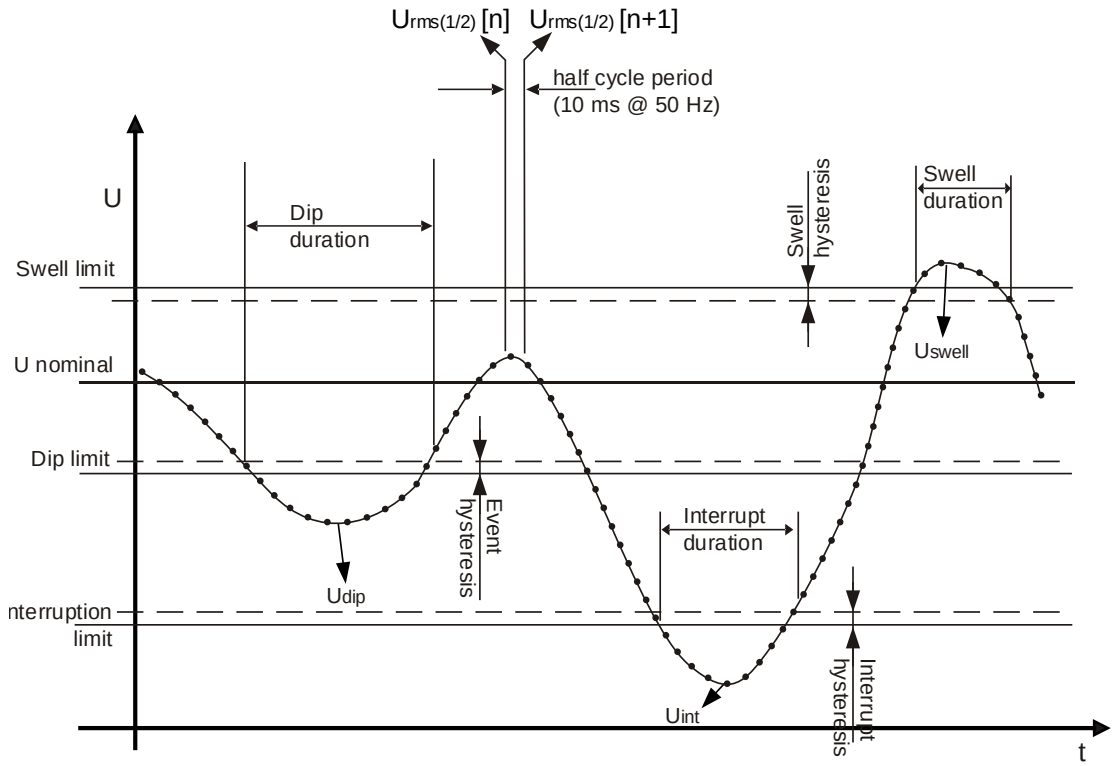

Figure 153: Voltage events definition

Voltage dip

Standard compliance: IEC 61000-4-30 Class A (Sections 5.4.1 and 5.4.2)

The **Dip Threshold** is a percentage of Nominal voltage defined in CONNECTION menu. The Dip Threshold and Hysteresis can be set by the user according to the use. **Dip Hysteresis** is difference in magnitude between the Dip start and Dip end thresholds. Instrument event evaluation in Event table screen depends on Connection type:

- On single-phase system (Connection type: 1W), a voltage dip begins when the $U_{Rms(1/2)}$ voltage falls below the dip threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or above the dip threshold plus the hysteresis voltage.
- On poly-phase systems (Connection type: 2W, 3W, 4W, Open Delta) two different views can be used for evaluation simultaneously:
    - Group view with selected **ALL** INT view (in compliance with IEC 61000-4-30 Class A): a dip begins when the $U_{Rms(1/2)}$ voltage of one or more channels is below the dip threshold and ends when the $U_{Rms(1/2)}$ voltage on all measured channels is equal to or above the dip threshold plus the hysteresis voltage.
    - Phase view Ph. (for troubleshooting): a voltage dip begins when the $U_{Rms(1/2)}$ voltage of one channel falls below the dip threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or above the dip threshold plus the hysteresis voltage, on the same phase.

Figure 154:Voltage dip related screens on the instrument

A voltage dip is characterized by following data: **Dip Start time, Level (U_{Dip})** and **Dip duration**:

- U_{Dip} – residual dip voltage, is the lowest $U_{Rms(1/2)}$ value measured on any channel during the dip. It is shown in **Level** column in the Event Table on the instrument.
- The **Dip Start time** is time stamped with the time of the start of the $U_{Rms(1/2)}$ of the channel that initiated the event. It is shown in **START** column in the Event Table on the instrument. The Dip End time is time stamped with the time of the end of the $U_{Rms(1/2)}$ that ended the event, as defined by the threshold.
- The **Dip Duration** is the time difference between the Dip Start time and the Dip End time. It is shown in **Duration** column in the Event Table on the instrument.

Voltage swell

Standard compliance: IEC 61000-4-30 Class A (Sections 5.4.1 and 5.4.3)

The **Swell Threshold** is a percentage of nominal voltage defined in CONNECTION menu. The swell threshold can be set by the user according to the use. **Swell Hysteresis** is difference in magnitude between the Swell start and Swell end thresholds. Instrument event evaluation in Event table screen depends on Connection type:

- On single-phase system (Connection type: 1W) , a voltage swell begins when the $U_{Rms(1/2)}$ voltage rises above the swell threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or below the swell threshold plus the hysteresis voltage.
- On poly-phase systems (Connection type: 2W, 3W, 4W, Open Delta) two different view can be used for evaluation simultaneously:
    - Group view with selected **ALL INT** view: A swell begins when the $U_{Rms(1/2)}$ voltage of one or more channels is above the swell threshold and ends when the $U_{Rms(1/2)}$ voltage on all measured channels is equal to or below the swell threshold plus the hysteresis voltage.
    - Phase view Ph.: A swell begins when the $U_{Rms(1/2)}$ voltage of one channel rises above the swell threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or below the swell threshold plus the hysteresis voltage, on the same phase.

A voltage swell is characterized by following data: **Swell Start time,** Level **(U_{Swell})** and **Swell duration**:

- **U_{Swell}** – maximum swell magnitude voltage, is the largest $U_{Rms(1/2)}$ value measured on any channel during the swell. It is shown in **Level** column in the Event Table on the instrument.
- The **Swell Start time** is time stamped with the time of the start of the $U_{Rms(1/2)}$ of the channel that initiated the event. It is shown in **START** column in the Event Table on the instrument. The Swell End time is time stamped with the time of the $U_{Rms(1/2)}$ that ended the event, as defined by the threshold.
- The **Duration** of a voltage swell is the time difference between the beginning and the end of the swell. It is shown in **Duration** column in the Event Table on the instrument.

Voltage interrupt

Standard compliance: IEC 61000-4-30 Class A (Section 5.5)

Measuring method for voltage interruptions detection is same as for dips and swells, and is described in previous sections.
The **Interrupt Threshold** is a percentage of nominal voltage defined in CONNECTION menu. **Interrupt Hysteresis** is difference in magnitude between the Interrupt start and Interrupt end thresholds. The interrupt threshold can be set by the user according to the use. Instrument event evaluation in Event table screen depends on Connection type:

- On single-phase system (1W), a voltage interruption begins when the $U_{Rms(1/2)}$ voltage falls below the voltage interruption threshold and ends when the $U_{Rms(1/2)}$ value is equal to, or greater than, the voltage interruption threshold plus the hysteresis
- On poly-phase systems (2W, 3W, 4W, Open Delta) two different view can be used for evaluation simultaneously:
    - Group view with selected **ALL INT** view: a voltage interruption begins when the $U_{Rms(1/2)}$ voltages of all channels fall below the voltage interruption threshold and ends when the $U_{Rms(1/2)}$ voltage on any one channel is equal to, or greater than, the voltage interruption threshold plus the hysteresis.
    - Phase view Ph.: a voltage interrupt begins when the $U_{Rms(1/2)}$ voltage of one channel fall below the interrupt threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or above the interrupt threshold plus the hysteresis voltage, on the same phase.

Figure 155:Voltage interrupts related screens on the instrument

A voltage interrupt is characterized by following data: **Interrupt Start time, Level (U_{Int})** and **Interrupt Duration**:

- **U_{Int}** – minimum interrupt magnitude voltage, is the lower $U_{Rms(1/2)}$ value measured on any channel during the interrupt. It is shown in **Level** column in the Event Table on the instrument.
- The **Interrupt Start time** of a interrupt is time stamped with the time of the start of the $U_{Rms(1/2)}$ of the channel that initiated the event. It is shown in **START** column in the Event Table on the instrument. The Interrupt End time of the interrupt is time stamped with the time of the end of the $U_{Rms(1/2)}$ that ended the event, as defined by the threshold.
- The **Interrupt Duration** is the time difference between the beginning and the end of the interrupt. It is shown in **Duration** column in the Event Table on the instrument.

5.1.14Alarms

Generally, alarm can be seen as an event on arbitrary quantity. Alarms are defined in alarm table (see section 3.21.3 for alarm table setup). The basic measurement time interval for: voltage, current, active, nonactive and apparent power, harmonics and unbalance alarms is a 10/12-cycle time interval.

Each alarm has attributes described in table below. Alarm occurs when 10/12-cycle measured value on phases defined as **Phase,** cross **Threshold value** according to defined **Trigger slope,** minimally for **Minimal duration** value.

Table 133: Alarm definition parameters

Quantity	• Voltage • Current • Frequency • Active, nonactive and apparent power • Harmonics and interharmonics • Unbalance • Flickers • Signalling
Phase	L1, L2, L3, L12, L23, L31, All, Tot, N
Trigger slope	< - Fall , > - Rise
Threshold value	[Number]
Minimal duration	200ms ÷ 10min

Each captured alarm is described by the following parameters:

Table 134: Alarm signatures

Date	Date when selected alarm has occurred
Start	Alarm start time - when first value cross threshold.
Phase	Phase on which alarm occurred
Level	Minimal or maximal value in alarm
Duration	Alarm duration

5.1.15 Rapid voltage changes (RVC)

Standard compliance: IEC 61000-4-30 Class A (Section 5.11)

Rapid Voltage Change (RVC) is generally speaking an abrupt transition between two "steady state" RMS voltage levels. It is considered as event, (similar to dip or swell) with start time and duration between steady state levels. However, those steady state levels does not exceed dip or swell threshold.

RVC event detection

Instrument RVC event detection implementation strictly follows *IEC 61000-4-30* standard requirements. It begins with finding a voltage steady-state. RMS voltage is in a steady-state condition if 100/120 $U_{Rms(1/2)}$ values remain within an *RVC threshold* (this value is set by the user in MEASUREMENT SETUP → RVC Setup screen) from the arithmetic mean of those 100/120 $U_{Rms(1/2)}$ values. Every time a new $U_{Rms(1/2)}$ value is available, the arithmetic mean of the previous 100/120 $U_{Rms(1/2)}$ values, including the new value, is calculated. If a new $U_{Rms(1/2)}$ value crosses *RVC threshold*, RVC event is detected. After detection instruments wait for 100/120 half cycles, before searching for next voltage steady-state.
If a voltage dip or voltage swell is detected during an RVC event, then the RVC event is discarded because the event is not an RVC event.

RVC event characterisation

An RVC event is characterized by four parameters: start time, duration, ΔUmax and ΔUss.

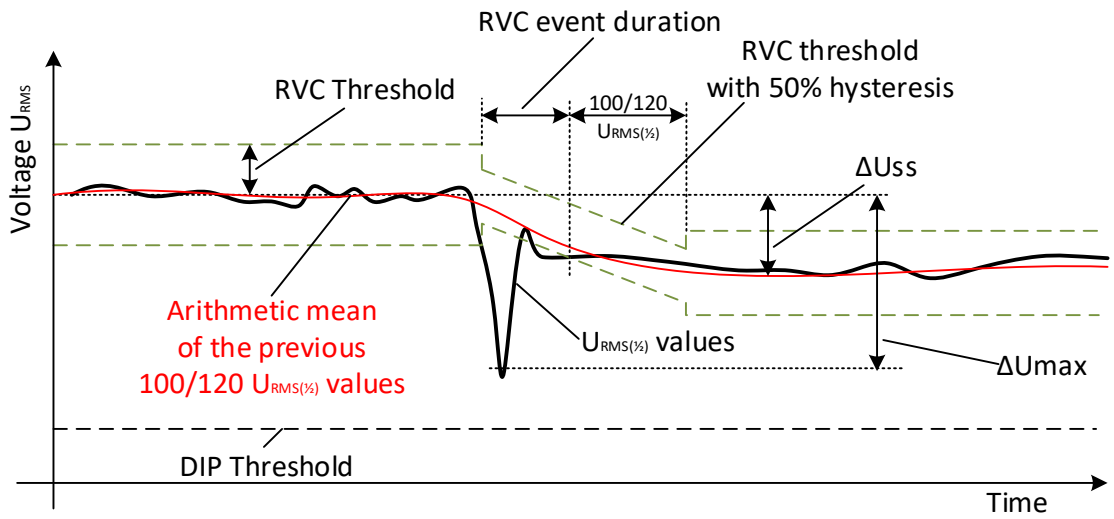

Figure 156: RVC event description

- **Start time** of an RVC event is time stamp when $U_{Rms(1/2)}$ value cross *RVC threshold* level
- RVC event **duration** is 100/120 half cycles shorter than the duration between adjacent steady states voltages.

- **ΔUmax** is the maximum absolute difference between any of the $U_{Rms(1/2)}$ values during the RVC event and the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event. For poly-phase systems, the ΔUmax is the largest ΔUmax on any channel.
- **ΔUss** is the absolute difference between the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event and the first arithmetic mean 100/120 $U_{Rms(1/2)}$ value after the RVC event. For poly-phase systems, the ΔUss is the largest ΔUss on any channel.

5.1.16Data aggregation in GENERAL RECORDING

Standard compliance: IEC 61000-4-30 Class A (Section 4.5)

Time aggregation period (IP) during recording is defined with parameter Interval: x min in GENERAL RECORDER menu.
A new recording interval commence at real time clock thick (10 minutes ± half cycle, for Interval: 10 min) and it last until next real time clock plus time needed to finish current 10/12 cycle measurement. In the same time new measurement is started, as shown on next figure. The data for the IP time interval are aggregated from 10/12-cycle time intervals, according to the figure below. The aggregated interval is tagged with the absolute time. The time tag is the time at the conclusion of the interval. There is overlap, during recording, as illustrated on figure below.

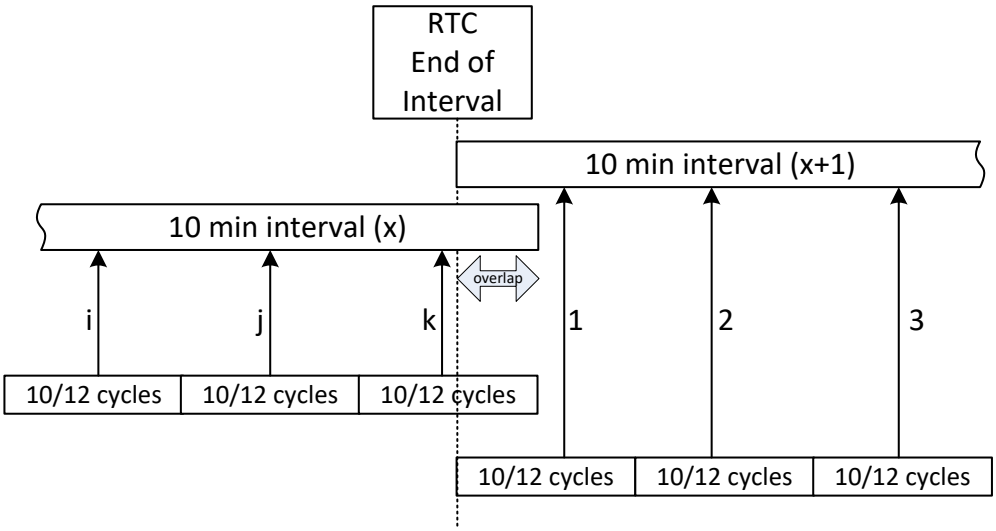

Figure 157: Synchronization and aggregation of 10/12 cycle intervals

Depending from the quantity, for each aggregation interval instrument computes average, minimal, maximal and/or active average value, this can be RMS (root means square) or arithmetical average. Equations for both averages are shown below.

RMS average $$A_{RMS} = \sqrt{\frac{1}{N}\sum_{j=1}^{N} A_j^2} \quad (73)$$

Where:
A_{RMS} – quantity average over given aggregation interval
A – 10/12-cycle quantity value
N – number of 10/12 cycles measurements per aggregation interval.

Arithmetic average: $$A_{avg} = \frac{1}{N}\sum_{j=1}^{N} A_j \quad (74)$$

Where:
A_{avg} – quantity average over given aggregation interval
A – 10/12-cycle quantity value
N – number of 10/12 cycles measurements per aggregation interval.

In the next table averaging method for each quantity is specified:

Table 135: Data aggregation methods

Group	Value	Aggregation method	Recorded values
Voltage	U_{Rms}	RMS average	Min, Avg, AvgOn, Max
	THD_U	RMS average	AvgOn, Max
	CF_U	RMS average	Min, Avg, Max
Current	I_{Rms}	RMS average	Min, Avg, AvgOn, Max
	THD_I	RMS average	Avg, AvgOn, Max
	CF_I	RMS average	Min, Avg, AvgOn, Max
Frequency	f(10s)	-	AvgOn
	f(200ms)	RMS average	Min, AvgOn, Max
Power	Combined	Arithmetic average	Min, Avg, AvgOn, Max
	Fundamental	Arithmetic average	Min, Avg, AvgOn, Max
	Nonfundamental	Arithmetic average	Min, Avg, AvgOn, Max
Unbalance	U^+	RMS	Min, Avg, AvgOn, Max
	U^-	RMS	Min, Avg, AvgOn, Max
	U^0	RMS	Min, Avg, AvgOn, Max
	u-	RMS	Min, Avg, AvgOn, Max
	u0	RMS	Min, Avg, AvgOn, Max
	I^+	RMS	Min, Avg, AvgOn, Max
	I^-	RMS	Min, Avg, AvgOn, Max
	I^0	RMS	Min, Avg, AvgOn, Max
	i-	RMS	Min, Avg, AvgOn, Max
	i0	RMS	Min, Avg, AvgOn, Max
Harmonics	DC, $Uh_{0\div50}$	RMS	Avg, Max
	DC, $Ih_{0\div50}$	RMS	Avg, AvgOn, Max,
Interharmonics	$Uh_{0\div50}$	RMS	Avg, Max
	$Ih_{0\div50}$	RMS	Avg, AvgOn, Max
Signalling	U_{Sig}	RMS	Min, Avg, AvgOn, Max

An *active average* value is calculated upon the same principle (arithmetic or RMS) as average value, but taking in account only measurement where measured value is not zero:

RMS active average $$A_{RMSact} = \sqrt{\frac{1}{M}\sum_{j=1}^{M} A_j^2}\ ;\ M \le N \quad (75)$$

Where:

A_{RMSact} – quantity average over active part of given aggregation interval,
A – 10/12-cycle quantity value marked as “active”,
M – number of 10/12 cycles measurements with active (non zero) value.

Arithmetic active average:

$$A_{avgact} = \frac{1}{M}\sum_{j=1}^{M} A_j \; ; \; M \le N \qquad (76)$$

Where:
A_{avgact} – quantity average over active part of given aggregation interval,
A – 10/12-cycle quantity value in “active” part of interval,
M – number of 10/12 cycles measurements with active (non zero) value.

Difference between standard average (Avg) and active average (AvgOn)

Example: Suppose we measure current on AC motor which is switched on for 5 min every 10 minutes. Motor consumes 100A. User set recording interval to 10 minutes.

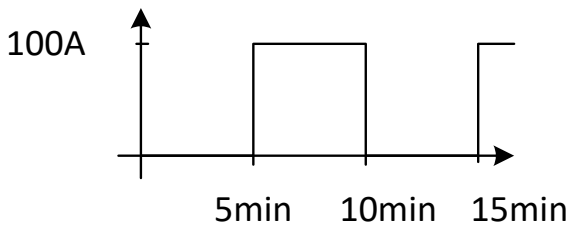

Figure 158: Avg vs. Avgon, switching load current

After 10 minutes values will be:

Irms (rms average) = 50A
Irms (rms AvgOn) = 100A
AvgOn considers only those measurements where current is greater than zero.

Power and energy recording

Active power is aggregated into two different quantities: import (positive-consumed P+) and export (negative-generated P-). Nonactive power and power factor are aggregated into four parts: positive inductive (i+), positive capacitive (c+), negative inductive (i+) and negative capacitive (c-). Consumed/generated and inductive/capacitive phase/polarity diagram is shown on figure below:

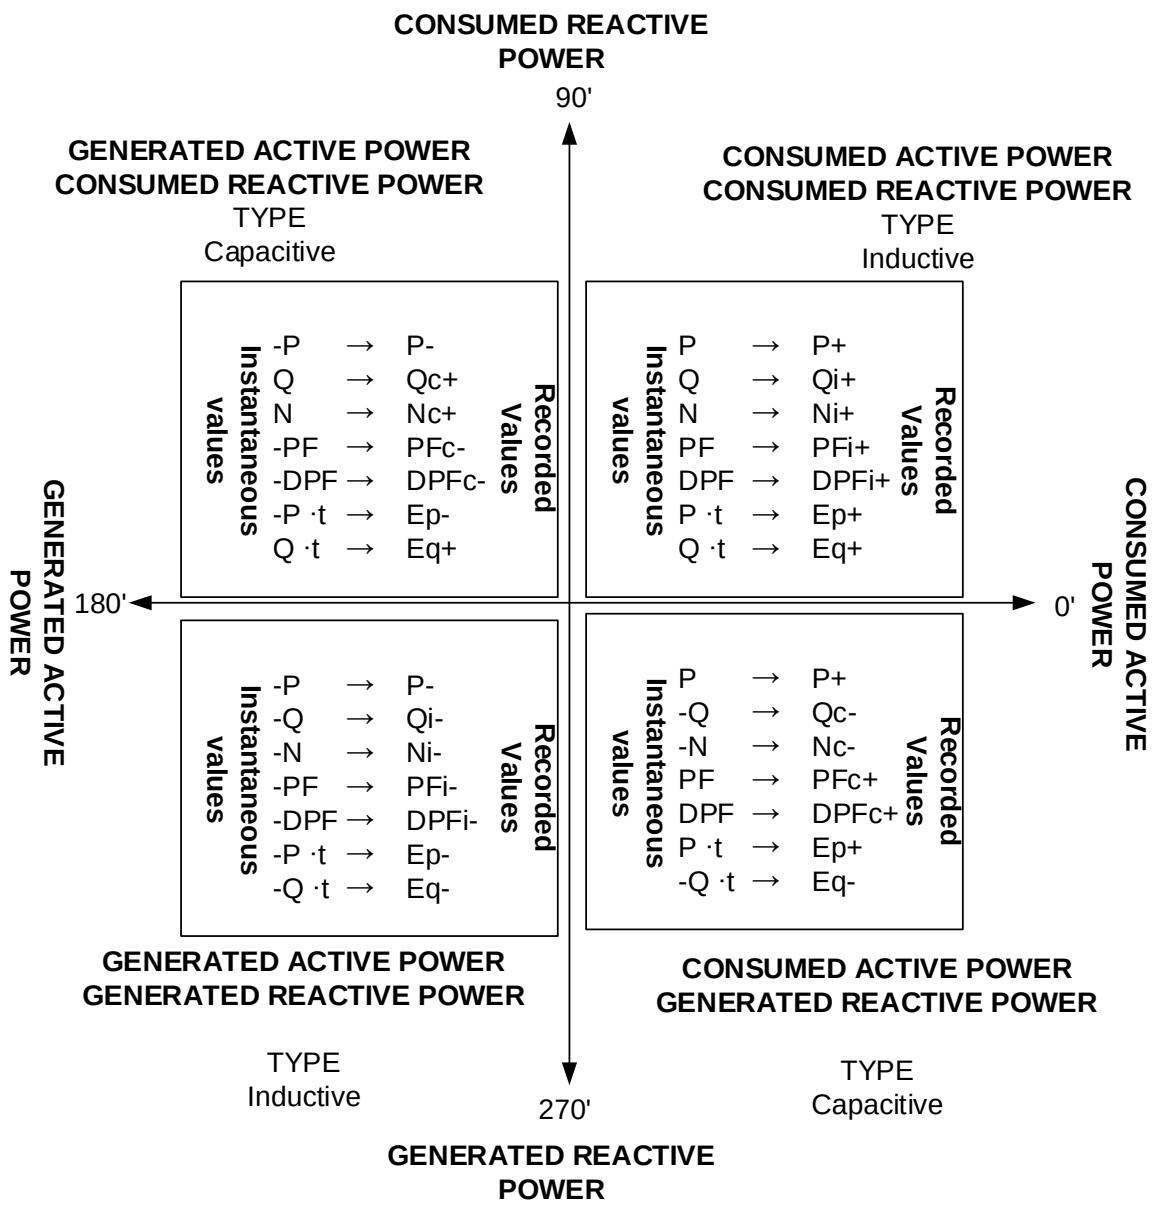

Figure 159: Consumed/generated and inductive/capacitive phase/polarity diagram

5.1.17 Flagged data

Standard compliance: IEC 61000-4-30 Class A (Section 4.7)

During a dip, swell, or interruption, the measurement algorithm for other parameters (for example, frequency measurement) might produce an unreliable value. The flagging concept avoids counting a single event more than once in different parameters (for example, counting a single dip as both a dip and a voltage variation), and indicates that an aggregated value might be unreliable. Flagging is only triggered by dips, swells, and interruptions. The detection of dips and swells is dependent on the threshold selected by the user, and this selection will influence which data are "flagged".

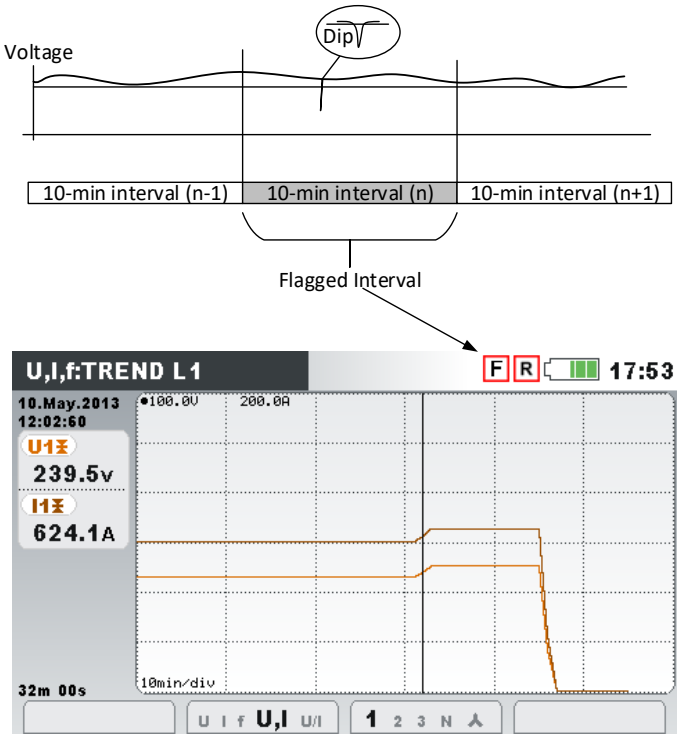

Figure 160: Flagging data indicate that aggregated value might be unreliable

5.1.18Waveform snapshot

During measurement campaign MI 2893/MI 2892/MI 2885 have the ability to take waveform snapshot. This is particularly useful for storing temporary characteristics or network behaviour. Snapshot stores all network signatures and waveform samples for 10/12 cycles. Using MEMORY LIST function (see 3.19) or with PowerView v3.0 software, user can observe stored data. Waveform snapshot is captured by starting GENERAL recorder or by pressing for 3 seconds in any of MEASUREMENTS sub screens.

Long press on triggers WAVEFORM SNAPSHOT. Instrument will record all measured parameters into file.

Note: WAVEFORM SNAPSHOT is automatically created at the start and end of GENERAL RECORDER.

5.1.19Waveform recorder

Waveform recorder can be used in order to capture waveform of particular network event: such as voltage event, inrush or alarm. In waveform record samples of voltage and current are stored for given duration. Waveform recorder starts when the pre-set trigger occurs. Storage buffer is divided into pre-trigger and post-trigger buffers. Pre and post-trigger buffers are composed of waveform snapshots taken before and after trigger occurrence, as shown on following figure.

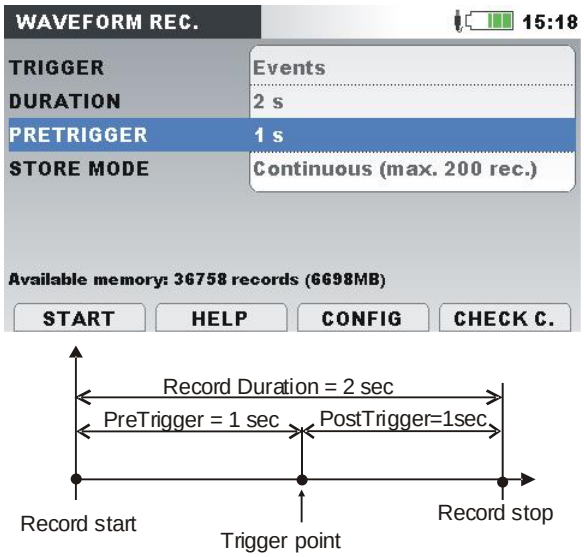

Figure 161: Triggering and pre-triggering description

Several trigger sources are possible:

- Manual trigger - user manually triggers waveform recording.
- Voltage events – instrument starts waveform recorder when voltage event occur. Voltage events are set up in EVENT SETUP menu (see 3.21.2 for details), where user defines threshold limits for each event type: Dip, Swell and Interrupt. Each time event occurs, waveform recorder starts recording. Instrument then capture $U_{Rms(1/2)}$ and $I_{Rms(1/2)}$ values into RxxxxINR.REC file and waveform samples for all voltages and currents channels into RxxxxWAV.REC file. If parameter PRETRIGGER is greater than zero, then recoding will start prior the event for defined time, and will finish when record DURATION length is reached. On following figure voltage dip is shown, where voltage drops from nominal value to the almost zero. When voltage drops below dip threshold, it triggers recorder, which capture voltage and current samples from one second before dip to one second after dip occurs. Note that if during this time period another event occurs, (as interrupt on figure below, for example) it will be captured within the same file. In case where voltage event last for longer time, new recording will start after first record is finished, soon as any new event occurs (voltage ramp-up event, shown as example on figure below).

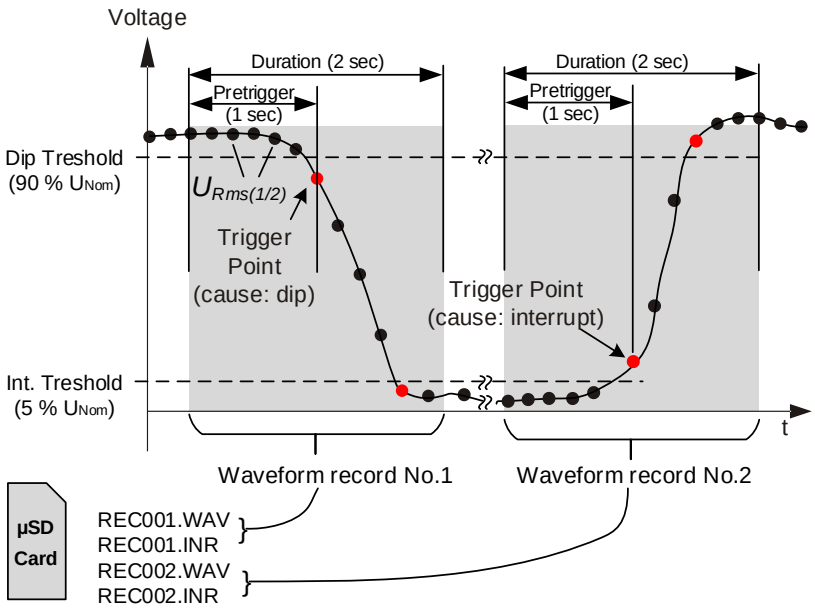

Figure 162: Voltage Event Triggering

- Voltage level – instrument starts waveform recorder when measured RMS voltage reaches given voltage threshold.

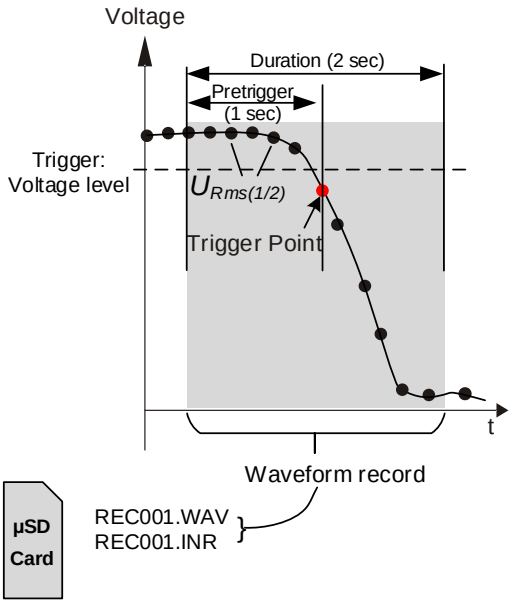

Figure 163: Voltage Level Triggering

- Current level - instrument starts waveform recorder when measured current reaches given current threshold. Typically, this type of triggering is used for capturing inrush currents.

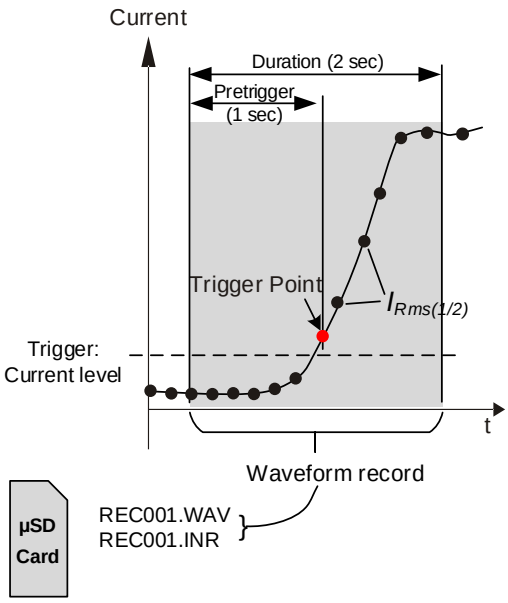

Figure 164: Current Level Triggering (Inrush)

- Alarms – instrument starts waveform recorder when any alarm from alarm list is detected. In order to see how to setup Alarm Table, please check section 3.21.3.
- Voltage events and alarms – instrument starts waveform recorder when either voltage event or alarm occur.
- Interval – instrument starts waveform recorder periodically, each time after given time interval Interval: 10min finish.
- User can perform single or continuous waveform recordings up to 200 records (default value; maximum number could be changed by the user – up to 1500). In continuous waveform recording, MI 2893/MI 2892/MI 2885 will automatically initialize next waveform recording upon completion of the previous one.

Voltage event trigger

Waveform recorder can be set up to trigger on voltage events as shown on figure below.

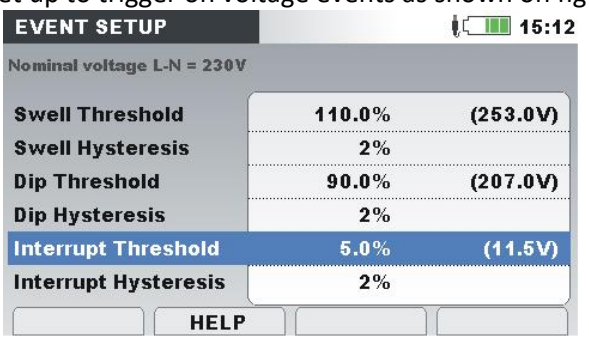

Figure 165: Waveform recorder setup for triggering on voltage events

Inrush recorder

In addition to the waveform record which represent voltage samples, instrument also store RMS voltage $U_{Rms(1/2)}$ and current $I_{Rms(1/2)}$. This type of record is particularly suitable for capturing motor inrush. It gives analysis of voltage and current fluctuations during start of motor or other high-power consumers. For current $I_{Rms(1/2)}$ value (half cycle period RMS current refreshed each half cycle) is measured, while for

voltage $U_{Rms(1/2)}$ values (one cycle RMS voltage refreshed each half cycle) is measured for each interval. In following figures, Level triggering is shown.

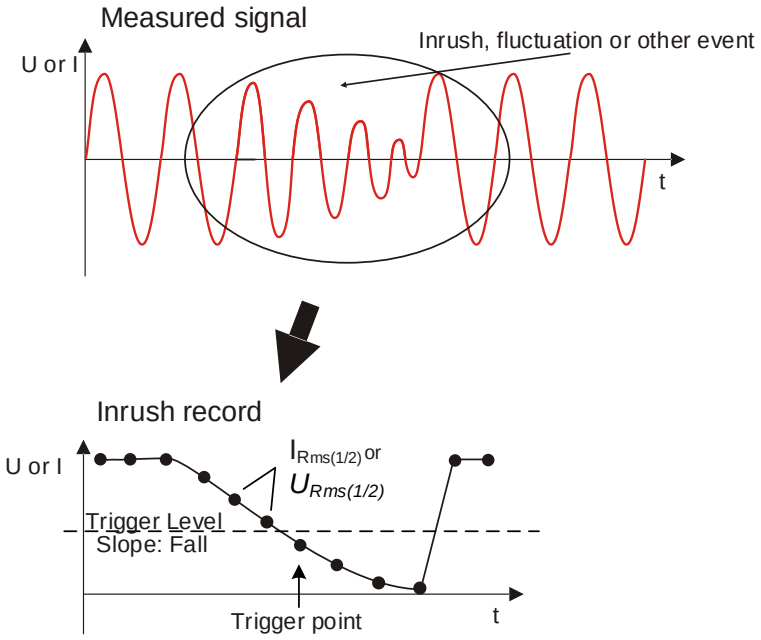

Figure 166: Level triggering

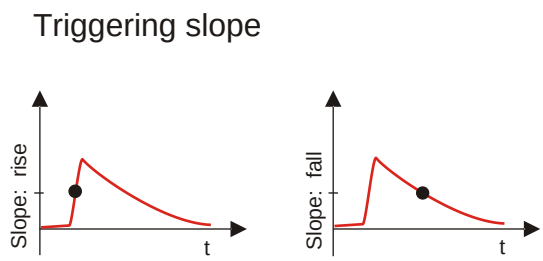

Figure 167: Triggering slope

5.1.20Transient recorder

Transient recorder is similar to waveform recorder. It stores a selectable set of pre- and post-trigger samples on trigger activation, but with higher sampling rate:

- 1MHz for MI 2893
- 49 kHz for MI 2892/MI 2885

Recorder can be triggered on envelope or level.
Envelope trigger is activated if difference between same samples on two consecutive periods of triggering signal, is greater than given limit.

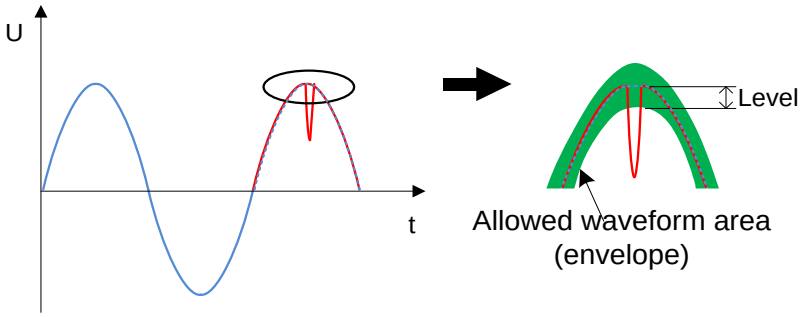

Figure 168: Transients trigger detection (envelope)

Level trigger is activated if sampled voltage/current is greater than given limit.

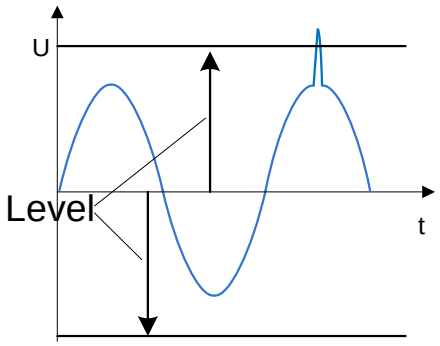

Figure 169: Transients trigger detection (level)

Note: Saving to the instrument data memory induces dead time between consecutive transient records up to 8 seconds, before new transient can be captured.

5.2 EN 50160 Standard Overview

EN 50160 standard defines, describes and specifies the main characteristics of the voltage at a network user's supply terminals in public low voltage and medium voltage distribution networks under normal operating conditions. This standard describes the limits or values within which the voltage characteristics can be expected to remain over the whole of the public distribution network and do not describe the average situation usually experienced by an individual network user. An overview of EN 50160 Low voltage limits are presented on table below.

Table 136: EN 50160 standard LV limits (continuous phenomena)

Supply voltage phenomenon	Acceptable limits	Meas. Interval	Monitoring Period	Acceptance Percentage
Power frequency	49.5 ÷ 50.5 Hz 47.0 ÷ 52.0 Hz	10 s	1 Week	99,5% 100%
Supply voltage variations, U_{Nom}	230V ± 10%	10 min	1 Week	95%

	230V +10% -15%			100%
Flicker severity Plt	Plt ≤ 1	2 h	1 Week	95%
Voltage unbalance u-	0 ÷ 2 %, occasionally 3%	10 min	1 Week	95%
Total harm. distortion, THD_U	8%	10 min	1 Week	95%
Harmonic Voltages, Uh_n	See Table 137: Values of individual harmonic voltages at the supply	10 min	1 Week	95%
Mains signalling	See Figure 170: Mains signalling voltage level limits according to EN50160	3 s	1 Day	99%

5.2.1 Power frequency

The nominal frequency of the supply voltage shall be 50 Hz, for systems with synchronous connection to an interconnected system. Under normal operating conditions the mean value of the fundamental frequency measured over 10 s shall be within a range of:
50 Hz ± 1 % (49,5 Hz .. 50,5 Hz) during 99,5 % of a year;
50 Hz + 4 % / - 6 % (i.e. 47 Hz .. 52 Hz) during 100 % of the time.

5.2.2 Supply voltage variations

Under normal operating conditions, during each period of one week 95 % of the 10 min mean U_{Rms} values of the supply voltage shall be within the range of U_{Nom} ± 10 %, and all U_{Rms} values of the supply voltage shall be within the range of U_{Nom} + 10 % / - 15 %.

5.2.3 Supply voltage unbalance

Under normal operating conditions, during each period of one week, 95 % of the 10 min mean RMS values of the negative phase sequence component (fundamental) of the supply voltage shall be within the range 0 % to 2 % of the positive phase sequence component (fundamental). In some areas with partly single phase or two-phase connected network users' installations, unbalances up to about 3 % at three-phase supply terminals occur.

5.2.4 THD voltage and harmonics

Under normal operating conditions, during each period of one week, 95 % of the 10 min mean values of each individual harmonic voltage shall be less or equal to the value given in table below.
Moreover, THD_U values of the supply voltage (including all harmonics up to the order 50) shall be less than or equal to 8 %.

Table 137: Values of individual harmonic voltages at the supply

Odd harmonics				**Even harmonics**	
Not Multiples of 3		**Multiples of 3**			
Order h	**Relative voltage (U_N)**	**Order h**	**Relative voltage (U_N)**	**Order h**	**Relative voltage (U_N)**
5	6,0 %	3	5,0 %	2	2,0 %
7	5,0 %	9	1,5 %	4	1,0 %

11	3,5 %	15	1,0 %	6..24	0,5 %
13	3,0 %	21	0,75 %		
17	2,0 %				
19	1,5 %				
23	1,5 %				
25	1,5 %				

5.2.5 Interharmonic voltage

The level of interharmonics is increasing due to the development of frequency converters and similar control equipment. Levels are under consideration, pending more experience. In certain cases interharmonics, even at low levels, give rise to flickers (see 5.2.7), or cause interference in ripple control systems.

5.2.6 Mains signalling on the supply voltage

In some countries the public distribution networks may be used by the public supplier for the transmission of signals. Over 99 % of a day the 3 s mean of signal voltages shall be less than or equal to the values given in the following figure.

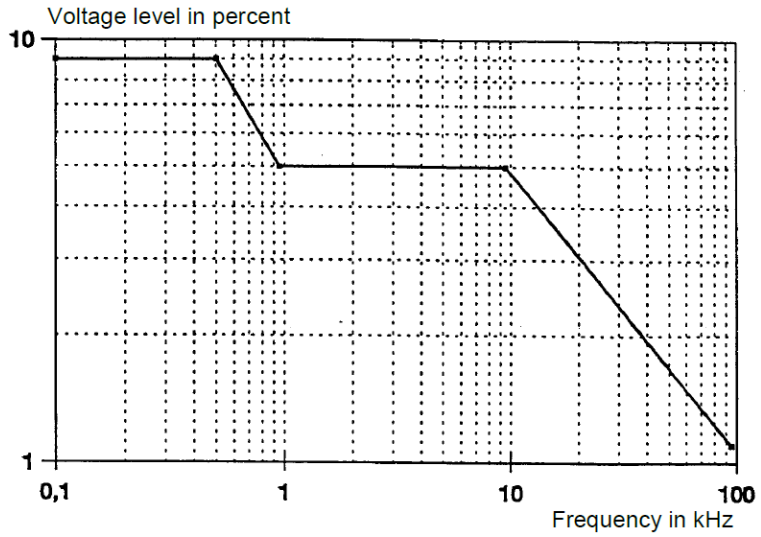

Figure 170: Mains signalling voltage level limits according to EN50160

5.2.7 Flicker severity

Under normal operating conditions, in any period of one week the long-term flicker severity caused by voltage fluctuation should be $P_{lt} \leq 1$ for 95 % of the time.

5.2.8 Voltage dips

Voltage dips are typically originated by faults occurring in the public network or in network users' installations. The annual frequency varies greatly depending on the type of supply system and on the point of observation. Moreover, the distribution over the year can be very irregular. The majority of voltage dips have duration less than 1 s and a retained voltage greater than 40 %. Conventionally, the dip start threshold is equal to 90 % of the nominal voltage of the nominal voltage. Collected voltage dips are classified according to the following table.

Table 138:Voltage dips classification

Residual voltage	Duration (ms)				
	10 ≤ t ≤ 200	**200 < t ≤ 500**	**500 < t ≤ 1000**	**1000 < t ≤ 5000**	**5000 < t ≤ 60000**
90 > U ≥ 80	Cell A1	Cell A2	Cell A3	Cell A4	Cell A5
80 > U ≥ 70	Cell B1	Cell B2	Cell B3	Cell B4	Cell B5
70 > U ≥ 40	Cell C1	Cell C2	Cell C3	Cell C4	Cell C5
40 > U ≥ 5	Cell D1	Cell D2	Cell D3	Cell D4	Cell D5
U < 5	Cell E1	Cell E2	Cell E3	Cell E4	Cell E5

5.2.9 Voltage swells

Voltage swells are typically caused by switching operations and load disconnections. Conventionally, the start threshold for swells is equal to the 110 % of the nominal voltage. Collected voltage swells are classified according to the following table.

Table 139:Voltage swell classification

Swell voltage	Duration (ms)		
	10 ≤ t ≤ 500	**500 < t ≤ 5000**	**5000 < t ≤ 60000**
U ≥ 120	Cell A1	Cell A2	Cell A3
120 > U > 110	Cell B1	Cell B2	Cell B3

5.2.10 Short interruptions of the supply voltage

Under normal operating conditions the annual occurrence of short interruptions of the supply voltage ranges from up to a few tens to up to several hundreds. The duration of approximately 70 % of the short interruptions may be less than one second.

5.2.11 Long interruptions of the supply voltage

Under normal operating conditions the annual frequency of accidental voltage interruptions longer than three minutes may be less than 10 or up to 50 depending on the area.

5.2.12 MI 2893/MI 2892/MI 2885 recorder setting for EN 50160 survey

MI 2893/MI 2892/MI 2885 is able to perform EN 50160 surveys on all values described in previous sections. In order to simplify procedure, MI 2893/MI 2892/MI 2885 has predefined recorder configuration (EN 50160) for it. By default, all current parameters (RMS, THD, etc.) are also included in survey, which can provide additional survey information. Additionally, during voltage quality survey user can simultaneously record other parameters too, such as power, energy and current harmonics.
In order to collect voltage events during recording, Include events option in recorder should be enabled. See section 3.21.2 for voltage events settings.

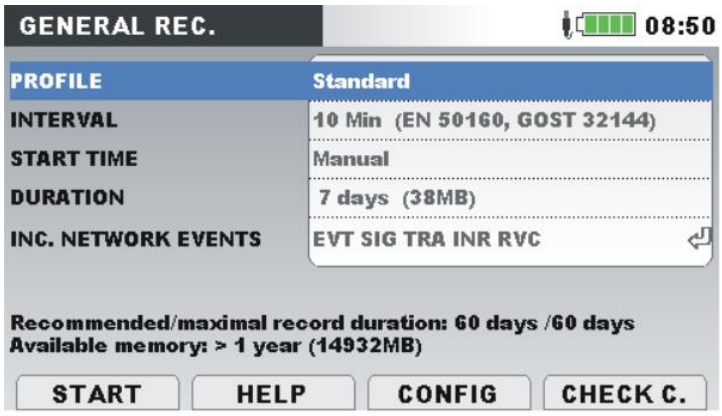

Figure 171: Predefined EN50160 recorder configuration

After recording is finished, EN 50160 survey is *performed* on PowerView v3.0 software. See PowerView v3.0 manual for details.

6 Technical specifications

6.1 General specifications

Working temperature range:	-20 °C ÷ +55 °C
Storage temperature range:	-20 °C ÷ +70 °C
Max. humidity:	5 ÷ 98 % RH (0 °C ÷ 40 °C), non-condensing
Pollution degree:	2
Protection classification:	Reinforced insulation
Measuring category - MI 2893	CAT IV / 600 V; For three phase connection CAT III / 1000 V; up to 3000 meters above sea level
Measuring category - MI 2892/MI 2885	CAT IV / 600 V; CAT III / 1000 V; up to 3000 meters above sea level
Protection degree:	IP 40
Dimensions:	23 cm x 14cm x 8 cm
Weight (with batteries): MI 2893	1.1 kg
Weight (with batteries): MI 2892/MI 2885	0.96 kg
Display:	Colour 4.3 TFT liquid crystal display (LCD) with backlight, 480 x 272 dots.
Memory:	8 GB microSD card provided, max. 32 GB supported
Batteries:	6 x 1.2 V NiMH rechargeable batteries type HR 6 (AA)
	Provide full operation for up to 5 hours*
External DC supply - charger:	100-240 V~, 50-60 Hz, 0.4 A~, CAT II 300 V 12 V DC, min 1.2 A
Maximum supply consumption: MI 2893	12 V / 410 mA – without batteries 12 V / 1.2 A – while charging batteries
Maximum supply consumption: MI 2892/MI 2885	12 V / 300 mA – without batteries 12 V / 1 A – while charging batteries
Battery charging time:	3 hours*
Communication:	USB 2.0 Standard USB Type B
	Ethernet 10Mb

* The charging time and the operating hours are given for batteries with a nominal capacity of 2400 mAh without display illumination and switching off the transient recorder during the powering via the batteries (valid for MI 2893).

6.2 Measurements

6.2.1 General description

Max. input voltage (Phase – Neutral): MI 2893	Three phase connection: 50 … 1000 V_{RMS} Phase connection: 50 … 500 V_{RMS}
Max. input voltage (Phase – Neutral): MI 2892/MI 2885	Three phase connection: 50 … 1000 V_{RMS}
Max. input voltage (Phase – Phase):	87 … 1730 V_{RMS}
Max. transient peak voltage	±6 kV
Max. transient peak current	Depends on used current clamps (check specification for current clamps)

	For transient detection use fixed current range.
Phase - Neutral input impedance: MI 2893	2.45 MΩ
Phase - Neutral input impedance: MI 2892/MI 2885	6 MΩ
Phase – Phase input impedance: MI 2893	2.45 MΩ
Phase – Phase input impedance: MI 2892/MI 2885	6 MΩ
AD converter	16 bit 8 channels, simultaneous sampling
Sampling frequency:	
50Hz / 60 Hz System frequency Antialiasing filter	7 kSamples/sec Passband (-3dB): 0 ÷ 3.4 kHz Stopband (-80dB): > 3,8 kHz
400 Hz System frequency Antialiasing filter	12,2 kSamples/sec Passband (-3dB): 0 ÷ 5,7kHz Stopband (-80dB): > 6,44 kHz
VFD -Variable Frequency Drive mode Antialiasing filter	1,7 kSamples/sec Passband (-3dB): 0 ÷ 782 Hz Stopband (-80dB): > 883 Hz
Transient mode Antialiasing filter (MI 2893)	1 MSamples/sec Passband (-3dB): 0 ÷ 600 kHz
Transient mode Antialiasing filter (MI 2892/MI 2885)	49 kSamples/sec Passband (-3dB): 0 ÷ 24 kHz Stopband (-80dB): > 26 kHz
Reference temperature	23 °C ± 2 °C
Temperature influence: MI 2893	35 ppm/°C
Temperature influence: MI 2892/MI 2885	30 ppm/°C

NOTE: Instrument has 3 internal voltage ranges. Range is chosen automatically, according to the chosen Nominal Voltage parameter. See tables below for details.

Nominal phase (L-N) voltage: U_{Nom}	Voltage range
50 V ÷ 136 V (L-N)	Range 1
137 V ÷ 374 V (L-N)	Range 2
375 V ÷ 1000 V (L-N)	Range 3

Nominal phase-to-phase (L-L) voltage: U_{Nom}	Voltage range
50 V ÷ 235 V (L-L)	Range 1
236 V ÷ 649 V (L-L)	Range 2
650V ÷ 1730 V (L-L)	Range 3

NOTE: Assure that all voltage clips are connected during measurement and logging period. Unconnected voltage clips are susceptible to EMI and can trigger false events. It is advisable to short them with instrument neutral voltage input.

6.2.2 Phase Voltages

10/12 cycle phase RMS voltage: U_{1Rms}, U_{2Rms}, U_{2Rms}, U_{NRms}, ***AC+DC***

Measuring Range	Resolution*	Accuracy	Nominal Voltage U_{NOM}
10% U_{NOM} ÷ 150% U_{NOM}	10 mV, 100mV	± 0.1 % · U_{NOM}	50 ÷ 1000 V (L-N)

* - depends on measured voltage

Half cycle RMS voltage (events, min, max): $U_{1Rms(1/2)}$, $U_{2Rms(1/2)}$, $U_{3Rms(1/2)}$, U_{1Min}, U_{2Min}, U_{3Min}, U_{1Max}, U_{2Max}, U_{3Max}, ***AC+DC***

Measuring Range	Resolution*	Accuracy	Nominal Voltage U_{NOM}
3% U_{NOM} ÷ 150% U_{NOM}	10 mV, 100mV	± 0.2 % · U_{NOM}	50 ÷ 1000 V (L-N)

* - depends on measured voltage

NOTE: Voltage events measurements are based on half cycle RMS voltage.

Crest factor: CF_{U1}, CF_{U2}, CF_{U3}, CF_{UN}

Measuring range	Resolution*	Accuracy
1.00 ÷ 2.50	0.01	± 5 % · CF_U

* - depends on measured voltage

Peak voltage: U_{1Pk}, U_{2Pk}, U_{3Pk}, ***AC+DC***

Measuring range		Resolution*	Accuracy
Range 1:	20.00 ÷ 255.0 Vpk	10 mV, 100 mV	± 0.5 % · U_{Pk}
Range 2:	50.0 V ÷ 510.0 Vpk	10 mV, 100 mV	± 0.5 % · U_{Pk}
Range 3:	200.0 V ÷ 2250.0 Vpk	100 mV, 1V	± 0.5 % · U_{Pk}

* - depends on measured voltage

6.2.3 Line voltages

10/12 cycle line to line RMS voltage: U_{12Rms}, U_{23Rms}, U_{31Rms}, ***AC+DC***

Measuring Range	Resolution*	Accuracy	Nominal Voltage range
10% UNOM ÷ 150% UNOM	10 mV, 100mV	± 0.1 % · U_{NOM} VFD mode: ± 1 % · U_{NOM}	50 ÷ 1730 V (L-L)

Half cycle RMS voltage (events, min, max): $U_{12Rms(1/2)}$, $U_{23Rms(1/2)}$, $U_{31Rms(1/2)}$, U_{12Min}, U_{23Min}, U_{31Min}, U_{12Max}, U_{23Max}, U_{31Max}, ***AC+DC***

Measuring Range	Resolution*	Accuracy	Nominal Voltage range
10% U_{NOM} ÷ 150% U_{NOM}	10 mV, 100mV	± 0.2 % · U_{NOM}	50 ÷ 1730 V (L-L)

Crest factor: CF_{U21}, CF_{U23}, CF_{U31}

Measuring range	Resolution	Accuracy
1.00 ÷ 2.50	0.01	± 5 % · CF_U

Peak voltage: U_{12Pk}, U_{23Pk}, U_{31Pk}, AC+DC

Measuring range		Resolution	Accuracy
Range 1:	20.00 ÷ 422 Vpk	10 mV, 100 mV	± 0.5 % · U_{Pk}
Range 2:	47.0 V ÷ 884.0 Vpk	10 mV, 100 mV	± 0.5 % · U_{Pk}
Range 3:	346.0 V ÷ 3700 Vpk	100 mV, 1 V	± 0.5 % · U_{Pk}

6.2.4 Current

Input impedance: 65 kΩ; MI 2893
Input impedance: 100 kΩ; MI 2892/MI 2885

10/12 cycle RMS current I_{1Rms}, I_{2Rms}, I_{3Rms}, I_{NRms}, AC+DC.

Clamps	Range	Measuring range	Overall current accuracy
A 1281	1000 A 100 A 5 A 0.5 A	100 A ÷ 1200 A 10 A ÷ 175 A 0.5 A ÷ 10 A 50 mA ÷ 1 A	±0.5 % · I_{RMS}
A 1588	50 A 5 A 0.5 A	5 A ÷ 100 A 0.5 A ÷ 10 A 50 mA ÷ 1 A	±0.5 % · I_{RMS}
A 1033	1000 A 100 A	20 A ÷ 1000 A 2 A ÷ 100 A	±1.3 % · I_{RMS}
A 1069	100 A 10 A	5 A ÷ 200 A 500 mA ÷ 20 A	±1.3 % · I_{RMS}
A 1391 PQA	100 A 10 A	5 A ÷ 200 A 500 mA ÷ 20 A	±1.3 % · I_{RMS}
A 1636	DC: 2000 A AC: 1000 A	40 A ÷ 2000 A 20 A ÷ 1000 A	±1.3 % · I_{RMS}
A 1227	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.5 % · I_{RMS}
A 1227 5M	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.5 % · I_{RMS}
A 1445	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.5 % · I_{RMS}
A 1582	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.5 % · I_{RMS}
A 1501	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.5 % · I_{RMS}
A 1502	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.5 % · I_{RMS}
A 1503	6000 A 600 A 60 A	600 A ÷ 12 000 A 60 A ÷ 1200 A 6 A ÷ 120 A	±1.5 % · I_{RMS}
A 1446	6000 A 600 A 60 A	600 A ÷ 12 000 A 60 A ÷ 1200 A 6 A ÷ 120 A	±1.5 % · I_{RMS}
A 1037	6 A 0.5 A	0.5 A ÷ 10 A 10 mA ÷ 10 A	±0.3 % · I_{RMS}

Note: Overall current accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps. Overall accuracy is calculated as:

$$OverallAccuracy = 1,15 \cdot \sqrt{InstrumentAccuracy^2 + ClampAccuracy^2}$$

Half cycle RMS current (inrush, min, max) $I_{1Rms(1/2)}$, $I_{2Rms(1/2)}$, $I_{3Rms(1/2)}$, $I_{NRms(1/2)}$, AC+DC

Clamps	Range	Measuring range	Overall current accuracy
A 1281	1000 A 100 A 5 A 0.5 A	100 A ÷ 1200 A 10 A ÷ 175 A 0.5 A ÷ 10 A 50 mA ÷ 1 A	±0.8 % · I_{RMS}
A 1588	50 A 5 A 0.5 A	5 A ÷ 100 A 0.5 A ÷ 10 A 50 mA ÷ 1 A	±0.8 % · I_{RMS}
A 1033	1000 A 100 A	20 A ÷ 1000 A 2 A ÷ 100 A	±1.3 % · I_{RMS}
A 1069	100 A 10 A	5 A ÷ 200 A 500 mA ÷ 20 A	±1.3 % · I_{RMS}
A 1391 PQA	100 A 10 A	5 A ÷ 200 A 500 mA ÷ 20 A	±1.5 % · I_{RMS}
A 1636	DC: 2000 A AC: 1000 A	40 A ÷ 2000 A 20 A ÷ 1000 A	±1.5 % · I_{RMS}
A 1227	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.6 % · I_{RMS}
A 1227 5M	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.6 % · I_{RMS}
A 1445	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.6 % · I_{RMS}
A 1582	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.6 % · I_{RMS}
A 1501	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.6 % · I_{RMS}
A 1502	3000 A 300 A 30 A	300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A	±1.6 % · I_{RMS}
A 1503	6000 A 600 A 60 A	600 A ÷ 12 000 A 60 A ÷ 1200 A 6 A ÷ 120 A	±1.6 % · I_{RMS}
A 1446	6000 A 600 A 60 A	600 A ÷ 12 000 A 60 A ÷ 1200 A 6 A ÷ 120 A	±1.6 % · I_{RMS}
A 1037	6 A 0.5 A	0.5 A ÷ 10 A 10 mA ÷ 10 A	±0.4 % · I_{RMS}

Note: Overall current accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps. Overall accuracy is calculated as:

$$OverallAccuracy = 1,15 \cdot \sqrt{InstrumentAccuracy^2 + ClampAccuracy^2}$$

Peak value I_{1Pk}, I_{2Pk}, I_{3Pk}, I_{NPk}, AC+DC

Measurement accessory		Peak value	Overall current accuracy
A 1281	1000 A 100 A 5 A 0.5 A	100 A ÷ 1700 A 10 A ÷ 250 A 0.5 A ÷ 14 A 50 mA ÷ 1.4 A	±0.8 % · I_{RMS}
A 1588	50 A 5 A 0.5 A	5 A ÷ 150 A 0.5 A ÷ 15 A 50 mA ÷ 1.5 A	±0.8 % · IRMS
A 1033	1000 A 100 A	20 A ÷ 1400 A 2 A ÷ 140 A	±1.3 % · I_{RMS}
A 1069	100 A 10 A	5 A ÷ 280 A 500 mA ÷ 28 A	±1.3 % · I_{RMS}
A 1391 PQA	100 A 10 A	5 A ÷ 280 A 500 mA ÷ 28 A	±1.5 % · I_{RMS}
A 1636	DC: 2000 A AC: 1000 A	40 A ÷ 2800 A 20 A ÷ 1400 A	±1.5 % · I_{RMS}
A 1227	3000 A 300 A 30 A	300 A ÷ 8500 A 30 A ÷ 850 A 3 A ÷ 85 A	±1.6 % · I_{RMS}
A 1227 5M	3000 A 300 A 30 A	300 A ÷ 8500 A 30 A ÷ 850 A 3 A ÷ 85 A	±1.6 % · I_{RMS}
A 1445	3000 A 300 A 30 A	300 A ÷ 8500 A 30 A ÷ 850 A 3 A ÷ 85 A	±1.6 % · I_{RMS}
A 1582	3000 A 300 A 30 A	300 A ÷ 8500 A 30 A ÷ 850 A 3 A ÷ 85 A	±1.6 % · I_{RMS}
A 1501	3000 A 300 A 30 A	300 A ÷ 8500 A 30 A ÷ 850 A 3 A ÷ 85 A	±1.6 % · I_{RMS}
A 1502	3000 A 300 A 30 A	300 A ÷ 8500 A 30 A ÷ 850 A 3 A ÷ 85 A	±1.6 % · I_{RMS}
A 1503	6000 A 600 A 60 A	600 A ÷ 17 000 A 60 A ÷ 1700 A 6 A ÷ 170 A	±1.6 % · I_{RMS}
A 1446	6000 A 600 A 60 A	600 A ÷ 17 000 A 60 A ÷ 1700 A 6 A ÷ 170 A	±1.6 % · I_{RMS}
A 1037	5 A 0.5 A	0.5 A ÷ 14 A 10 mA ÷ 1.4 A	±0.4 % · I_{RMS}

Note: Overall current accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps. Overall accuracy is calculated as:

$$OverallAccuracy = 1,15 \cdot \sqrt{InstrumentAccuracy^2 + ClampAccuracy^2}$$

Crest factor CF_{Ip} p: [1, 2, 3, 4, N], AC+DC

Measuring range	Resolution	Accuracy
1.00 ÷ 10.00	0.01	± 5 % · CF_I

Accuracy of 10/12 cycle RMS voltage measured on current input

Measuring range (Intrinsic instrument accuracy)	Accuracy
Range 1: 10.0 mV_{RMS} ÷ 300.0 mV_{RMS}	± 0.25 % · U_{RMS}
Range 2: 50.0 mV_{RMS} ÷ 3.000 V_{RMS}	

Measuring range	Accuracy	Crest factor
Range 1: 10.0 mV_{RMS} ÷ 150.0 mV_{RMS}	± 0.25 % · U_{RMS}	3.0
Range 2: 50.0 mV_{RMS} ÷ 1.500 V_{RMS}		

U_{RMS} – RMS voltage measured on current input

Accuracy of half cycle RMS voltage measured on current input

Measuring range (Intrinsic instrument accuracy)	Accuracy
Range 1: 10.0 mV_{RMS} ÷ 300.0 mV_{RMS}	± 0.5 % · U_{RMS}
Range 2: 50.0 mV_{RMS} ÷ 3.000 V_{RMS}	± 0.5 % · U_{RMS}

Measuring range (Intrinsic instrument accuracy)	Accuracy	Crest factor
Range 1: 10.0 mV_{RMS} ÷ 150.0 mV_{RMS}	± 0.5 % · U_{RMS}	3.0
Range 2: 50.0 mV_{RMS} ÷ 1.500 V_{RMS}	± 0.5 % · U_{RMS}	

6.2.5 Frequency

Measuring range	Resolution	Accuracy
50 Hz system frequency: 42.500 Hz ÷ 57.500 Hz 60 Hz system frequency: 51.000 Hz ÷ 69.000 Hz	1 mHz	± 10 mHz
400 Hz system frequency: 335.0 Hz ÷ 465.0 Hz	10 mHz	± 100 mHz

6.2.6 Flickers

Flicker type	Measuring range	Resolution	Accuracy*
P_{inst}	0.200 ÷ 10.000	0.001	± 5 % · P_{inst}
P_{st}	0.200 ÷ 10.000		± 5 % · P_{st}
P_{lt}	0.200 ÷ 10.000		± 5 % · P_{lt}

6.2.7 Transients

Type	Measuring range	Resolution	Accuracy
Voltage Transients	± 6 kV	5V	± 5 %
Current Transients	Depends on the selected current clamp		± 10 %

Note: Overall current transient accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps.

6.2.8 Combined power

Combined Power	Measuring range		Accuracy
Active power* (W) P_1, P_2, P_3, P_{tot}	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only)	±0.2 % · P
		With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A	±1.7 % · P
		With iron clamps A 1281 / 1000 A A 1588 / 150 A	±0.7 % · P
Nonactive power** (var) N_1, N_2, N_3, N_{tot}, Na_{tot}	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only)	±0.2 % · Q
		With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A	±1.7 % · Q
		With iron clamps A 1281 / 1000 A A 1588 / 150 A	±0.7 % · Q
Apparent power*** (VA) S_1, S_2, S_3, $Se_{tot,}$ Sv_{tot}, Sa_{tot}	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only)	±0.5 % · Q
		With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A	±1.8 % · S
		With iron clamps A 1281 / 1000 A A 1588 / 150 A	±0.8 % · S

**Accuracy values are valid if cos φ ≥0.80, I ≥10 % I_{Nom} and U ≥80 % U_{Nom}*
***Accuracy values are valid if sin φ ≥0.50, I ≥10 % I_{Nom} and U ≥80 % U_{Nom}*
****Accuracy values are valid if cos φ ≥0.50, I ≥10 % I_{Nom} and U ≥80 % U_{Nom}*

6.2.9 Fundamental power

Fundamental power	Measuring range		Accuracy
Active fundamental power* (W)	0.000 k ÷ 999.9 M	Excluding clamps (Instrument only)	±0.2 % · Pfund

$Pfund_1$, $Pfund_2$, $Pfund_3$, P^+_{tot}	4 digits	With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A	±1.7 % · Pfund
		With iron clamps A 1281 / 1000 A A 1588 / 150 A	±0.7 % · Pfund
Reactive fundamental power** (var) $Qfund_1$, $Qfund_2$, $Qfund_3$, Q^+_{tot}	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only)	±0.2 % · Qfund
		With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A	±1.7 % · Qfund
		With iron clamps A 1281 / 1000 A A 1588 / 150 A	±0.7 % · Qfund
Apparent fundamental power*** (VA) $Sfund_1$, $Sfund_2$, $Sfund_3$, S^+_{tot}	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only)	±0.2 % · Sfund
		With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A	±1.7 % · Sfund
		With iron clamps A 1281 / 1000 A A 1588 / 150 A	±0.7 % · Sfund

**Accuracy values are valid if cos φ ≥0.80, I ≥10 % I_{Nom} and U ≥80 % U_{Nom}*
***Accuracy values are valid if sin φ ≥0.50, I ≥10 % I_{Nom} and U ≥80 % U_{Nom}*
****Accuracy values are valid if cos φ ≥0.50, I ≥10 % I_{Nom} and U ≥80 % U_{Nom}*

6.2.10Nonfundamental power

Nonfundamental power	Measuring range	Conditions	Accuracy
Active harmonic power* (W) Ph_1, Ph_2, Ph_3, Ph_{tot}	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only) Ph > 1% · P	±1.0% · Ph

Current distortion power* (var) D_{I1}, D_{I2}, D_{I3}, De_I,	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only) $D_I > 1\% \cdot S$	±2.0 % · D_I
Voltage distortion power* (var) D_{V1}, D_{V2}, D_{V3}, De_V	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only) $D_V > 1\% \cdot S$	±2.0 % · D_V
Harmonics distortion power* (var) D_{H1}, D_{H2}, D_{H3},De_H	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only) $D_H > 1\% \cdot S$	±2.0 % · D_H
Apparent nonfundamental power* (VA) S_{N1}, S_{N2}, S_{N3},Se_N	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only) $S_N > 1\% \cdot S$	±1.0 % · S_N
Apparent harmonic power* (VA) S_{H1}, S_{H2}, S_{H3},Se_H	0.000 k ÷ 999.9 M 4 digits	Excluding clamps (Instrument only) $S_H > 1\% \cdot S$	±2.0% · S_H

**Accuracy values are valid if $I \geq 10\ \%\ I_{Nom}$ and $U \geq 80\ \%\ U_{Nom}$*

6.2.11 Power factor (PF, PFe, PFv, PFa)

Measuring range	Resolution	Accuracy
-1.00 ÷ 1.00	0.01	± 0.02

6.2.12 Displacement factor (DPF) or Cos ϕ)

Measuring range	Resolution	Accuracy
-1.00 ÷ 1.00	0.01	± 0.02

6.2.13 Energy

		Measuring range (kWh, kvarh, kVAh)	Resolution	Accuracy
energy	Excluding clamps (Instrument only)	000,000,000.001 ÷ 999,999,999.999	12 digits	±0.5 % · Ep

	With A 1227/A 1445/A 1446/A 1501/A 1502/A 1503 Flex clamps	000,000,000.001 ÷ 999,999,999.999		±1.8 % · Ep
	With A 1281/A 1588 Multirange iron clamps	000,000,000.001 ÷ 999,999,999.999		±0.8 % · Ep
	With A 1033 1000 A	000,000,000.001 ÷ 999,999,999.999		±1.6 % · Ep
Reactive energy Eq**	Excluding clamps (Instrument only)	000,000,000.001 ÷ 999,999,999.999	12 digits	±0.5 % · Eq
	With A 1227/A 1445/A 1446/A 1501/A 1502/A 1503 Flex clamps	000,000,000.001 ÷ 999,999,999.999		±1.8 % · Eq
	With A 1281/A 1588 Multirange clamps	000,000,000.001 ÷ 999,999,999.999		±0.8 % · Eq
	With A 1033 1000 A	000,000,000.001 ÷ 999,999,999.999		±1.6 % · Eq

**Accuracy values are valid if cos φ ≥ 0.80, I ≥ 10 % I_{Nom} and U ≥ 80 % U_{Nom}*
***Accuracy values are valid if sin φ ≥ 0.50, I ≥ 10 % I_{Nom} and U ≥ 80 % U_{Nom}*

6.2.14Voltage harmonics and THD

Measuring range	Harmonic component N	System freqency	Resolution	Accuracy
Uh_N < 1 % U_{Nom}	0 ÷ 50th	50/60Hz	10 mV	± 0.05 % · U_{Nom}
1 % U_{Nom} < Uh_N < 20 % U_{Nom}			10 mV	± 5 % · Uh_N
Uh_N < 1 % U_{Nom}	0 ÷ 13th	400Hz	10 mV	± 0.05 % · U_{Nom}
1 % U_{Nom} < Uh_N < 20 % U_{Nom}			10 mV	± 5 % · Uh_N
Uh_N < 1 % U_{Nom}	0 ÷ 20th (1) 0 ÷ 13 th (2) 0 ÷ 5 th (3)	VFD*	10 mV	± 0.2% · U_{Nom}
1 % U_{Nom} < Uh_N < 20 % U_{Nom}			10 mV	± 5 % · Uh_N

U_{Nom}: Nominal voltage (RMS)
Uh_N: measured harmonic voltage
$_N$: harmonic component
(1): If fundamental voltage frequency is within 5÷16Hz range
(2): If fundamental voltage frequency is within 16÷33Hz range
(3): If fundamental voltage frequency is within 33 ÷ 120Hz

Measuring range	Resolution	Accuracy
0 % U_{Nom} < THD_U < 20 % U_{Nom}	0.1 %	± 0.3

U_{Nom}: nominal voltage (RMS)

6.2.15 Current harmonics, THD and k-factor

Measuring range	Harmonic component N	System freqency	Resolution	Accuracy

Ih_N < 10 % I_{Nom}	0 ÷ 50th	50/60Hz	10 mV	± 0.15 % · I_{Nom}
10 % I_{Nom} < Ih_N < 100 %			10 mV	± 5 % · Ih_N
Ih_N < 10 % I_{Nom}	0 ÷ 13th	400Hz	10 mV	± 0.15 % · I_{Nom}
10 % I_{Nom} < Ih_N < 100 %			10 mV	± 5 % · Ih_N
Ih_N < 10 % I_{Nom}	0 ÷ 20th (1) 0 ÷ 13 th (2) 0 ÷ 5 th (3)	VFD*	10 mV	± 0.2 % · I_{Nom}
10 % I_{Nom} < Ih_N < 100 %			10 mV	± 5 % · Ih_N

I_{Nom}: Nominal voltage (RMS)
Ih_N: measured harmonic current
$_N$: harmonic component
(1): If fundamental voltage frequency is within 5÷16Hz range
(2): If fundamental voltage frequency is within 16÷33Hz range
(3): If fundamental voltage frequency is within 33 ÷ 120Hz

Measuring range	Resolution	Accuracy
0 % I_{Nom} < THD_I < 100 % I_{Nom}	0.1 %	± 0.6
100 % I_{Nom} < THD_I < 200 % I_{Nom}	0.1 %	± 0.3

I_{Nom}: Nominal current (RMS)

Measuring range	Resolution	Accuracy
0 < k < 200	0.1	± 0.6

6.2.16 Voltage interharmonics

Measuring range	Harmonic component N	System freqency	Resolution	Accuracy
Uih_N < 1 % U_{Nom}	0 ÷ 50th	50/60Hz	10 mV	± 0.05 % · U_{Nom}
1 % U_{Nom} < Uih_N < 20 % U_{Nom}			10 mV	± 5 % · Uh_N
Uih_N < 1 % U_{Nom}	0 ÷ 20th (1) 0 ÷ 13 th (2) 0 ÷ 5 th (3)	VFD*	10 mV	± 0.2 % · U_{Nom}
1 % U_{Nom} < Uih_N < 20 % U_{Nom}			10 mV	± 5 % · Uh_N

U_{Nom}: Nominal voltage (RMS)
Uih_N: measured harmonic voltage
$_N$: interharmonic component
(1): If fundamental voltage frequency is within 5÷16Hz range
(2): If fundamental voltage frequency is within 16÷33Hz range
(3): If fundamental voltage frequency is within 33 ÷ 120Hz

6.2.17 Current interharmonics

Measuring range	Harmonic component N	System freqency	Resolution	Accuracy
Iih_N < 10 % I_{Nom}	0 ÷ 50th	50/60Hz	10 mV	± 0.15 % · I_{Nom}
10 % I_{Nom} < Iih_N < 100 %			10 mV	± 5 % · Iih_N
Iih_N < 10 % I_{Nom}	0 ÷ 20th (1) 0 ÷ 13 th (2) 0 ÷ 5 th (3)	VFD*	10 mV	± 0.2 % · I_{Nom}
10 % I_{Nom} < Iih_N < 100 %			10 mV	± 5 % · Iih_N

I_{Nom}: Nominal current (RMS)
Iih_N: measured interharmonic current
$_N$: interharmonic component 0th ÷ 50th
(1): If fundamental voltage frequency is within 5÷16Hz range

(2): If fundamental voltage frequency is within 16÷33Hz range
(3): If fundamental voltage frequency is within 33 ÷ 120Hz

6.2.18 Signalling

Measuring range	Resolution	Accuracy
1 % U_{Nom} < U_{Sig} < 3 % U_{Nom}	10 mV	± 0.15 % · U_{Nom}
3 % U_{Nom} < U_{Sig} < 20 % U_{Nom}	10 mV	± 5 % · U_{Sig}

U_{Nom}: Nominal current (RMS)
U_{Sig}: Measured signalling voltage

6.2.19 Unbalance

	Unbalance range	Resolution	Accuracy
u^-	0.5 % ÷ 5.0 %	0.1 %	± 0.15 %
u^0			± 0.15 %
i^-	0.0 % ÷ 20 %	0.1 %	± 1 %
i^0			± 1 %

6.2.20 Overdeviation and Underdeviation

	Measuring range	Resolution	Accuracy
U_{Over}	0 ÷ 50 % U_{Nom}	0.001 %	± 0.1 % U_{Nom}
U_{Under}	0 ÷ 90 % U_{Nom}	0.001 %	± 0.1 % U_{Nom}

6.2.21 Time and duration uncertainty

Standard compliance: IEC 61000-4-30 Class A (Section 4.6)

Real time clock (RTC) temperature uncertainty

Operating range	Accuracy	
-20 °C ÷ 70 °C	± 3.5 ppm	0.3 s/day
0 °C ÷ 40 °C	± 2.0 ppm	0.17 s/day

Real time clock (GPS) temperature uncertainty

Operating range	Accuracy
-20 °C ÷ 70 °C	± 2 ms / indefinitely long

Event duration and recorder time-stamp and uncertainty

	Measuring Range	Resolution	Error
Event Duration	10 ms ÷ 7 days	1 ms	± 1 cycle
Record and Event Time stamp	N/A	1 ms	± 1 cycle

6.2.22 Temperature probe

Measuring range	Resolution	Accuracy
-10.0 °C ÷ 85.0 °C	0.1 °C	± 0.5°C
-20.0 °C ÷ -10.0 °C and 85.0 °C ÷ 125.0 °C		± 2.0°C

6.2.23 Phase angle

Measuring range	Resolution	Accuracy
-180.0° ÷ 180.0°	0.1°	± 0.6°

6.2.24 400Hz systems specification

Sampling frequency:	Normal operation Antialiasing filter	12,2 kSamples/sec Passband (-3dB): 0 ÷ 5,7kHz Stopband (-80dB): > 6,44 kHz
Cycle aggregation:	50 cycles	

6.2.25 VFD (Variable frequency drive) systems specification

Sampling frequency:	Normal operation Antialiasing filter	1,7 kSamples/sec Passband (-3dB): 0 ÷ 782 Hz Stopband (-80dB): > 883 Hz
Cycle aggregation:	5 cycles	

6.2.26 Differences in specification between 400Hz, VFD and 50/60 Hz systems

Measurement / Recording	400Hz	VFD	50 Hz / 60Hz
Voltage	•(1)	•(1)	•
Current	•(1)	•(1)	•
Frequency	335 Hz ÷ 465 Hz	5 Hz ÷ 120 Hz	•
Power	•(1)	•(1)	•
Energy	•(1)	•(1)	•
Unbalance	•(1)	•(1)	•
Flicker	-	-	•
THD	•	•	•
Voltage Harmonics	0 ÷ 13th	0 ÷ 20th (3)	0 ÷ 50th
Current Harmonics	0 ÷ 13th	0 ÷ 20th (3)	0 ÷ 50th
Voltage Interharmonics	-	0 ÷ 20th (3)	1 ÷ 50th
Current Interharmonics	-	0 ÷ 20th	1 ÷ 50th
Events	•(1)	•(1)	•
RVC - Rapid Voltage Changes	-	•(1)	•
Signalling	-	-	•
Network Configurations	•(1)	•(1)	•
General recorder	•(1)	•(1)	•
Waveform / inrush recorder	•(1)	•(1)	•
Transient recorder	•(1)	•(1)	•
Waveform Snapshot	•(1)	•(1)	•
Cycle aggregation	50 cycles	5 cycles	10/12 cycles

(1) Identical technical specification (accuracy, measurement ranges, etc) as on 50Hz/60Hz systems

(2) On 3-phase 4-wire systems measurement are performed on 3 voltage and 4 current channels, channel $U_{N\text{-}GND}$ is not used.

(3) Number of harmonics depends on voltage/current frequency 5÷16Hz – 20 harmonics, 16÷33Hz 13 harmonics, 33 ÷ 120Hz 5 harmonics

6.3 Recorders

6.3.1 General recorder

Sampling	According to the IEC 61000-4-30 Class A requirements. The basic measurement time interval for voltage, harmonics, interharmonics and unbalance is 10-cycle time interval for a 50 Hz power system and 12-cycle time interval for a 60 Hz power system. Instrument provides approximately 3 readings per second, continuous sampling. All channels are sampled simultaneously. For harmonics measurement input samples are resampled, in order to assure that sampling frequency is continuously synchronized with main frequency.
Recording quantities	Voltage, current, frequency, crest factors, power, energy, 50 harmonics, 50 interharmonics, flickers, signalling, unbalance, under and over deviation. See section 4.4 for details which minimum, maximum, average and active average values are stored for each parameter.
Recording interval	1 s, 3 s (150 / 180 cycles), 5 s, 10 s, 1 min, 2 min, 5 min, 10 min, 15 min, 30 min, 60 min, 120 min.
Events	All events, without limitation can be stored into record.
Alarms	All alarms, without limitation can be stored into record.
Signalling	Signalling events, without limitation can be stored into record.
Transients (MI 2893 only)	Transients, without limitation can be stored into record. MI 2893 only; MI 2892/MI 2885 have realized transient recorder as independent recorder.
Inrush	Inrush currents, without limitation can be stored into record.
RVC	RVC, without limitation can be stored into record.
200 ms U/I/f	200 ms U/I/f Snapshot can be stored into record (every 60 minutes).
Trigger	Predefined start time or manual start.

Note: If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down and after electricity comes back, it will automatically restart recording session.

Table 140: General recording max. duration

Recording interval	Max. record duration*
1 s	12 hours
3 s (150 / 180 cycles)	2 days
5 s	3 days
10 s	7 days
1 min	30 days
2 min	60 days
5 min	> 60 days
10 min	
15 min	
30 min	
60 min	
120 min	

*At least 2 GB of free space should be available on microSD card.

Note: Recorder file size is limited to 2 GB due to the FAT32 SD card foramtting.

6.3.2 Waveform/inrush recorder

Sampling	7 kSamples/s, continuous sampling per channel. All channels are sampled simultaneously.
Recording time	From 1 sec to 60 seconds.
Recording type	**Continuous** – consecutive waveform recording until user stops the measurement or instrument runs out of storage memory. Max. 1500 records can be stored per session. Default setting is 200 records, more than 200 records can slow down the instrument.
Recording quantities	Waveform samples of: U_1, U_2, U_3, U_N, (U_{12}, U_{23}, U_{31}), I_1, I_2, I_3, I_N
Trigger	Voltage or current level, voltage events, alarms defined in alarm table or manual trigger.

6.3.3 Waveform snapshot

Sampling	7 kSamples/s, continuous sampling per channel. All channels are sampled simultaneously.
Recording time	10/12 cycle period.
Recording quantities	Waveform samples of: U_1, U_2, U_3, U_N, (U_{12}, U_{23}, U_{31}), I_1, I_2, I_3, I_N, all measurements.
Trigger	Manual; every 60 minutes if option is selected in General recorder; at Start/End of General recorder

6.3.4 Transients recorder

Sampling	**MI 2893**: 1 MSamples/s, continuous sampling per channel. All channels are sampled simultaneously. **MI 2892/MI 2885**: 49 kSamples/s, continuous sampling per channel. All channels are sampled simultaneously.
Recording time	**MI 2893**: One cycle period. **MI 2892/MI 2885**: programmable Pretrigger/Duration... up to 50 periods max.
Recording quantities	Waveform samples of: U_1, U_2, U_3, U_N, (U_{12}, U_{23}, U_{31}), I_1, I_2, I_3, I_N
Trigger:	**MI 2893:** Transient selection measurement between N/GND Envelope and level trigger simultaneously- for details see section 5.1.20 **MI 2892/MI 2885**: Transient measurements related to Neutral line; single trigger selection only.

6.4 Standards compliance

6.4.1 Compliance to the IEC 61557-12

General and essential characteristics

Power quality assessment function	-A	
Classification according to 4.3	SD	Indirect current and direct voltage measurement
	SS	Indirect current and indirect voltage measurement
Temperature	K50	
Humidity + altitude	Standard	

Measurement characteristics

Function symbols	Class according to IEC 61557-12	Measuring range
P	1	2 % ÷ 200% I_{Nom} (1)
Q	1	2 % ÷ 200% I_{Nom} (1)
S	1	2 % ÷ 200% I_{Nom} (1)
Ep	1	2 % ÷ 200% I_{Nom} (1)
Eq	2	2 % ÷ 200% I_{Nom} (1)
eS	1	2 % ÷ 200% I_{Nom} (1)
PF	0.5	- 1 ÷ 1
I, I_{Nom}	0.2	2 % I_{Nom} ÷ 200 % I_{Nom}
Ih_n	1	0 % ÷ 100 % I_{Nom}
THD_i	2	0 % ÷ 100 % I_{Nom}

(1) – Nominal current depends on current sensor.

6.4.2 Compliance to the to the IEC 61000-4-30

IEC 61000-4-30 Section and Parameter	**MI 2893/MI 2892** Measurement	Class
4.4 Aggregation of measurements in time intervals* • aggregated over 150/180-cycle • aggregated over 10 min • aggregated over 2 h	Timestamp, Duration	A
4.6 Real time clock (RTC) uncertainty		A
4.7 Flagging		A
5.1 Frequency	Freq	A
5.2 Magnitude of the Supply	U	A
5.3 Flicker	P_{st}, P_{lt}	A
5.4 Dips and Swells	U_{Dip}, U_{Swell}, duration	A
5.5 Interruptions	duration	A
5.7 Unbalance	u^-, u^0	A
5.8 Voltage Harmonics	$Uh_{0÷50}$	A
5.9 Voltage Interharmonics	$Uih_{0÷50}$	A
5.10 Mains signalling voltage	U_{Sig}	A
5.12 Underdeviation and overdeviation	U_{Under}, U_{Over}	A

IEC 61000-4-30 Section and Parameter	**MI 2885** Measurement	Class
4.4 Aggregation of measurements in time intervals* • aggregated over 150/180-cycle • aggregated over 10 min • aggregated over 2 h	Timestamp, Duration	A
4.6 Real time clock (RTC) uncertainty		A
4.7 Flagging		A
5.1 Frequency	Freq	A
5.2 Magnitude of the Supply	U	S
5.3 Flicker	P_{st}, P_{lt}	A
5.4 Dips and Swells	U_{Dip}, U_{Swell}, duration	S
5.5 Interruptions	duration	S
5.7 Unbalance	u^-, u^0	S
5.8 Voltage Harmonics	$Uh_{0÷50}$	S
5.9 Voltage Interharmonics	$Uih_{0÷50}$	S
5.10 Mains signalling voltage	U_{Sig}	S
5.12 Underdeviation and overdeviation	U_{Under}, U_{Over}	A

* Instrument aggregate measurement according to selected Interval: parameter in GENERAL RECORDER. Aggregated measurements are shown in TREND screens, only if GENERAL RECORDER is active.

7 Maintenance

7.1 Inserting batteries into the instrument

1. Make sure that the power supply adapter/charger and measurement leads are disconnected and the instrument is switched off before opening battery compartment cover.
2. Insert batteries as shown in figure below (insert batteries correctly, otherwise the instrument will not operate and the batteries could be discharged or damaged).

Figure 172: Battery compartment

1	Battery cells
2	Serial number label

3. Turn the instrument upside down (*see figure below*) and put the cover on the batteries.

Figure 173: Closing the battery compartment cover

4. Screw the cover on the instrument.

⚠ **Warnings!**

- **Hazardous voltages exist inside the instrument. Disconnect all test leads, remove the power supply cable and turn off the instrument before removing battery compartment cover.**
- **Use only power supply adapter/charger delivered from manufacturer or distributor of the equipment to avoid possible fire or electric shock.**
- **Do not use standard batteries while power supply adapter/charger is connected, otherwise they may explode!**
- **Do not mix batteries of different types, brands, ages, or charge levels.**
- **When charging batteries for the first time, make sure to charge batteries for at least 24 hours before switching on the instrument.**

Notes:

- Rechargeable NiMH batteries, type HR 6 (size AA), are recommended. The charging time and the operating hours are given for batteries with a nominal capacity of 2400 mAh.
- If the instrument is not going to be used for a long period of time remove all batteries from the battery compartment. The enclosed batteries can supply the instrument for approx. 5 hours.

7.2 Batteries

Instrument contains rechargeable NiMH batteries. These batteries should only be replaced with the same type as defined on the battery placement label or in this manual.

If it is necessary to replace batteries, all six have to be replaced. Ensure that the batteries are inserted with the correct polarity; incorrect polarity can damage the batteries and/or the instrument.

Precautions on charging new batteries or batteries unused for a longer period

Unpredictable chemical processes can occur during charging new batteries or batteries that were unused for a longer period of time (more than 3 months). NiMH and NiCd batteries are affected to a various degree (sometimes called as memory effect). As a result, the instrument operation time can be significantly reduced at the initial charging/discharging cycles.

Therefore, it is recommended:

- To completely charge the batteries

- To completely discharge the batteries (can be performed with normal working with the instrument).
- Repeating the charge/discharge cycle for at least two times (four cycles are recommended).

When using external intelligent battery chargers one complete discharging /charging cycle is performed automatically.

After performing this procedure, a normal battery capacity is restored. The operation time of the instrument now meets the data in the technical specifications.

Notes:
The charger in the instrument is a pack cell charger. This means that the batteries are connected in series during the charging so all batteries have to be in similar state (similarly charged, same type and age).
Even one deteriorated battery (or just of another type) can cause an improper charging of the entire battery pack (heating of the battery pack, significantly decreased operation time).

If no improvement is achieved after performing several charging/discharging cycles the state of individual batteries should be determined (by comparing battery voltages, checking them in a cell charger etc). It is very likely that only some of the batteries are deteriorated.

The effects described above should not be mixed with normal battery capacity decrease over time. All charging batteries lose some of their capacity when repeatedly charged/discharged. The actual decrease of capacity versus number of charging cycles depends on battery type and is provided in the technical specification of batteries provided by battery manufacturer.

7.3 Firmware upgrade

Metrel as manufacturer is constantly adding new features and enhance existing. In order to get most of your instrument, we recommend periodic check for software and firmware updates. In this section firmware upgrade process is described.

7.3.1 Requirements

Firmware upgrade process has following requirements:

- **PC computer** with installed latest version of PowerView software. If your PowerView is out of date, please update it, by clicking on “Check for PowerView updates” in Help menu, and follow the instructions
- **USB cable**

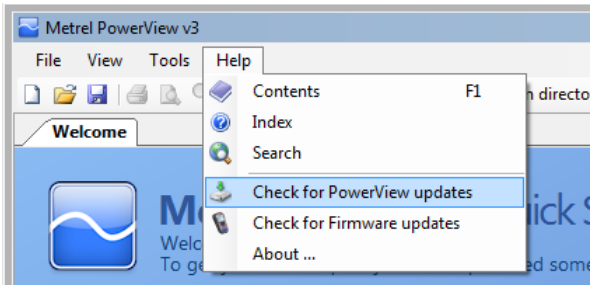

Figure 174: PowerView update function

7.3.2 Upgrade procedure

1. Connect PC and instrument with USB cable

2. Establish USB communication between them. In PowerView, go to Tools→Options menu and set USB connection as shown on figure below.

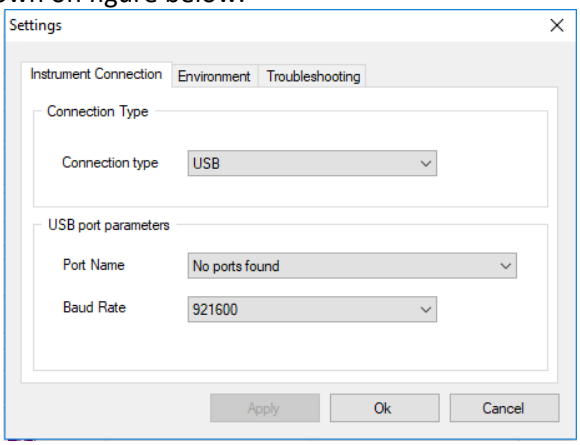

Figure 175: Selecting USB communication

3. Click on Help → Check for Firmware updates.

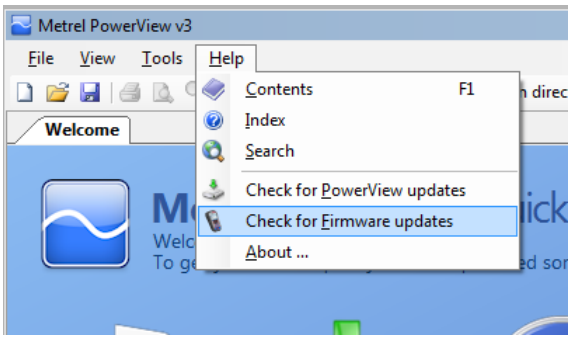

Figure 176: Check for Firmware menu

4. Version checker window will appear on the screen. Click on Start button.

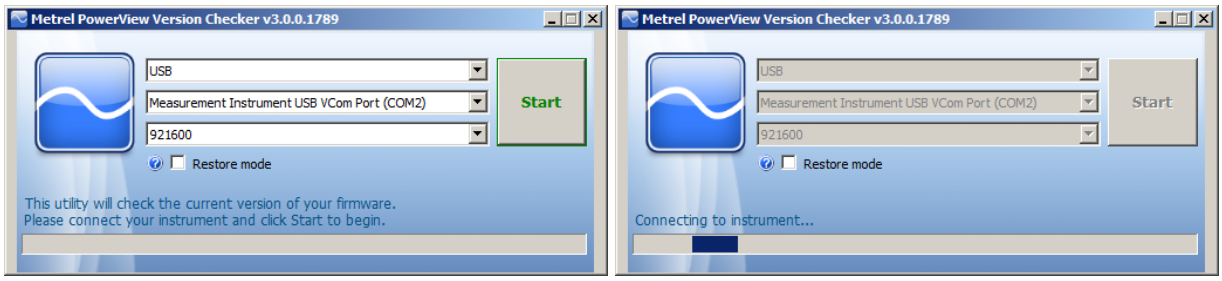

Figure 177: Check for Firmware menu

5. If your instrument has older FW, PowerView will notify you that new version of FW is available. Click on Yes to proceed.

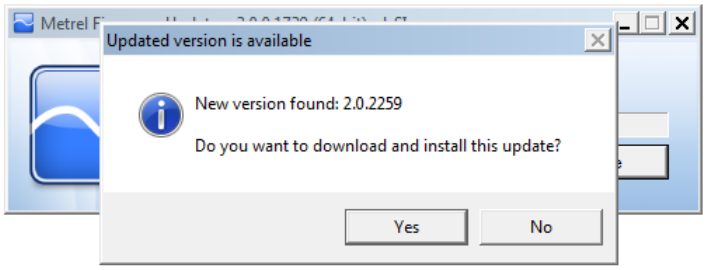

Figure 178: New firmware is available for download

6. After update is downloaded, FlashMe application will be launched. This application will actually upgrade instrument FW. Click on RUN to proceed.

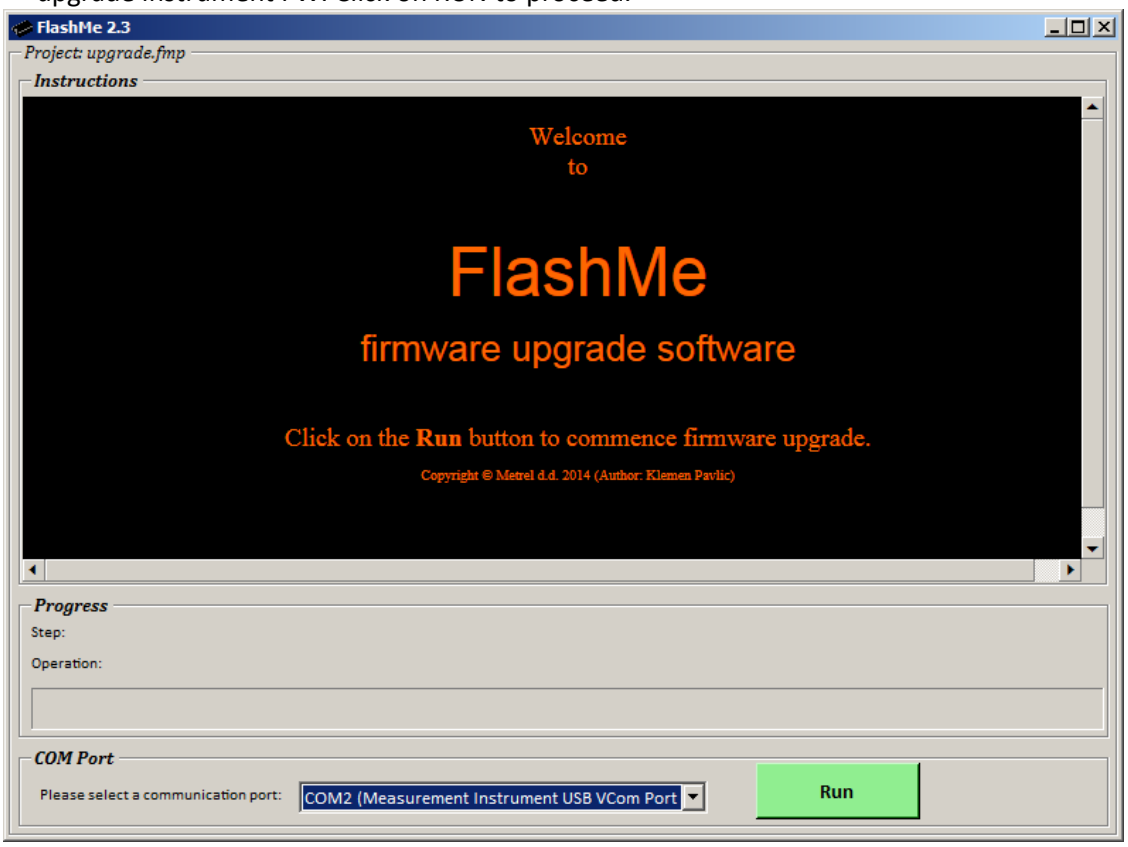

Figure 179: FlashMe firmware upgrade software

7. FlashMe will automatically detect MI 2893/MI 2892/MI 2885 instrument, which can be seen in COM port selection menu. In some rare cases user should point FlashMe manually to COM port where instrument is connected. Click then on Continue to proceed.

Figure 180: FlashMe configuration screen

8. Instrument upgrade process should begin. Please wait until all steps are finished. Note that this step should not be interrupted; as instrument will not work properly. If upgrade process goes wrong, please contact your distributor or Metrel directly. We will help you to resolve issue and recover instrument.

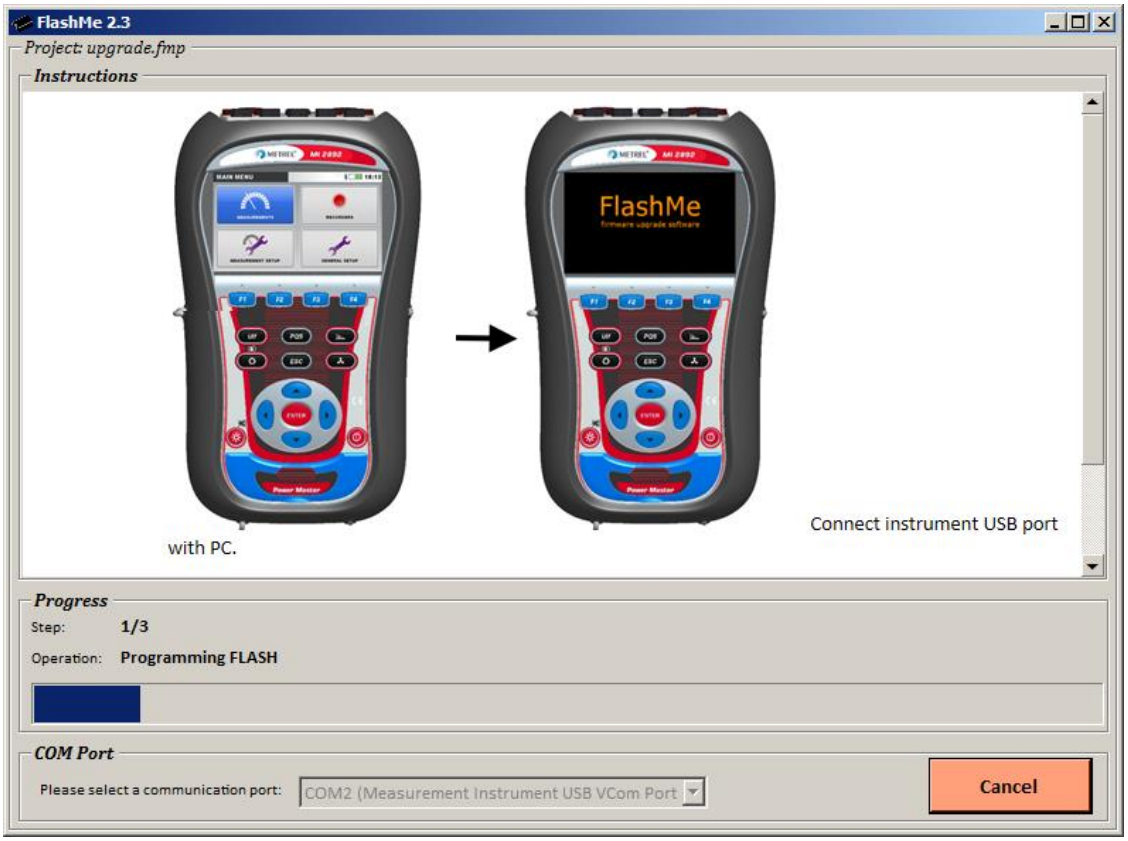

Figure 181: FlashMe programming screen

7.4 Power supply considerations

⚠ **Warnings**

- **Use only charger supplied by manufacturer.**
- **Disconnect power supply adapter if you use standard (non-rechargeable) batteries.**

When using the original power supply adapter/charger the instrument is fully operational immediately after switching it on. The batteries are charged at the same time, nominal charging time is 3.5 hours. The batteries are charged whenever the power supply adapter/charger is connected to the instrument. Inbuilt protection circuit controls the charging procedure and assure maximal battery lifetime. Batteries will be charged only if their temperature is less than 40 ^{0}C.
If the instrument is left without batteries and charger for more than 2 minutes, time and date settings are reset.

7.5 Cleaning

To clean the surface of the instrument, use a soft cloth slightly moistened with soapy water or alcohol. Then leave the instrument to dry totally before use.

⚠ **Warnings**

- **Do not use liquids based on petrol or hydrocarbons!**
- **Do not spill cleaning liquid over the instrument!**

7.6 Periodic calibration

To ensure correct measurement, it is essential that the instrument is regularly calibrated. If used continuously on a daily basis, a six-month calibration period is recommended, otherwise annual calibration is sufficient.

7.7 Service

For repairs under or out of warranty please contact your distributor for further information.

7.8 Troubleshooting

If *ESC* button is pressed while switching on the instrument, the instrument will not start. Batteries have to be removed and inserted back. After that the instrument will start normally.

8 Version of document

#	Document version	Description of changes
1	1.1.1	- First official version

Manufacturer address:

METREL d.d.
Ljubljanska 77,
SI-1354 Horjul,
Slovenia

Tel: +(386) 1 75 58 200
Fax: +(386) 1 75 49 095
Email: metrel@metrel.si
http://www.metrel.si