


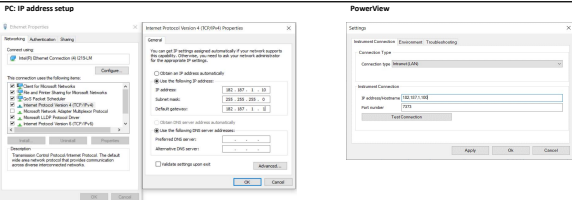
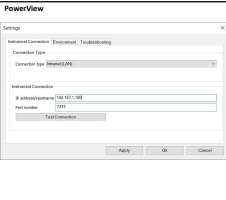
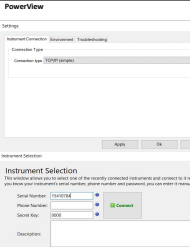



Comparison of data transfer times for MI 2885, MI 2892 and MI 2893

<p>Recorder file - 1 minute 342 MB 5 days 21h 40 min (enormous large amount of data)</p>	<p>Time needed</p>		
<p>Direct download from SD card</p>	<p>approx. 7 minutes</p>		
	<p>approx. 18 minutes</p>	<p>QQA setup</p> <pre> COMMUNICATION 09:00 PC connection INTRANET (LAN) Com Port (P#2) GPS BICP Enabled Port Number 7772 MAC address 1E:50:2E:6B:00:00 Instrument host name MI2892_16410784 IP address 192.168.1.193 </pre>	<p>PowerView setup</p> 
<p>LAN via Ethernet; router (direct) - pingable PQA from the PC For local LAN connection!!!!</p>	<p>approx. 31 minutes</p>	<p>QQA setup (IP address is obtained automatically from the system)</p> <pre> COMMUNICATION 09:13 PC connection INTRANET (LAN) Com Port (P#2) GPS BICP Enabled Port Number 7772 MAC address 1E:50:2E:6B:00:00 Instrument host name MI2892_16410784 IP address 192.168.1.193 </pre>	<p>PowerView setup</p> 
<p>PC -> Ethernet; pingable PQA from the PC</p>	<p>approx. 33 minutes</p>	<p>QQA setup (IP address should be entered manually)</p> <pre> COMMUNICATION 09:23 PC connection INTRANET (LAN) Com Port (P#2) GPS BICP Disabled Port Number 7772 MAC address 1E:50:2E:6B:00:00 Instrument host name MI2892_16410784 IP address 192.168.1.193 </pre>	<p>PC IP address setup</p>  <p>PowerView</p> 
<p>LAN via Metrel server</p>	<p>approx. 1 hour</p>	<p>QQA setup (IP address is obtained automatically from the system)</p> <pre> COMMUNICATION 09:37 PC connection INTERNET Com Port (P#2) GPS Secret key 0000 MAC address 1E:50:2E:6B:00:00 Instrument host name MI2892_16410784 IP address / S/N 172.21.11.131 / 16410784 </pre>	<p>PowerView</p>  <p>Instrument Selection</p> 
<p>GPS (Metrel server)</p>	<p>more than 4 hours</p>	<p>QQA setup (IP address is obtained automatically from the smodem)</p> <pre> COMMUNICATION 10:00 PC connection INTERNET (G/GPS/S) Com Port (P#2) GPS Secret key 0000 Modem used in A1566 MAC address 1E:F4:8A:F9:00:00 Instrument host name MI2893_16280308 IP address / S/N 192.168.1.178 / 16280308 </pre>	<p>PowerView setup</p> 